

品牌

2023.05.10  
V1.0 首次创建

 
2023.08.28  
V2.0 首次创建

psync


QUICK START

GUIDE


**IN THE BOX**



Psync Camera  
Genie S × 1

 

USB Cable × 1

 

Power Adapter × 1



Quick Start Guide × 1

Disclaimer: The products, accessories, user interfaces, etc. illustrated in this guide are intended for reference only. Due to product updates, the actual products and illustrations in this guide may vary.

1



2



3



4



5



6



7



**FRONT**

**BACK**

**SETUP**

 
➤ Scan the QR code below to download Psync app and create an account.



➤ Connect the camera to a power outlet.


Wait 15 seconds.

Light indicator will flash red and the camera will open to an upright position.

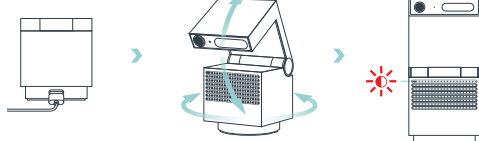

➤ Press and hold the setup button for two seconds.

 Wait for voice prompt




➤ Follow the on-screen app instructions.

Tap "⊕"

Tap to select camera

 Follow the instructions

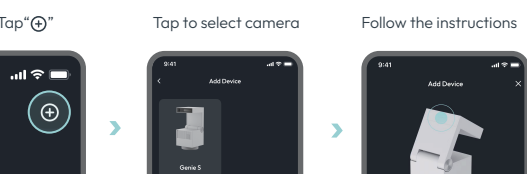

psync

**LIGHT INDICATORS DURING INSTALLATION**

-  **Solid red light**  
The device is powered on and initializing.
-  **Flashing red light**  
The device is ready to connect and Bluetooth is ready to pair.
-  **Flashing blue light**  
Bluetooth is connected and the device is connecting to the network.
-  **Solid blue light**  
The device is working properly.

**LIGHT INDICATORS AFTER SETUP**

-  **Flashing blue light**  
The device is connecting to the network and server.
-  **Solid blue light**  
The device is working properly.

**FCC WARNING:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with part 15 of the FCC Rules. (Aperation is subject to the following two conditions: (1) This device may not cause harmful interference,

and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

**FCC RADIATION EXPOSURE STATEMENT:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 8 inches between the radiator and your body. This transmitter must be co-located or operating in conjunction with any other antenna or transmitter.

**ISED RSS WARNING:**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

**ISED RADIATION EXPOSURE STATEMENT:**

This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 8 inches between the radiator and your body.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Only use the power supply provided.

\*The power adapter provided with this product is for indoor use only.

Operating Temperature: 32°F - 104°F (0°C - 40°C)

**NEED HELP?**

**Contact our support team :**  
support@psynclabs.com

**Visit our support page:**  
<https://www.psynclabs.com/pages/support>

Scale 1:1    Unit:mm

型号:RVIC1  
规格:RVIC1-  
KSZP01 V2.0  
物料编码:

产品名 ▶ RVI说明书

印刷颜色 ▶ PANTONE 432C+ CMYK

物料材质 ▶ 105g无光铜

审核 ▶

样品

设计于 ▶ 曹佳丽

成品尺寸 ▶ 85\*65mm

特种工艺 ▶ 风琴折

批准 ▶

样品数量 ▶