

Quick Installation

1. The projector is non dustproof or waterproof.
2. In order to reduce the risk of fire and electric shock, do not expose the projector to rain and fog.
3. Please use the original power adapter. The projector should work under specified rated power supply.
4. When projector is working, please do not look directly into the lens. Strong light will flash your eyes and cause slight pain. Children should use the projector under the supervision of adults.
5. Do not cover the vents of projector. Heating will reduce the life of projector and cause danger.
6. Regularly clean projector vents, or dust may cause cooling malfunction.
7. Do not use the projector in gaseous, damp, dusty or smoky environment, or chemicals will cause malfunction.
8. Please handle with care during daily use.
9. Please cut off the power if the projector is out of use for long time.
10. Non-professionals are forbidden to disassemble the projector for testing and maintenance.

Figure 1 illustrates the camera's controls and features. The top left diagram shows the top of the camera with labels 1 (On/Off), 2 (HDMI), 3 (Headset Jack), 4 (Lid), 5 (Power), 6 (Vent), 7 (Focus Wheel), and 8 (Lens). The top right diagram shows the front of the camera with labels 9 (Air Inlet) and 10 (Rotate). The bottom left diagram shows a side view of the camera with label 11 (Lid).

The diagram shows the internal layout of the projector. At the top, it is labeled 'HOME CINEMA STEREO KARAOKE PROJECTOR'. Below this, on the left, is the 'Solid State LED Projector' with 'Power: AC100-240V' and 'Power: 100W'. To the right of the projector is the 'CINEMA MUSIC' section. Below that is the 'REMOTE CONTROL CHUCKER'. On the right side, there is a speaker grille. Five numbered callouts point to specific features: 1 points to the power switch on the projector, 2 points to the movie mode button, 3 points to the music mode button, 4 points to the toggle switch, and 5 points to the remote control chucker.

- 1 Power light
- 2 Movie Mode
- 3 Music Mode
- 4 Brief press to toggle sound modes
- 5 Press and hold to toggle speaker power state

FCC Radiation Exposure Statement
This equipment must be installed and operated in accordance with the provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure requirements.

Diagram of the remote control with labels for various buttons:

- ON/OFF
- Miracast
- DIRECTIONS
- RETURN
- MUTE
- Switch to mouse control
- AirPin
- OK
- MENU
- HOME
- VOL+/-

Projection Setting Audio Setting Date And Time Setting About device

Networking Setting

Settings - Networking Setting - WIFI setting, WIFI "ON", select objective WIFI ID and input password to connect internet.



g, WiFi "ON", select connect internet.

Bluetooth Setting

Settings - Bluetooth setting, Bluetooth Device and choose objective device

Available Devices: Search finished

- M86Max
- BEST Need SE
- MORSEKeyDerTfGCMakU0
- LAPTOP-6RQMAFU
- JY20 KTV
- NBAAMenWZobnKAR79YN0Tc

get Application setting,
user opinions.

Audio Setting
Setting - Audio setting,

A screenshot of the Windows 8 Start menu. The background is blue. In the bottom left corner, there is a blue square tile with a white 'C' logo and the text 'Windows 8.1' and 'Audio' below it. To the right of this tile, there are other tiles: a 'Networking Setting' tile with a bar chart icon, a 'Projection Setting' tile with a monitor icon, and a partially visible 'Audio' tile with a speaker icon.

- Do not bend or drag the power cord
- Do not put power cord under heavy objects
- Do not cover other sockets
- Do not heat the power cord
- Avoid touching power cord

- do not bend or drag the power cord.
- do not put power cord under projector or any heavy objects.
- do not cover other soft materials on power cord.
- do not heat the power cord.
- avoid touching power adaptor with wet hands.

directly into
d cause slight

heavy objects.
rd.

prop
your

100