 


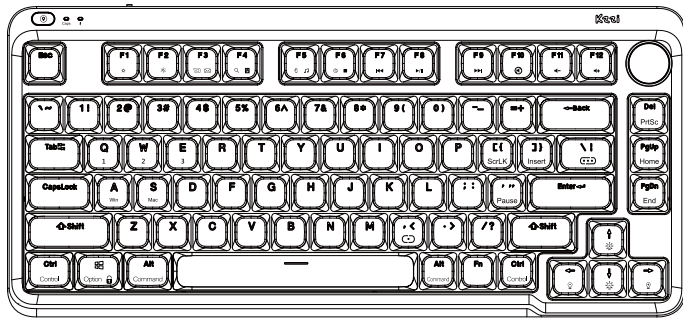

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) if it does, you must accept any interference received, including interference that may cause operational degradation. Any change or modification not expressly approved by the party responsible for compliance with the above conditions is prohibited.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly used or installed, may cause harmful interference to radio communications. However, there is no guarantee the interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
The device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly used or installed, may cause harmful interference to radio communications. However, there is no guarantee the interference will not occur in a particular installation.

WHEN USING A KEYBOARD:

1. Maintain proper posture and avoid excessive force on the keys.

2. Use regularly to maintain proper dexterity.

3. Clean the keyboard regularly to remove dust and dirt.

4. Avoid leaving the keyboard in humid.

5. Keep the keyboard in a suitable environment, free from extreme temperatures or humidity.

Remember these tips for a comfortable and durable keyboard experience.



GUARANTEE
Non-human hand
12-month warranty

产品基础

PRODUCT BASIC INFORMATION



说明书
Manual



拔轴拔键器
Switch and Keycaps Puller



键盘
Keyboard



 
Type-C 数据线
Type-C Cable



2.4G 接收器
2.4G Receiver

旋钮功能

KNOB FUNCTION



长按旋钮三秒切换旋钮模式

Long press knob for 3 seconds to switch knob mode

音量模式 (默认): 顺时针音量加, 逆时针音量减, 按压静音

Volume Mode (default): Clockwise Volume Up, Counterclockwise Volume Down, Press to Mute

背光模式: 顺时针背光亮度加, 逆时针背光亮度减, 按压切换灯光


Backlight mode: clockwise backlight brightness plus, counterclockwise backlight brightness minus, press to switch the light effect

尺寸/Size	Layout	版本/Version	背光/Backlit	轴体/Key Switches
327.5(L)×150.7(W)×30.03(H)±2	80 keys	有线/2.4G/BT USB-C wired/2.4G wireless/BT	RGB	矮轴 low profile switch

有线模式

WIRED MODE

 1

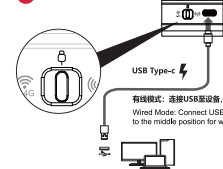

有线模式: 连接USB至设备, 电源开关拨到中间档位为有线模式
Wired Mode: Connect USB to the device and pull the power switch to the middle position for wired mode.

BT连接

BT CONNECTION

1

BT配对方法

BT Pairing Method

1. 开关拨到BT状态

Switch to B

2. FN+Q / W / E, 任意一组长按3秒, 此时灯快速闪烁, 表示已进入配对状态, 请快速将接收器插入设备

FN+Q / W / E, any group of long press 3 seconds, at this time, the Q key flashes quickly, indicating that it has entered the pairing state, and the slow flash indicates that the keyboard is in the back-connecting state.

3. 打开手机/电脑, 搜索并连接设备, 搜索显示的名称: KZZI-75 3.0 (连接PC端Windows7以下系统), KZZI-75 5.0 (连接Windows8以上系统版本, 移动设备等)

Open PC/mobile BT search and connect the device, the search shows the name: KZZI-75 3.0 (connect to PC with Windows 7 or below), KZZI-75 5.0 (connect to Windows 8 or above system version, mobile devices, etc.)

4. 完成连接

Completing the connection

温馨提示: 重置以上步骤, Q/W/E 三键长按3秒, 在接收器通电时同时+Q/W/E 三键长按3秒, 即可重置接收器 (温馨提示: 重置接收器, 请先关闭接收器)

And so on: Repeat the above steps, Q/W/E can store 3 groups of BT devices, when using the switch Short press FN+Q/W/E, you can switch between different BT devices (Warm tip: before using the switch, please pair up the 3 groups of BT)

2.4G连接

2.4G RECEIVER CONNECTION

1


键盘开关拨到2.4G状态

Switch to 2.4G

2


2.4G配对方法

 2.4G pairing method



开关拨到2.4G状态, 长按FN+P键, P键快速闪烁插入接收器, P键停止闪烁即配对成功。
Switch to 2.4G, Long press FN+P to pair code, P key blinks to insert the receiver, P key stops blinking that means code pairing is successful.

 3



(温馨提示: 出厂已默认配对接收器, 无需自行再次配对2.4G, 此方法只适用于2.4G无线连接时出现问题, 首次设置即可, 无需每次重置)
(Tip: The receiver is set to be paired at the factory. You just need to set it only once, when pairing not working properly.)

 
指示灯

INDICATOR LIGHT

快捷开关: 显示桌面功能

Tap this key: Quick desktop view switch

(出厂默认显示桌面, 如使用其他功能, 可长按此键3秒, 即可切换其他功能)
(The factory default is to display the desktop, if you want to change other functions, you can use the three to control the function of the key)



1. Win Lock (白灯)

Win Lock (white light)

2. 充电指示灯 (红灯) 充电完成, 常亮不灭, 低电量闪烁

Charging indicator (red light): Charging (solid), Fully charged (off), Low battery (flashing)

电池电量提示

BATTERY LEVEL CHECK

键盘背光可显示当前电池电量状态

The keyboard's lighting can display the current battery level status



(无线模式下查看)

View in wireless mode

按FN+ENTER 查看电池电量情况

Pressing FN+ENTER allows you to view the battery level status. Each key from "1" to "0" represents a specific battery level range.

比如:

For example:

11 背光 表示此时键盘10%的电量

The backlight of the "1" key is illuminated, indicating that the keyboard's current battery level is at 10%.

11 背光同时亮, 表示此时键盘20%的电量

The "1" and "2" keys are both illuminated, indicating that the keyboard's current battery level is at 20%.

以此类推

 
Similarly

11 背光同时亮, 表示此时键盘电量100%

When the backlighting illuminates from 1 to 0 simultaneously, it indicates that the keyboard battery is at 100% charge.

背光控制

BACKLIGHT CONTROL

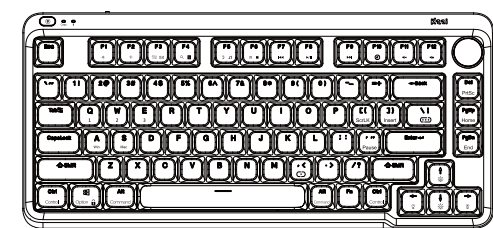

Fn + [Backlight Icon] 支持多种背光效果切换

Multiple backlight effects switch

Fn + [Brightness Up Icon] 背光亮度 +

Backlight brightness +

Fn + [Brightness Down Icon] 背光亮度 -

Backlight brightness -

Fn + [Win Lock Icon] 窗口锁定

Windows lock

Fn + [Monochrome Icon] 背光单色切换

Backlight monochrome switching

Fn + [Speed Up Icon] 背光速度 -

Backlight speed -

Fn + [Speed Down Icon] 背光速度 +

Backlight speed +

Fn + [Space Bar Icon] 长按3秒, 恢复出厂设置

Long-press for three seconds to restore factory settings

FN组合键功能

FN KEY COMBINATION FUNCTION

Fn + [Del] Prtsc

 
Fn + [PgUp] Home

Fn + [PgDn] End

Fn + [Ins] Ins

Fn + [ScrLk] ScrLk

Fn + [Pause] Pause

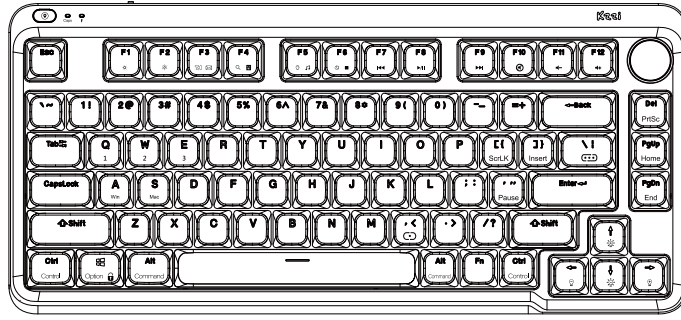

ISED STATEMENT:

English: This device complies with the essential requirements of the EMC Directive (2014/53/EU) for use with batteries, wireless and Bluetooth. Compliance is subject to the following conditions:
 (1) This device may not cause interference.
 (2) This device may not be used in areas where the use of radio equipment is prohibited.
 (3) The user must be informed of the conditions of use of the device.
 (4) The user must be informed of the conditions of use of the device.
 (5) The user must be informed of the conditions of use of the device.
 (6) The user must be informed of the conditions of use of the device.
 (7) The user must be informed of the conditions of use of the device.
 (8) The user must be informed of the conditions of use of the device.
 (9) The user must be informed of the conditions of use of the device.
 (10) The user must be informed of the conditions of use of the device.

BATTERIES:

 
A warning that battery safety pack or batteries incident must not be exposed to excessive heat such as sunlight.
 (1) The battery pack must be used in accordance with the instructions.
 (2) The battery pack must be used in accordance with the instructions.
 (3) The battery pack must be used in accordance with the instructions.
 (4) The battery pack must be used in accordance with the instructions.
 (5) The battery pack must be used in accordance with the instructions.
 (6) The battery pack must be used in accordance with the instructions.
 (7) The battery pack must be used in accordance with the instructions.
 (8) The battery pack must be used in accordance with the instructions.
 (9) The battery pack must be used in accordance with the instructions.
 (10) The battery pack must be used in accordance with the instructions.



GUARANTEE
Non-human damage
12-month warranty

背光录制

BACKLIGHT RECORDING

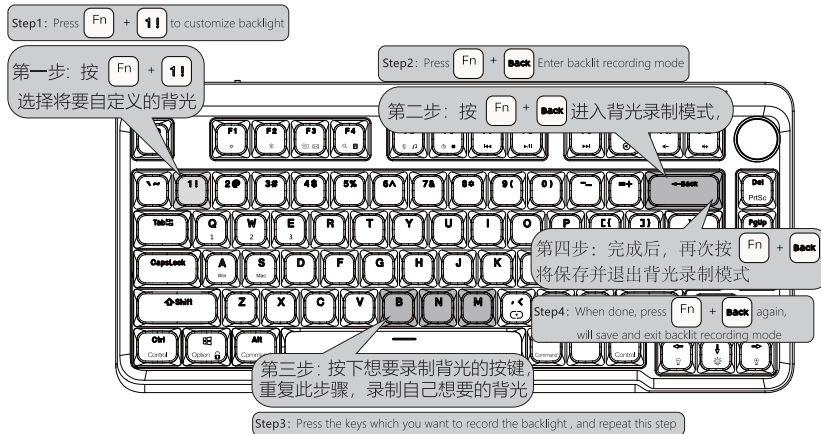

WINDOWS多媒体键

WINDOWS MULTIMEDIA KEYS

Windows模式下 (FN+A): 切换到Windows系统
 In Windows mode (FN+A): Switch to Windows system)

Fn + F1	屏幕亮度- Screen Brightness-	Fn + F4	计算器 Calculator	Fn + F7	上一曲 Previous Song	Fn + F10	静音 Mute
Fn + F2	屏幕亮度+ Screen brightness +	Fn + F5	播放器 Media Player	Fn + F8	播放/暂停 Play/Pause	Fn + F11	音量- Volume -
Fn + F3	邮箱 Email	Fn + F6	停止 Stop	Fn + F9	下一曲 Next Song	Fn + F12	音量+ Volume +

MAC多媒体键

MAC MULTIMEDIA KEYS

Mac模式下 (FN+S): 切换到MAC系统, MAC系统键和ALT键互换
 In macOS mode (FN+S): Switch to macOS system)

F1	屏幕亮度- Screen Brightness -	F4	搜索 Search	F7	上一曲 Previous Song	F10	静音 Mute
F2	屏幕亮度+ Screen Brightness +	F5	siri	F8	播放/暂停 Play/Pause	F11	音量- Volume -
F3	多屏显示 Multiscreen Display	F6	勿扰 (仅在有线模式下支持) Do Not Disturb (only supported in wired mode)	F9	下一曲 Next Song	F12	音量+ Volume +

Thank you for choosing KZZI products! If you have any questions or need assistance, please feel free to contact us. Our team is dedicated to providing support and addressing your inquiries.

We highly value your feedback and suggestions as they help us continuously improve and enhance product quality. Once again, we appreciate your support for KZZI!