

105mm

oneisall

TRANSFORM HOW YOU PET

HI-C Automatic Pet Feeder with Camera

Model: PF11

140mm

User Manual

ON-D177

Contents

Safety Warning

01

In the Package

02

Specifications

03

Assemble the Feeder

04

Icon Introduction

06

Connect to APP

08

The Desired Amount of Kibbles

11

Troubleshooting

13

Warranty Information

14

GPSR Product Information

15

FCC Statement

16

Safety Warning

1. Select a stable and firm location to install the feeder to avoid it from shaking or toppling over.

2. Ensure that the installation environment is dry and away from water sources and damp areas.

3. Before adding pet food, check if the food is suitable for feeding to avoid using deteriorated or unsuitable food.

4. Set an appropriate feeding amount and time, and do not overfeed to prevent pet obesity or indigestion.

5. Observe the pet's eating situation regularly and adjust in time if there is any abnormality.

6. Clean the feeder regularly to keep it clean and hygienic and prevent the growth of bacteria.

7. Pay attention to keeping the battery fully charged or the power connection normal.

8. These packaging bags may cause suffocation. Keep them away from children and pets.

9. Do not use the feeder when the pet cannot reach the food plate or has any physical disability.

10. Do not put your fingers into the food outlet or let your fingers touch the rotor.

11. Do not immerse the base part in water at any time, otherwise it may damage electronic components, such as the control panel.

12. Please use the power adapter provided with the device. Non-original adapters cannot guarantee the normal operation of the device.

13. Please read the user privacy agreement for the camera in the APP.

01

Product Overview

Lid

Food tank

Food dispenser

Dial and display

Bowl holder

Battery compartment

Buttons for the tank

Integrated camera

Stainless steel bowl

TF / Micro SD Card

Power jack

Desiccant box

02

In the Package

1x Automatic Pet Feeder

2x Stainless Steel Bowl and Holder

1x Desiccant Bag

1x Power Cord with Adapter

1x User Manual

03

Specifications

Product Name:

Oneisall HI-C Automatic Pet Feeder with Camera

Model:

PF11

Size:

17.24*9.35*13.31 inches (438*212.2*338mm)

Rated Voltage/Current:

5V = 2A

Material:

SUS 304 Stainless Steel+ ABS

Battery Type:

3 D batteries

Assemble the Feeder

1. Press on the button of both sides to open the food tank, and take out the bowl and accessories.

2. Lift the machine, insert the plastic bowl holder into the slot at the bottom of the machine until you hear a clicking sound, indicating that it is installed properly.

3. Place the machine on its side, insert the power cord into the external extension cord.

4. Lay the machine on its side, open the battery compartment, install 3 D batteries.

5. Insert a TF card

6. Fill the tank with pet dry food.

7. Put the desiccant bag into the desiccant box and put the stainless steel bowl on the bowl holder.

04

05

06

Icon Introduction

Operating Guide

Unlock the Feeder:

Press and hold the dial for 3 seconds

Menu Selection/Adjust Numbers:

Rotate the dial

Setting Confirmation:

Click the dial

Back to Previous Menu:

Double click on the dial

Icon Description

Feed

Manual feeding. The maximum setting is 12 servings of cat food.

Time

Set the clock time of the feeder device.

Plan

Set the feeding plan for the feeder. The maximum setting is 10 plans.

Mic

When the icon is flashing, press and hold the button to record sound. Do Not support to record a calling message via APP currently.

Wifi

In the case of flashing icon, the feeder can search for and connect to Wi-Fi.

Reset

Clear the device's feeding plan and restart the device.

3 D batteries installed.

When the battery power is low, the device emits a beeping alarm sound.

Displays when a TF card is inserted and recognized. Not shown if no TF card is inserted or when operating on battery only.

Displays when the power adapter is connected. Not shown when the unit is not connected to external power.

Lock

Manual Feeding

Time Setting

Feeding Plan Setting

Wi-Fi Connecting

Voice Recording

Clean Feeding Schedule

07

Connect to APP

1. Download and install the Oneisall APP from the app store.

Download on the App Store

GET IT ON Google Play

Oneisall APP

2. Connect the feeder according to the instructions.

Program the feeder manually

Program the feeder on the APP

3. If you have any questions, please consult the Oneisall online customer service. Click on the upper right corner of the APP to enter the real-time customer service chat window and inquire about product usage issues online.

4. Click the camera icon to access the dual-camera perspective.

5. The device features functions of video screenshot taking, recording video and voice intercom.

The Desired Amount of Kibbles

Note:

The amount of every portion is not adjustable. Pet owners should adjust the number of portions based on their pet's daily meals and appropriate amount per meal. The size of the kibble we used in our lab: 0.4 inch. Here's the data from our experiment.

Cup	Portion	Gram
1/8	2	15
1/4	4	29
1/3	6	44
1/2	9	58
1	18	130

Here are the steps:

1. For example, 1/4 cup equals to 4 portions, so 1/8 cup would equal to 2 portions.

1/4 cup = 4 portions

1/8 cup = 2 portions

Troubleshooting

Problems

Solutions

The feeder can not work

Do not use batteries, use another type-C charging cord to see if the feeder works.

Unplug the cord and use new batteries to see if it works.

Check if the cord is connected well.

Desiccant Replacement

Email us: support@oneisall.com

The dial does not work

Try to press and hold it for 3 seconds to unlock the feeder.

Make sure the kibble size is less than 0.7 inch in diameter.

If the food stop in the outlet, clean it.

Food stuck

If the camera lens appears blurry, clean it with soft cloth.

Lens blurry

Warranty Information

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

support@oneisall.com

+1877-522-8576(US) Mon-Fri 8am-5pm(PT)

www.oneisall.com

GPSR Product Information

EC REP

Name: Apex CE Specialists GmbH

Add: Grafenberger Allee 277-287,40237 Düsseldorf,DE

Contact Person: Wells Yan

Zip Code: 40237

E-Mail: info@apex-ce.de

UK REP

Name: APEX CE SPECIALISTS LIMITED

Add: 8F East Union Street, Manchester, England, M16 9AE

Contact: Wells

Tel: +44(0)161 5710390

E-Mail: info@apex-ce.com

Product Name:

Oneisall HI-C Automatic Pet Feeder with Camera

Brand:

Oneisall

Product Model:

PF11

Input:

5V = 2A

GPSR Manufacturer Information

Business Name: Shenzhen Jienlan Technology Co., Ltd.

Manufacturer's address: CN, 518000, Guangdong, Sheng, Shenzhen, Longhua District, Minxin Community Bihui Longting Building 8 Unit, 78

Tel: +86 185 6587 6424

E-Mail: topservice4u@hotmail.com

FC CE

Made in China

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

Any problem you have, please contact us: support@oneisall.com

Oneisall support

ON-D177

PANTONE2018C

PF11 喂食器说明书

材质: 128g双铜

印刷: 封面封底: 单黑+PANTONE2018C

内页: 黑白印刷

折叠方式: 骑马钉