 


amazon basics

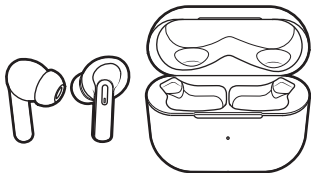

Wireless Earbuds

Wireless Earbuds

Wireless Earbuds

Wireless Earbuds

Wireless Earbuds

Wireless Earbuds

Wireless Earbuds

Wireless Earbuds

Wireless Earbuds

B0DQ5J4QHB



EN		Page	XX
FR		Page	XX
DE		Seite	XX
IT		Pagina	XX
ES		Página	XX
NL		Pagina	XX
PL		Strona	XX
SV		Sidan	XX
日本語		ページ	XX

Important Safeguards



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.



Hearing damage risk!

To prevent possible hearing damage, do not listen at high volume levels for long periods.



DANGER Choking hazard!

Small parts included may present a choking hazard or cause other injury to small children. Keep the product out of reach of children and pets.

- Only use the accessories supplied with the product.
- Only use the product in environments where wireless transmission is permitted.
- Do not use this product if damaged.
- Protect the product from extreme temperatures, hot surfaces, open flames, direct sunlight, water, high humidity, moisture, strong jolts, flammable gases, vapors and solvents.
- Disconnect the product from the power source when it is not in use.

- ▶ The earbuds are sweat and water resistant (IPX4). However, do not immerse them in water or swim while wearing the earbuds.
- ▶ Refer to national traffic laws regarding the use of communication products while in traffic.
- ▶ Protect the product against chemicals in cosmetics, hair spray, perfume, aftershave lotion, suntan lotion and insect repellents as they can damage your product.
- ▶ This product contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel only.
- ▶ Do not attempt to repair the product yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
- ▶ Do not open the product housing. Do not insert any foreign objects into the inside of the housing.
- ▶ Do not use the product during charging.

Battery Warnings

- ▶ This product contains batteries that are non-replaceable.
- ▶ Before disposal, the battery must be removed from the product. Contact a qualified professional.
- ▶ Do not leave the battery charging for a prolonged period of time when the product is not in use.
- ▶ Do not cover the product while charging the battery. Charge the product in a well-ventilated environment.
- ▶ When in long term storage, charge the battery to its 70 % capacity once every 3 months to avoid shortening its life.
- ▶ Charge the product only with a compatible power source from reputable manufacturer e.g. power adapter or power bank. The maximum rating should not exceed 5 V **===** 1 A.

Specific instructions for United States

**WARNING**

- ▶ **INGESTION HAZARD:** This product contains a button cell or coin battery.
- ▶ **DEATH** or serious injury can occur if ingested.
- ▶ A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- ▶ **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.





 
WARNING

► **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Battery type: VDL 1154PF4B
- Nominal voltage: 3.85 V
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Do not force discharge, recharge, disassemble, heat above 131 °F (55 °C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Symbols Explanation



The power delivered by the charger must be between min. 2.5 W required by the radio equipment, and max. 5 W in order to achieve the maximum charging speed.



Direct current (DC)

Tips to protect hearing

 
- ▶ Limit the amount of time of using the earbuds at a high volume.
- ▶ Avoid turning the volume up to block out noisy surroundings.
- ▶ Turn the volume down if people speaking nearby can not be heard.
- ▶ If there is discomfort while using the product, including the sensation of pressure or fullness in the ears, ringing in the ears, or muffled speech, stop using the earbuds.

Before First Use


⚠ DANGER Risk of suffocation!

Keep any packaging materials away from children and pets.

- ▶ Remove all the packaging materials.
- ▶ Review all components before use.
- ▶ Check the product for transport damages.
- ▶ Peel the protective film off the earbuds. Place them into the charging case to wake the earbuds before first use (Fig. 1).
- ▶ Fully charge the product before first use.

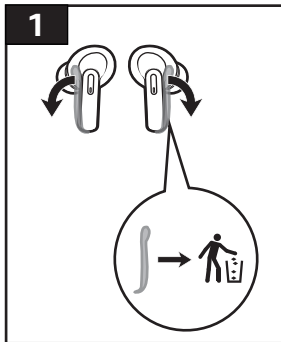


Product Description

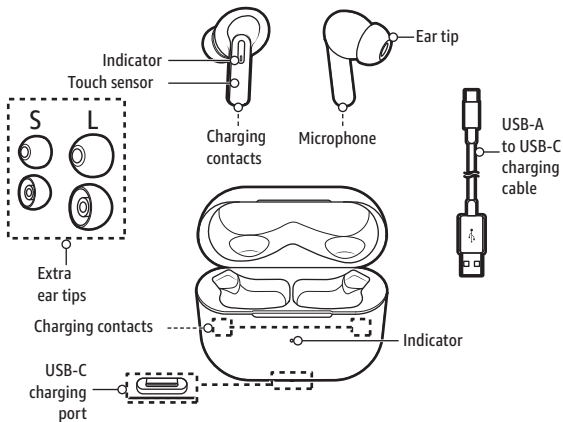 

Charging the charging case

 1. Connect the USB-C side of the charging cable to the USB-C charging port on the charging case (Fig. 2).
2. Connect the USB-A side of the charging cable to a power adapter (5 V $\equiv$ 1 A) or to a computer USB-A port (Fig. 2).
3. The charging case indicator lights up different colors depending on the battery level. Once fully charged, the charging case indicator goes off.

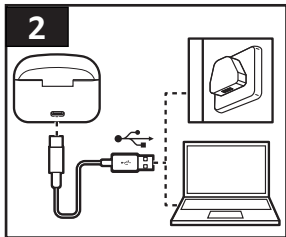

Charging case indicator status

Red	Less than 33% charged/Low battery
Orange	Between 34 - 66% charged/Medium battery
Green	Between 67 - 99% charged/High battery
Off	100% charged/Fully charged

 
Charging the earbuds

NOTICE Fully charge the charging case before charging the earbuds. A charging case with low battery (<3.15V) does not charge the earbuds.

When the battery of an earbud is low, the earbud plays a tone every 5 minutes and the indicator flashes white. When the power runs out, the earbud switches off automatically.

To charge the earbuds:

Place the earbuds into the charging case and close the cover (Fig. 3). The charging case indicator lights up for 1 second according to its current battery level.

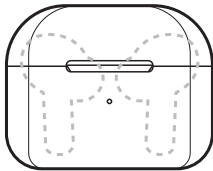3

Bluetooth® Pairing

NOTICE Before using the product for the first time, you must pair it with a Bluetooth® enabled device.

NOTICE The earbuds automatically search for and connect to a previously paired Bluetooth® device. The following steps are only required when pairing with a new Bluetooth® device.

1. Open the charging case. The earbuds automatically enter pairing mode. The earbud indicators rapidly flash blue.
2. Activate Bluetooth® on the desired device to pair and search for a new device.
3. Select “Amazon Basics TWS Earbuds” from the list on the device.
4. Once the devices are paired, a voice prompt plays. The earbud indicators rapidly flash blue 3 times.

NOTICE

- ▶ The product automatically switches off if it is not paired within 5 minutes.
- ▶ If the connection breaks down, a voice prompt plays.

Use

Switch on/off

NOTICE

The earbuds automatically switch off after 5 minutes of being disconnected or if there is no operation from the connected device.

The earbuds automatically switch on/off when the charging case is opened or closed.

Wearing the earbuds

NOTICE

- ▶ For optimal fit and audio performance, try different sizes of ear tips and adjust each earbud into a suitable position.
- ▶ For stereo mode, wear both earbuds. For mono mode, wear 1 earbud.

1. To wear, place the earbuds into each ear.
2. Slightly rotate the earbuds until they feel secure and comfortable.
3. The earbuds should fit snugly inside the ear canal.

Volume functions



Increase volume*

Tap the touch sensor on the left (L) earbud.



Decrease volume*

Double tap the touch sensor on the left (L) earbud.

* The volume cannot be adjusted when using only one earbud (mono mode).

Call functions



Answer/End call

Double tap the touch sensor on either earbud to answer or end call.



Reject call/Mute or unmute microphone

Tap and hold the touch sensor for 2 seconds on either earbud. 2 beep tones play.

Playback functions

	Stereo mode	Mono mode
▶/ Play/ Pause	Tap the touch sensor on the right (R) earbud.	Tap the touch sensor on the earbud.
▶▶ Next song	Double tap the touch sensor on the right (R) earbud.	Double tap the touch sensor on the earbud.
◀◀ Previous song	Triple tap the touch sensor on the right (R) earbud.	Triple tap the touch sensor on the earbud.

Voice assistant

- ▶ Tap and hold the touch sensor on either earbud for 2 seconds to activate. 2 beep tones play.
- ▶ Tap the touch sensor again on either earbud to deactivate.

Factory reset

Double tap the touch sensor on either earbud, then tap and hold the touch sensor of the same earbud for 1 second. 4 beep tones play.

Bluetooth® forced pairing mode

Tap the touch sensor once on either earbud, then tap and hold the touch sensor of the same earbud for 1 second. 3 beep tones play. The earbuds disconnect with the current paired device and enter pairing mode. The earbuds are now discoverable by other devices.

Cleaning and Maintenance

NOTICE

- ▶ Let the earbuds switch off automatically and unplug the charging case before cleaning.
- ▶ During cleaning, do not immerse the product in water or other liquids. Never hold the product under running water.

Cleaning

- ▶ To clean the product, wipe with a soft, slightly damp cloth.
- ▶ Wipe the product dry after cleaning.
- ▶ When visibly dirty, clean the ear tips with a dry cotton swab.

- ▶ Clean the charging contacts with a cotton swab and rubbing alcohol. Let them dry thoroughly.
- ▶ Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Frequently Asked Questions

Problem	Solution
Earbuds do not switch on when they are taken out from the charging case.	Earbuds or charging case are/is out of battery. Charge the batteries.
Poor connectivity or audio distortion when walking around.	Keep the earbuds and device together (within 10 m). Avoid potential obstructions between product and the connected device.
The earbuds are not charging in the charging case.	The charging contacts might be dirty. Clean the charging contacts with a cotton swab and rubbing alcohol. Let them dry before charging again.

Problem	Solution
Earbuds switch off automatically.	Low battery. Charge the batteries.
Earbuds fail to connect.	- Keep the earbuds and device close together (within 1 m). Put the earbuds into the charging case, then close the cover. Turn the Bluetooth® connection off on the device, then turn it back on. Open the cover to pair again. - Double tap the touch sensor on either earbud, then tap and hold the touch sensor on the same earbud for 1 second to perform a factory reset. 4 beep tones play. When finished resetting, search and re-pair with the earbuds on the device.
Only one earbud is paired when using stereo mode.	Make sure both earbuds are charged. Put the earbuds into the charging case, then close the cover to switch off the earbuds. Open the cover to pair again.

FCC Compliance Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio / TV technician for help.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Canada IC Notice

- ▶ This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - (1) this device may not cause interference, and
 - (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- ▶ This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.
- ▶ This Class B digital apparatus complies with Canadian CAN ICES(B) / NMB(B) standard.

Simplified EU Declaration of Conformity

- ▶ Hereby, Amazon EU Sarl declares that the radio equipment type AMZ-B8930B is in compliance with Directive 2014/53/EU.
- ▶ The full text of the EU declaration of conformity is available at the following internet address: https://www.amazon.co.uk/amazon_private_brand_EU_compliance

Simplified UK Declaration of Conformity

- ▶ Hereby, Amazon EU SARL, UK Branch declares that the radio equipment type AMZ-B8930B is in compliance with The Radio Equipment Regulations 2017.
- ▶ The full text of the UK declaration of conformity is available at the following internet address: https://www.amazon.co.uk/amazon_private_brand_EU_compliance

Disposal (for Europe only)



The Waste Electrical and Electronic Equipment (WEEE) laws aim to minimise the impact of electrical and electronic goods on the environment and human health, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centres in order to conserve natural resources. Each country should have its collection centres for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Battery Disposal



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.



To learn more about recycling batteries, visit: call2recycle.org/what-can-i-recycle

Specifications

Model number (charging case and earbuds)	AMZ-B8930B
Input	5 V $\overline{\text{---}}$ 1 A
Earbud voltage/battery type	3.85 V $\overline{\text{---}}$ 60 mAh Li-ion
Charging case voltage/battery type	3.7 V $\overline{\text{---}}$ 400 mAh Li-ion
Charging time (charging case and earbuds)	2 hours from empty
Music playback time	Up to 8 hours at 60 % volume*
Bluetooth range (unobstructed)	10 m
Operating frequency	2.402-2.480 GHz
Bluetooth version	5.4
Bluetooth profiles	A2DP, AVRCP, HFP
Frequency response	20 Hz-20 kHz

Bluetooth transmitter power	<4 dBm (EIRP)
Speaker sensitivity	108 dB $\pm$ 3 dB
Microphone sensitivity	-31 dBV/Pa $\pm$ 3 dBFS @ 1 kHz
Impedance	16 Ω ($\pm$ 15 %)
Operating temperature	0 °C to +45 °C
IP rating	Earbuds: IPX4 Charging case: IPX2

* Provided playback time is based on lab conditions, playback time might vary in daily usage.

Importer Information

	For EU
Postal:	Amazon EU S.à r.l., 38 avenue John F. Kennedy, L-1855 Luxembourg
Business Reg.:	134248

	For UK
Postal:	Amazon EU SARL, UK Branch, 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom
Business Reg.:	BR017427

Trademarks

The Bluetooth® word mark and Logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Amazon Basics is under license. Other trademarks and trade names are those of their respective owners.



USB-A™ and USB-C™ are trademarks of USB Implementers Forum and are only in for use with products based on and compliant with the USB-A™ and USB-C™ cable and connector specification.

amazon basics

amazon.com/pbhelp



UK
CA



218-250596

FCC ID: 2BBBFB0DQ5J4QHB

IC: 30577-B0DQ5J4QHB

V07-05/25