

方式:6折页

Please read manual carefully before using earbuds  
Please keep this manual for future references

User Manual x 1

- 1 -

- 2 -

- 3 -

- 4 -

- 5 -

- 6 -

X1, X2, X3: Tap Once / Twice / Three times, and so on.  
 1", 2", 3": Press and hold for 1 second / 2 seconds / 3 seconds, and so on.  
 L: Left earbud.  
 R: Right earbud.

- 7 -

3. Put the earbuds into the case for charging, and the Reset is done.

- 8 -

- 9 -

|                                            |                                                    |
|--------------------------------------------|----------------------------------------------------|
| Input                                      | 5 V=380 mA                                         |
| Output                                     | 5 V=100 mA                                         |
| Battery capacity                           | 50 mAh x 2 (earbuds);<br>500 mAh (charging case)   |
| Charging time                              | 2 hours                                            |
| Playtime<br>(varies by volume and content) | 6 hours (Total 24 hours<br>with the charging case) |
| Driver size                                | 13 mm x 2                                          |
| Frequency response                         | 20 Hz - 20 kHz                                     |
| Impedance                                  | 32 $\Omega$ $\pm$ 5%                               |
| Bluetooth version                          | V 5.2                                              |
| Bluetooth range                            | >10 m / 33 ft                                      |

1. To be familiar with Touch Control of earbuds, please practice Quick-Twice-Tap just on Control Area in the beginning.
2. If the earbuds can't be found on your phone but you can hear CONNECTED tone, please check whether they are pairing with other device automatically because they had been paired before.
3. If the earbuds do not function as expected, please try following steps to solve the issue.
  - Place the earbuds into the charging case and charge the earbuds. or
  - Restart the device connected to the earbuds. or

- 10 -

1. Never disassemble or modify your earbuds for any reasons to avoid any damages and danger.
2. Do not store the earbuds in extreme high/low temperatures (such as under 0°C, or over 45°C).
3. Avoid using the indicator close to the eyes of children or animals.
4. Do not use the earbuds during a thunderstorm to avoid dysfunction and risk of electric shock.
5. Do not use harsh chemicals or strong detergents to clean the earbuds.

Note: please do not use earbuds for a long time as may damage your hearing.

 **service-us@audiovance.com**  
(For USA and Canada Only)



The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.