

Instruction Manual



Overview of General Button Operations for the Entire Device

Buttons	Short press functions	Long press for 2 seconds for	Long press for 5 seconds (Double-click)	Operation
Power Button	Play/Pause, Answer/End call, Auto scan	Repeat on incoming call	Power on / Power off	Reply Last Call
Mode (M) Button	Wake up/Turn off Set	Switch to work mode	---	---
V+	Volume Up	Next song / Next radio station	---	---
V-	Volume Down	Previous song / Previous radio station	---	---
Flashlight Button	Flashlight on/Off (Backward button; work even when the device is off)	---	SDS Emergency light	---

Bluetooth Mode (Default Power-On Priority Mode)

- Indicator Light Rules
- Power on and pairing: Blue light flashes rapidly
 - Bluetooth connected: Blue light flashes slowly
 - Play/Pause: Blue light flashes slowly
 - Bluetooth disconnected: Blue light flashes rapidly
 - Full-Autonomous Operation
 - Power On: Press and hold the power button for 3 seconds. You will hear the "PowerOn" prompt, and the blue light will flash, indicating the device is entering pairing mode.
 - Power Off: When the device is on, press and hold the power button for 3 seconds. You will hear the "PowerOff" prompt.
 - Automatic Pairing: The device automatically enters Bluetooth discoverable mode upon powering on.
 - Pairing with a Smartphone: Speech for the device name "TP" in your phone's Bluetooth list and tap to pair. A "Connected" prompt will sound when the connection is successful, and the blue light will flash slowly.
 - Disconnecting via Bluetooth: Insert the device from your phone and tap "Disconnect" and the blue light will flash.
 - Play/Pause: Press the power button once. When paused, the blue light flashes slowly when playback resumes, it stays lit.
 - Volume Control: Press V+ to increase volume, press V- to decrease volume when the volume reaches its maximum, you'll hear "maximum volume".
 - Skip Tracks: Press and hold V+ for 2 seconds to skip to the next track, press and hold V- for 2 seconds to skip to the previous track.
 - Answer/End Call: When a call comes in, press the power button once to answer, press it again to end the call.
 - Repeat Call: When a call comes in, press and hold the power button for 2 seconds to repeat it.
 - Redial Last Call: In standby mode with a Bluetooth connection, double-click the power button to redial the last call.
 - Voice Assistant (SOS): Click the mode button once to wake up Siri, click it again to turn it off.
 - Ambient Light: The ambient light stays on automatically when the device is turned on.

- Auto Shutdown: In Bluetooth mode only if no connection to a phone is established within 5 minutes, the device will automatically shut down and announce "Power Off".
- Automatic Reconnection: If the device is turned on within 3 minutes of a Bluetooth disconnection, it will automatically reconnect to the last paired phone.
- FM Radio Mode Switch To: Press and hold the mode button for 2 seconds until the device announces "Radio Mode"; the blue light will flash slowly, indicating that the mode has been activated.
- Operational Features:
 - Volume Control: Press V+ to increase the volume, press V- to decrease the volume. When the volume is at its maximum, the message "maximum volume" appears.
 - Auto Scan: Press the power button to automatically scan and cache all stations.
 - Station Selection: Press and hold V+ for 2 seconds to switch to the next station, press and hold V- for 2 seconds to switch to the previous station.
- Special Light:

The FM app can keep Bluetooth connected in the background and automatically prioritize incoming calls. If TV Card Music Mode Card Playing

Switch to:

 - When a TF card is inserted, the device automatically enters Music Mode and announces "Music Mode".
 - Press and hold the Mode button for 2 seconds to switch between TF Mode, Bluetooth Mode, and Radio Mode.
- Operational Features:
 - Volume Control: Press V+ to increase volume, V- to decrease volume, "maximum volume" is announced when the volume is at its highest.
 - Skip Tracks: Press and hold V+ for 2 seconds to skip to the next track, press and hold V- for 2 seconds to skip to the previous track.
 - Play/Pause: Press the power button to play or pause.
- Flashlight (SOS) Standalone Function:

The device is equipped with a dedicated flashlight button that can be used even when the device is turned off.

Operation:

 - Click the Flashlight button to turn the light on or off; there is no visual or audible indicator.
 - Press and hold the Flashlight button for 3 seconds to activate the SOS emergency signal; click the Flashlight button again to turn it off.
- Charging and Low Battery Alerts:
 - Charging: When the charging cable is connected, the red light flashes continuously; the device automatically shuts down during charging.
 - Full Charge: The red light stays on and stops flashing.
 - Low Battery Alert: When the battery voltage drops below 3.3V, the device announces "Battery low" once every 60 seconds.
 - Automatic Shutdown Due to Low Battery: When the voltage drops below 3.1V, the device announces "PowerOff" and then powers down completely.
- Important Notes:
 - We recommend formatting the TF card to FAT32; it supports only common music formats such as MP3.
 - Use a compatible 5V charger with a standard charging current of 500 mA.
 - If the device will not be used for an extended period, please store it fully charged and recharge it once a month to prevent battery damage caused by deep discharge.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance, such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.