

物料名称:		Ucity S_北美_说明书		成品尺寸:	130x130 mm	版本号	变更时间	版本变更记录
品 牌:	isinwheel	语 种:	英、法、西	材 质:	封面封底： 157g铜版纸 - 覆哑膜 内页： 80g铜版纸 四色印刷 胶装	V2		
时 间:	2026-01-21	版 本:	Ucity S_NA_V1			工 艺:	V3	
备 注:						V4		
						V5		

NA



E-BIKE **Ucity S**

USER MANUAL

Before using the product, please read this manual. Read carefully and keep for future reference.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

TABLE OF CONTENTS



PRODUCT OVERVIEW	02
PACKAGE CONTENTS	03
ASSEMBLY	04
CHARGING INSTRUCTIONS	12
DISPLAY	14
BASIC OPERATIONS	15
SETTINGS	16
FOR YOUR SAFETY	17
MAINTENANCE	18
SPECIFICATIONS & ERROR CODES	19

TABLE DES MATIÈRES

FR

PRÉSENTATION DU PRODUIT	21
CONTENU DE L'EMBALLAGE	22
ASSEMBLAGE	23
INSTRUCTIONS DE CHARGE	31
ÉCRAN	33
OPÉRATIONS DE BASE	34
PARAMÈTRES	35
POUR VOTRE SÉCURITÉ	36
ENTRETIEN	37
CARACTÉRISTIQUES ET CODES D'ERREUR	38

INDICE

ES

DESCRIPCIÓN GENERAL DEL PRODUCTO	40
CONTENIDO DEL PAQUETE	41
MONTAJE	42
INSTRUCCIONES DE CARGA	50
PANTALLA	52
OPERACIONES BÁSICAS	53
CONFIGURACIÓN	54
PARA SU SEGURIDAD	55
MANTENIMIENTO	56
ESPECIFICACIONES Y CÓDIGOS DE ERROR	57

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR ELECTRIC SHOCK



IMPORTANT SAFETY INSTRUCTIONS


WARNING:

When using this product, basic precautions should always be followed, including the following:

- a) Read all the instructions before using the product.
- b) To reduce the risk of injury, close supervision is necessary when the product is used near children.
- c) Do not put fingers or hands into the product.
- d) Do not use this product if the flexible power cord or output cable is frayed, has broken insulation, or any other signs of damage.
- e) This equipment is not intended to be used at ambient temperatures less than -4°F (-20°C) or above ambient temperatures of 104°F (40°C).
- g) The battery is intended to be charged when the ambient temperature is between 32°F (0°C) and 104°F (40°C). Never charge the battery when ambient temperatures are outside this range.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RIDER HEIGHT GUIDE

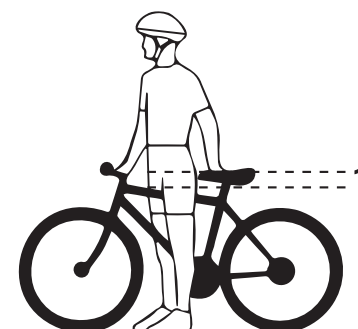

**Not less than
one inch
clearance**

THERE MUST BE AT LEAST 1 INCH OF CLEARANCE BETWEEN THE TOP TUBE AND THE CROTCH OF THE INTENDED RIDER WHILE STANDING WITH ONE LEG ON EACH SIDE OF THE BICYCLE. IF THERE IS LESS THAN 1 INCH CLEARANCE, THE BICYCLE IS TOO LARGE FOR THE RIDER AND SHOULD NOT BE USED.

PRODUCT OVERVIEW



- | | | |
|-------------------------|--------------------|----------------------------|
| 1 Battery | 6 Disc Brake Rotor | 11 Rear Rack |
| 2 Headlight | 7 Tire | 12 Taillight & Brake Light |
| 3 Front Fender | 8 Pedal | 13 Rear Fender |
| 4 Suspension Front Fork | 9 Saddle | 14 Kickstand |
| 5 Brake Caliper | 10 Seatpost Clamp | |



- 1 Reflector
- 2 Display
- 3 Brake Levers
- 4 Bell
- 5 Gear Shifter
- 6 Throttle

PACKAGE CONTENTS

If any parts are missing or damaged, please contact us.



E-bike x1
(Partially Assembled)



Stem x1



Front Wheel x1
Quick-Release Skewer x1



Front Fender x1




Saddle x1



Rear Rack x1




Left Pedal x1
Right Pedal x1

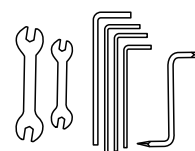

Toolkit x1




Battery Key x2

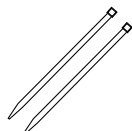


Zip Tie x2



 Bicycle Pump x1



Charger x1

 

User Manual x1
Safety Instructions x1

ASSEMBLY

Assembly requires two people for safety and ease.

STEP 1: Install the Stem

1. Place the e-bike on a level surface stably, then remove the wood strip secured to the steerer tube and seat tube.



2. Remove the spacer from the steerer tube, then slide the stem onto the steerer tube with the handlebar clamp facing forward as shown below.



3. Adjust the stem so that it is perpendicular to the fork crown.



4. While keeping the steerer tube centered in the head tube, tighten the long stem bolt and pinch bolts.



STEP 2: Install the Handlebar

1. Remove the faceplate of the handlebar clamp.

NOTE: All four bolts must be removed. Otherwise, the handlebar cannot be positioned into the clamp.



2. Place the handlebar into the clamp and the faceplate over the front of the handlebar, and tighten the bolts in an X pattern.



3. Ensure the faceplate bolts are tightened evenly, i.e., the gap between the stem and the faceplate should typically be even on the top and bottom.



STEP 3: Adjust the Bell, Reflector, Display, & Brake Levers

1. Adjust the bell so that its body does not touch the gear shifter.



2. The reflector has two adjusting screws, allowing you to adjust its position and angle freely.



3. Adjust the display, brake levers, and gear shifter to the desired angle, then tighten the screws.



STEP 4: Install the Headlight & Front Fender

1. Remove the bolt and nut from the fork arch.



2. Pass the bolt through the bracket holes of the headlight and front fender and the mounting hole on the fork arch, then tighten the bolt and nut.



3. Remove the front fender stay mounting bolts from both fork legs.



4. Pass the bolts through the fender stay eyelets, then tighten the bolts firmly.




STEP 5: Install the Front Disc Brake Caliper

1. Remove the two mounting bolts from the brake caliper.




2. Attach the brake caliper to its mount on the left fork leg, align the mounting holes, and tighten the bolts firmly.

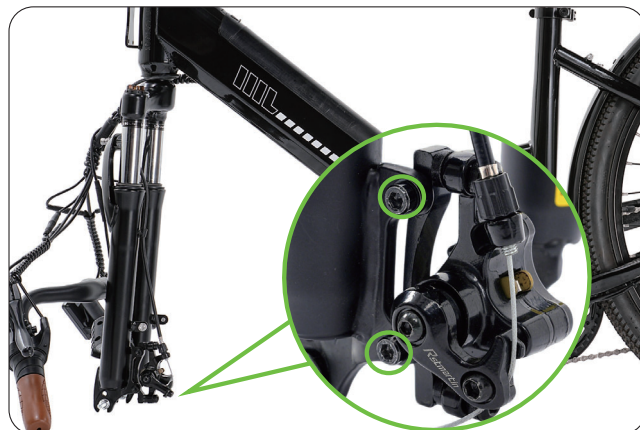

STEP 6: Install the Front Wheel

1. Remove the front wheel axle protectors on both sides.

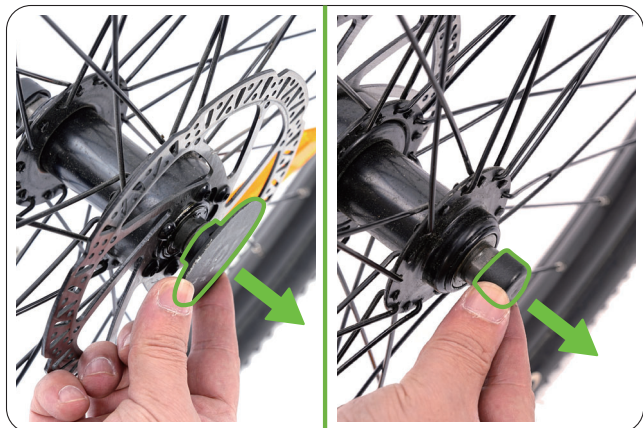

2. Remove the nut and spring from the quick-release skewer.

