

Model: SK315

Made in China



Smart Retail Kiosk

User Manual

SK315

Package Contents

CONTENTS	
Main Unit	×1
Power Adapter	×1
Printer Unlocking Tool	×1
Unlocking Tool Holder	×1
Paper Roll	×1
User Manual	×1
PIN pad Bracket	Optional
Desktop Stand	Optional
Floor Stand	Optional
Wall Mount Bracket	Optional

Please check the box contents after unpacking.
If any components are missing, please contact the dealer.

Safety Warnings ⚠

Read all instructions carefully before using this product.
Following these guidelines helps ensure your safety and the proper operation of the equipment.

To reduce the risk of fire, electric shock, injury, or damage, observe the following precautions:

- 1. Electrical Safety**
- Always unplug the unit from the power outlet before cleaning, performing maintenance, or moving.
 - Keep the power cord and plug away from liquids to avoid electrical hazards.
 - Please insert the AC plug into the AC socket corresponding to the input voltage of the power adapter.

- 2. General Safety Precautions**
- Never leave the equipment unattended while it is powered on.
 - Do not allow children to use or play near the equipment without adult supervision.

- 3. Equipment Inspection & Handling**
- Do not operate the device if the power cord or plug is damaged, if the unit has been dropped or damaged, or if it has been exposed to water or moisture.
 - Never pull, yank, or carry the unit by its power cord, and do not use the cord as a handle.
 - Keep the power cord away from heat sources, sharp edges, and high-traffic areas to prevent damage or tripping hazards.


- 4. Installation & Environment**
- Always use the product on a stable, level, and dry surface.
 - Discontinue use immediately if any malfunction or unusual behavior occurs.
 - This product is designed for indoor use only. Do not expose it to rain, moisture, or direct sunlight.

- 5. Shutdown Procedure**
- Press the power button on the unit to turn off the equipment. Do not unplug the power cord until the device has completely shut down.

Specification

OS	Android 15
Processor	2 * A75 2.0GHz + 6 * A55 1.8GHz
Memory	3 + 64GB 4 + 64GB (Optional) 8 + 128GB (Optional)
Display	15.6" Capacitive Touch Screen
Printer	Paper Roll: 80mm * 80mm Print Speed: 250mm/s
Camera	5MP FF Front Camera
Barcode Scanner	Professional 1D+2D with High Performance
Mobile	4G: LTE 3G: WCDMA 2G: GSM
Wireless	Wi-Fi: 2.4GHz / 5GHz BT: BT5.0 (BLE)
Ethernet	10/100Mbps
Card Reader	NFC Contactless
Card Slots	1 * Nano SIM Card (eSIM optional)
Audio	1 * Speaker 2 * MIC
Positioning	GPS + GLONASS / BEIDOU
Port	3 * USB 2.0 Type A 1 * USB 2.0 Type C 1 * DC Power 1 * RJ45 for Ethernet 1 * LED Light Jack
Keypad	1 * Power ON/OFF Button
Indicator LEDs	1 * Printer Indicator LED 1 * Operation Indicator LED 1 * Scan Indicator LED
Power	Input: 100~200VAC, 50Hz/60Hz Output: 24V/2.5A
Physical	Size: 595*245*99mm Weight: 5Kg
Environment	Operating Temp: 0°C~50°C Storage Temp: -20°C~60°C Relative Humidity: 5%~95%(Non-condensing)

Product

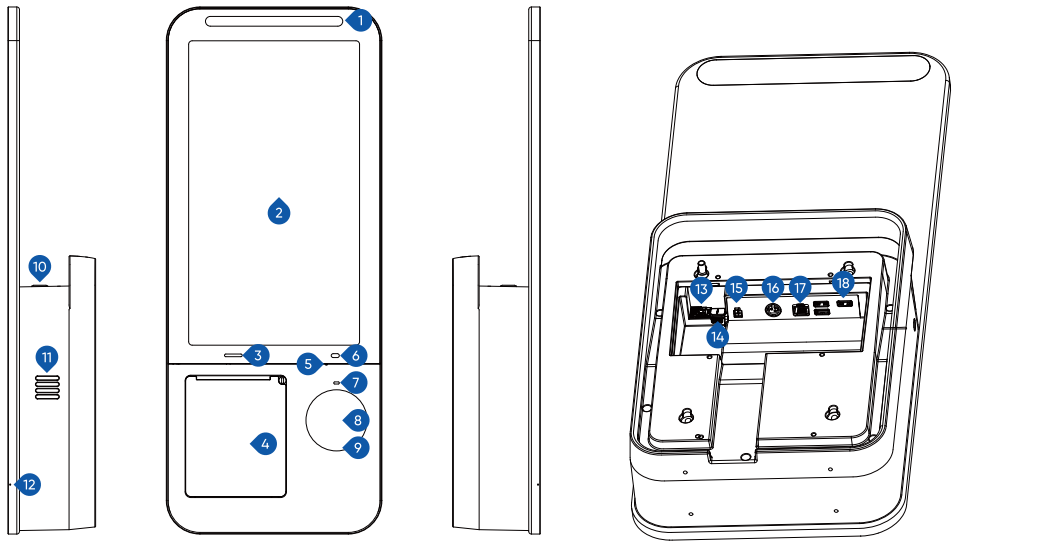

- 1 Operation Indicator
- 2 Touch Screen
- 3 Printer Indicator
- 4 Printer
- 5 Primary Microphone
- 6 Presence-Sensor


- 7 Scanning Indicator
- 8 Scanning Window
- 9 NFC Reading Area
- 10 Speaker
- 11 Power ON/OFF Button
- 12 Secondary Microphone

- 13 SIM Card Slot and TF Card Slot
- 14 USB Type-C Port
- 15 4-Pin LED Light Jack
- 16 DC Power Jack
- 17 RJ45 Ethernet Port
- 18 USB Type-A Port (This port was not enabled for the end users).

Usage


Power ON/OFF

1. Connect DC Power Cables.
2. Power ON: Press and hold the power key until LCD screen lights up.
3. Power OFF: Press and hold the power key until LCD screen turns off.

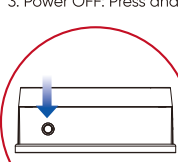


Printer

1. Use the tool to open the printer cover.
2. Place the paper roll according to the diagram.
3. Pull out part of the paper.

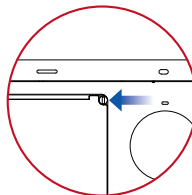


Card Slot


1. Insert the SIM Card into the lower slot.
2. Insert the TF Card into the upper slot.

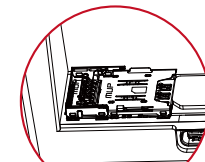



Scanner

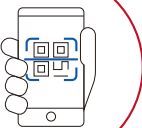

NFC Reader

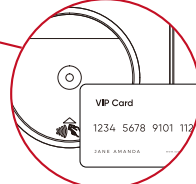

Replacing Paper

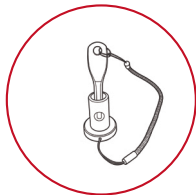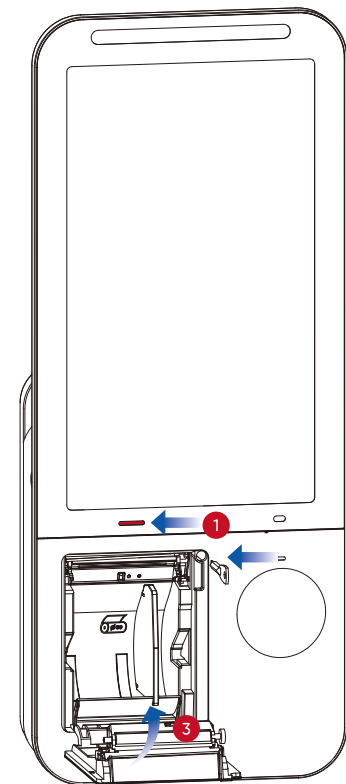

The unlocking tool can be stored in the Unlocking Tool Holder, which can be affixed to the unit or any desired nearby location.

1. Open Paper Compartment Cover

Use the tool to open the cover. The printer indicator light will turn red at this stage.

2. Load Paper

Insert the 80mm thermal paper roll into the Compartment. Feed the paper out from the slot, ensuring a small portion is pulled through.

3. Close Paper Compartment Cover

Push the cover back into place. Ensure some paper remains outside the printer. The indicator light will turn off once closed.