 


使用说明书
INSTRUCTION MANUAL



使用产品前请仔细阅读用户手册，并妥善保管
Please read the user manual carefully before using the product and keep it properly

Product diagram

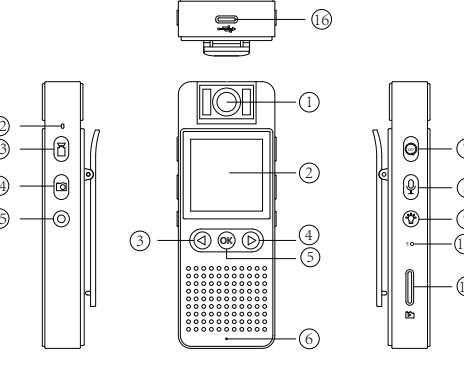

① HD lens

② Display screen

③ Left scroll key

④ Right scroll key

⑤ Confirm key

⑥ Indicator light

⑦ Flip key/WiFi on key

⑧ Recording key

⑨ Fill light key/screen saver key

⑩ Reset hole

⑪ TF card slot

⑫ Microphone hole


⑬ Video key

⑭ Photo button

⑮ Start key/Exit key

⑯ Data interface

Icon Introduction

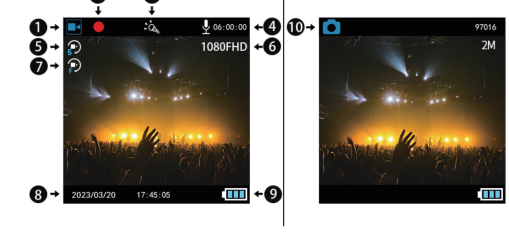

① Video mode

② The fill light is on

③ Loop video segmentation time

④ Motion detection is enabled

⑤ Battery level indication

⑥ Number of photos prestored

⑦ Recording started

⑧ Video prestorage time


⑨ Video Resolution

⑩ Date/Time

⑪ Photo Mode

⑫ Photo resolution

Installing a TF card

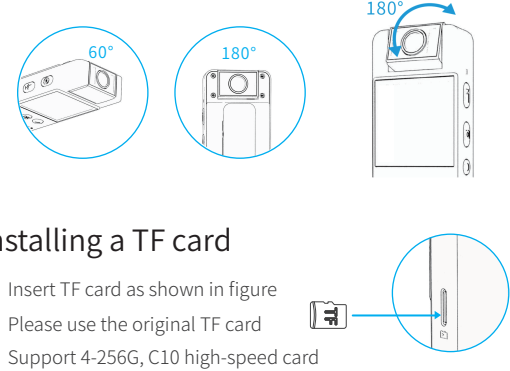

● Insert TF card as shown in figure

● Please use the original TF card

● Support 4-256G, C10 high-speed card

Use tutorial

1. Key function introduction

Power key		Long press Long press to turn on, and long press again to turn off.
Photo button		Short press In Photo, Record tap to return to Video mode, in Settings, Album tap to return to previous step or exit.

2. Basic operating instruction

(1) Turn on the machine
Long press the " " key to power on the device when the device is powered off. The LCD is on and an announcement is heard.

(2) Turn off the machine
Long press the " " button to turn off the machine in any mode and the display is off.

(3) Video recording
In recording mode, press " " to start recording. In recording mode, press " " to stop recording.

(4) Motion detection
Long press " " in the recording mode to enter the motion detection mode. If motions are detected, the recording will start. If no motion is detected, the recording will stop automatically. Press " " to exit motion detection recording. (Video recording for 1 minute once object movement is detected, and continuous object movement video recording for 3 minutes is saved in segments.)

(5) Take a photo
In the photo mode, press " " button to take a photo.

(6) Voice ecoriding
In recording mode, press " " to start recording. In recording mode, press " " to stop recording.

(7) Image flip
The default orientation of the image is back clip. If you need to rotate the lens for shooting, press " " to adjust the image.

(8) Screensavers
In any mode when the machine is turned on, short press " " to turn off the screen, Short press any button and the display lights up.

(9) Fill-in light
In any mode when the machine is turned on, Long press " " to turn on LED, and long press " " again to turn off LED.

(10) Phase album

Tap " " to enter the album. In the album, tap " " to browse up and down the pictures and videos And recording file, tap " " to play the video and recording. Press and hold the " " key in the album to delete (delete the current or all) or protect the file.

(11) Setting
In recording mode, press " " to enter setting. In the setting menu, press " " Key up or down, press " " to modify the parameters. Tap in photo mode " " key can enter the picture settings, for the photo parameters and exposure settings.

(12) Time setting
In the mode of video standby, long press " " to enter time setting. In the setting menu, select "date/time" to set the time.


(13) Reset hole
The machine crashes and the buttons are invalid, making it unable to use properly. Press and hold the power button for 10 seconds or use a pointed object to insert the " RST " reset hole to reset the machine. After resetting, it can be used normally.

APP download and installation
Scan the QR code below to download and install "Sports Camera", or search "Sports Camera" in Google play or App store to download and install.

Hot spot WiFi

1. WiFi switch
In the startup state, long press the " " button to turn on WiFi, and long press the " " button again to turn off WiFi.

2. WiFi connection
Search for the connection name "network beginning with CS, such as CS06_CE88" in WiFi settings of mobile phone or tablet computer. After the connection is successful, open the Sports Camera App to enter the main interface and click " " to enter the real-time preview interface. Select video/photo in the preview interface. If you encounter other problems during operation, please click help on the main screen.

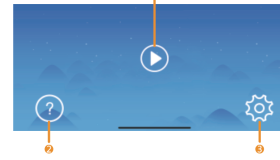


Start click the start button to enter the live preview

Help open the instructions

Settings set the functions on the device

Connect to a computer

In any mode, can be directly connected to the computer, connected to the computer can be used as a U disk, you can freely copy, cut and paste files, delete, format.

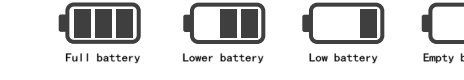Charging instructions
For battery indicator, please refer to the following figure:


Full battery

Lower battery

Low battery

Empty battery

Correlation parameter

Correlation parameter	
Video	Video resolution
	Video format
	Video frame rate
	Image ratio
Audio	Recording format
Picture	Photo resolution
	Photo format
Battery	Battery type
	Battery capacity
Other	Working time
	Storage support
	Charging voltage
	Interface type
	Support system
	Playback software

Note:
Usage

Please strictly abide by the relevant laws of the country where the product is used, and do not use this product for any illegal purposes or use or suffer the consequences.

Operating temperature
Please use in natural temperature, do not use in the human body can not adapt to the temperature.

Working humidity
Please use the product in the suitable environment humidity. Do not place the product in the humid working environment. This product does not have waterproof function, avoid drenching or exposure to rain.


Shooting requirements
Use the camera in an environment with sufficient light sources. Do not point the camera directly at strong light sources such as the sun to avoid device damage.

Cleaning requirements
Do not use in an environment with too high dust density to avoid contamination of lens and other components dust, affect the camera effect.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equip generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio comm. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body. Use only the supplied antenna.

产品图示

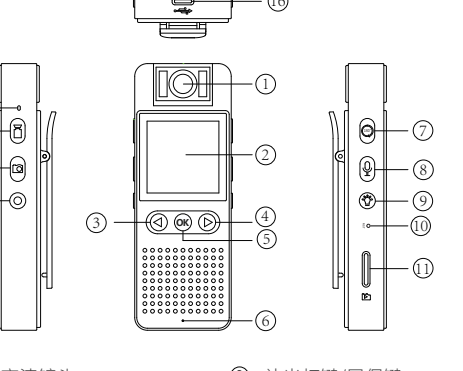

① 高清镜头

② 显示屏

③ 左翻键

④ 右翻键

⑤ 确认键

⑥ 指示灯

⑦ 翻转键/WiFi开关

⑧ 录音键

⑨ 补光灯/屏保键

⑩ 复位孔

⑪ TF卡槽

⑫ 麦克风孔

 
⑬ 录像键

⑭ 拍照键

⑮ 开机键/退出键

⑯ 数据接口

图标介绍

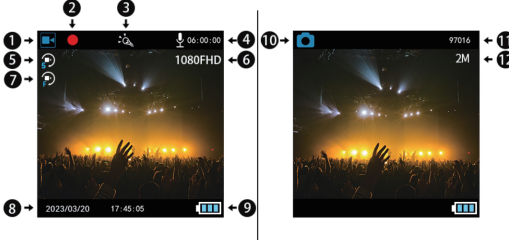

① 视频模式

② 循环录像分段时间

③ 电池电量指示

④ 已开启录像

⑤ 已开启补光灯

⑥ 视频频率

⑦ 已开启移动侦测

 
⑧ 日期/时间

⑨ 拍照模式

⑩ 照片缓存数量

⑪ 照片分辨率

安装TF卡

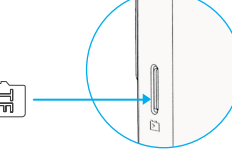

● 如图方式插入TF卡

● 请使用正版TF卡

● 支持 4—256G, C10高速卡

使用教程

1. 按键功能介绍

电源键		长按 长按开机, 再次长按关机。
拍照键		短按 在拍照、录音短按返回录像模式, 在设置、相册短按返回上一步或退出。
录像键		短按 短按进入录像模式, 在录像模式下短按开始录像; 在录像模式下短按停止录像。
移动侦测		长按 在录像模式下长按开启移动侦测。
补光键		长按 在开机任何模式下短按息屏。
录音键		短按 在开机任何模式下短按息屏。

(4)移动侦测

在录像模式长按 " " 键进入移动侦测模式, 有侦测到物体移动开始录像, 无物体移动会自动停止录像, 按 " " 键退出移动侦测录像。
(侦测到物体移动一次录像1分钟, 有连续物体移动录像3分钟一段分段保存)

(5)拍照

在录像模式长按 " " 键拍照一张。

(6)录音

在录像模式长按 " " 键开始录音, 录音状态下短按 " " 键停止录音。

(7)图像翻转

图像默认背方方向, 需要旋转镜头拍摄请短按 " " 键调整图像。

(8)屏保模式

开机任何模式下, 短按 " " 键关闭LED灯, 再次长按 " " 键关闭LED灯。

(9)补光开关

在开机任何模式下, 长按 " " 键开启LED灯, 再次长按 " " 键关闭LED灯。

(10)相册

短按 " " 键进入相册, 在相册短按 " " 键上浏览照片以及视频和录音文件, 短按 " " 播放视频以及录音, 在相册长按 " " 键进入删除 (删除当前或全部删除) 或保护文件。

(11)设置

在录像模式短按 " " 键进入设置, 在设置菜单可通过短按 " " 键上下选择, 短按 " " 可进行各项参数设置修改, 在拍照模式短按 " " 键可进入图片设置, 针对照片参数及曝光等设置。

(12)时间设置

在录像模式短按 " " 键进入设置, 在设置菜单里面选择一项 (日期/时间) 进入后时间设置。

(13)复位

机器出现死机, 按键无效, 无法正常使用, 长按开机键10秒或用尖利物对 " RST " 复位孔插入点按使机器进行复位, 复位后可以正常使用。

APP下载安装
扫描下方二维码下载安装 "Sports Camera", 或在 Google play, App Store 搜索 "Sports Camera" 下载安装。



Android

 
IOS

Google

热点WiFi

1. WiFi开关
开机状态下, 长按 " " 键开启WiFi, 再次长按 " " 键WiFi关闭。

2. WiFi连接
手机或者平板电脑的WiFi设置搜索连接名称为 "CS开头的网络" (如CS06_CE88), 连接成功后打开 Sports Camera App 进入主界面点 " " 进入实时预览界面, 在预览界面选择录像/拍照, 操作时如有遇到其他问题, 请点击主界面帮助查看。

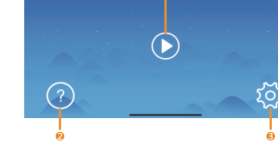

开启后, 点击主界面帮助查看

帮助打开使用说明

设置菜单设置功能在设备上

电量指示



电量充足

电量偏低

电量低

电量不足

充电说明

充电: 本机内置可充电锂电池, 初次使用本机时, 请先进行充电, 充电时指示灯常亮, 充满电, 可以通过以下方式充电:
● 连接电脑充电, 使用USB与电脑连接。
● 使用电脑适配器或移动电源充电。
● 每次使用完电池后再充电, 大约要充3小时左右 (充电时间根据适配器而定), 充满后尽可能再充20分钟, 保证电池充满使用。
警告: 避免不在干燥的环境下充电, 可能会引起火灾以及短路!

相关参数

相 关 参 数	
视频	视频分辨率
	视频格式
	视频帧率
	影像比例
音频	录音格式
图片	照片分辨率
	照片格式
电池	电池类型
	电池容量

其他

工作时间	可持续录像20分钟左右
充电电压	DC-3V
存储支持	最高可支持256G Micro SD卡
接口类型	Type-C
支持系统	Windows/Mac OS/Linux
播放软件	系统自带或主流影音播放软件

注意事项
使用场合
请严格遵守国家相关法律法规, 不得将本产品用于任何非法用途, 否则后果自负。
工作温度
请在自然温度下使用, 请勿在人体不能适应的温度下使用。
工作湿度
请在人类适宜环境湿度下使用, 勿将产品置于潮湿的工作环境, 本产品不具备防水功能, 避免雨水或潮湿在雨中。
拍摄要求
请在充足光源的环境下使用, 勿将镜头直接对准太阳等强光源, 以免损坏镜头。
保洁要求
请勿用指甲刮擦过大的环境下使用, 以免镜头以及其他部件沾染粉尘, 影响拍摄效果。