

## OPERATION INSTRUCTIONS

Please read the user manual carefully before using the product and keep it properly

**1. APP download code:** Scan the homepage QR code to download and install, or search for "Wind Recorder" on Google Play or App Store to download and install.



### 2. Equipment identification diagram

-  Power on/Video button
-  Photo/WiFi button
-  TF card slot
-  USB charging interface

Tip: The TF card will be automatically formatted upon first use. The alternating flashing of blue and green lights indicates that the memory card is being formatted. After the formatting is complete, the blue light stays on and the green light goes out. If there are important files on the card, please backup them to another device before using them.

### 3. Indicator light description

Blue light: When the device is turned on, the blue light stays on in standby mode, and the blue light flashes slowly to record video. The blue light is flashing rapidly and no card has been read.  
Green light: The green light is on and WiFi is enabled. The green light flashes slowly and the WiFi connection is successful.  
Red light: The red light flashes slowly and the battery is low. The red light stays on and is connected to a computer or charging. When the red light goes out, it is fully charged.  
Blue and green lights: flashing alternately, formatting the memory card.

### 4. Operating instructions

- ① Power on: Press and hold the "" key to turn on the device. The blue light will remain on and enter standby mode. After 3 minutes of inactivity, the device will automatically shut down. If no TF card or abnormality is detected, the blue light will flash rapidly for 1 minute and then automatically shut down (WiFi will not automatically shut down with or without a card).
- ② Shutdown: Press and hold the "" key to turn off the device, and the indicator light will turn off.
- ③ Video recording: In standby mode, short press the "" button, the blue light will flash slowly to start recording. In recording mode, short press the "" button to stop recording and return to standby mode. The blue light will remain on.
- ④ Photography: In standby mode, press the "" key briefly to flash the blue light and take one photo.
- ⑤ WiFi switch: Long press "" to turn on or off WiFi. The green light stays on when turned on, and goes off when turned off,

### 5. WiFi connection

1. First, turn on the WiFi switch on the device: the green light is on, and WiFi is turned on
2. WiFi connection: Search for the WiFi name starting with device model S or M (such as Sxx\_XXXX or Mxx\_XXXX) in the WiFi settings of your phone or tablet. Initial password: 12345678. The green light flashes when the connection is successful (please press and hold the "" key for 10 seconds to restore the initial password).
3. APP operation for taking photos and recording videos: Click "" to start/stop recording and save, click "" to take a photo and save.
4. File Download: Open the video file that needs to be downloaded and click "" in the bottom left corner to enter the download mode.
5. APP settings: Click "" on the preview interface to enter the recorder settings.

### 6. Reset

The machine crashes, the buttons are invalid, and it cannot be used normally. You can press the "R" reset button to force a reset and

restart. If there is no "R" reset button, you can press and hold the "" button for more than 10 seconds to force a reset and restart.

### 7. Time setting

After connecting to a hotspot WiFi and entering the app, the device will automatically synchronize the time. The time watermark can be turned on or off in the app settings.

### 8. Charging instructions

Reminder: The device's red light flashes slowly and the battery is low. Please charge it in a timely manner.

This device is equipped with a rechargeable lithium battery. When using this device for the first time, please charge it first. The red indicator light will remain on and turn off when fully charged. You can charge it through the following methods:

- ① Connect the computer for charging and use USB to connect to the computer.
- ② Charge using a power adapter or portable power bank.
- ③ After each use of the battery, it takes about 3-4 hours to fully charge (the charging time depends on the adapter).

### matters needing attention:

Usage: Please strictly abide by the relevant laws of the country where you are using it. Do not use this product for any illegal purposes, otherwise you will be responsible for the consequences.  
Working temperature: Please use at natural temperature and do not use at temperatures that the human body cannot adapt to.  
Shooting requirements: Please use the camera in an environment with sufficient light sources. Do not aim the camera directly at strong light sources such as the sun to avoid damage to the optical components.  
Cleaning requirements: Do not use in environments with high dust density to prevent the lens and other components from being contaminated with dust, which may affect the camera effect. (If there are fingerprints or dust on the lens or lens surface, please use a clean soft material dust-free cloth to wipe it off)

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
— Reorient or relocate the receiving antenna.  
— Increase the separation between the equipment and receiver.  
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
— Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

## 使用说明书 OPERATION INSTRUCTIONS

使用产品前请仔细阅读用户手册，并妥善保管  
Please read the user manual carefully before using the product and keep it properly

**一、APP下载码:**扫描首页二维码下载安装,或在 Google play、App Store 搜索“录风者”下载安装。



### 二、设备标识图示

-  开机/录像键
-  拍照/WiFi键
-  TF卡槽
-  USB充电接口

提示:TF卡第一次使用会自动格式化。蓝绿灯交替闪烁表示正在格式化内存卡,格式完成后蓝灯常亮,绿灯熄灭。如卡有重要文件,请先备份到其他设备再使用。

### 三、指示灯说明

蓝灯:蓝灯亮设备开机,蓝灯常亮待机模式,蓝灯慢闪录像状态。蓝灯快速闪烁未读到卡。  
绿灯:绿灯亮开启WiFi,绿灯慢闪WiFi连接成功。  
红灯:红灯慢闪电池低电,红灯常亮连接电脑或正在充电,红灯熄灭充满电。  
蓝绿灯:交替闪烁,正在格式化内存卡。

### 四、操作说明

- ① 开机:长按""键开机,蓝灯长亮,进入待机模式,无任何操作3分钟后自动关机。检测到TF卡或异常,蓝灯快速闪烁1分钟后自动关机(WiFi开启状态下有卡无卡都不会自动关机)。

- ② 关机:长按""键关机,指示灯熄灭设备关机。

- ③ 录像:待机模式下,短按""键,蓝灯慢闪开启录像,在录像状态短按""键停止录像返回待机模式蓝灯常亮。

- ④ 拍照:待机模式下,短按""键蓝灯闪一下,拍照1张。

- ⑤ WiFi开关:长按""开启或关闭WiFi。开启时绿灯常亮,关闭时绿灯熄灭

### 五、WiFi连接

1. 先开启设备的WiFi:绿灯亮WiFi开启
2. WiFi连接:在手机或者平板电脑的WiFi设置搜索设备型号S或M开头WiFi名称(例如 Sxx\_XXXX或 Mxx\_XXXX),初始密码:12345678,连接成功绿灯闪烁(恢复初始密码请长按""键10秒)。
3. APP操作拍照录像:点击""开始/停止录像并保存,点击""拍照一张并保存。
4. 文件下载:打开需要下载的视频文件,在左下向点击""即可进入下载状态。
5. APP设置:预览界面点击""进入记录仪设置。

### 六、复位

机器出现死机,按键无效,无法正常使用,可按“R”复位键强制复位重启。如果没有“R”复位按键,可长按""键10秒以上进行强制复位重启。

### 七、时间设置

设备连接热点WiFi进入APP后会自动同步时间,时间水印可在APP设置开启或关闭。

### 八、充电说明

提示:设备红灯慢闪电池低电,请及时充电。

本机内置可充电锂电池,初次使用本机时,请先进行充电,充电时红色指示灯常亮,充满熄灭,可以通过以下方式充电:

- ① 连接电脑充电,使用USB与电脑连接。
- ② 使用电源适配器或移动电源充电。
- ③ 每次使用完电池后再充电,大约要充3-4小时左右充满(充电时间根据适配器来决定)。

### 注意事项:

使用场合:请严格遵守使用所在国家相关法律,不得将此产品用于任何非法用途,否则后果自负。

工作温度:请在自然温度下使用,请勿在人体不能适应的温度下使用。

拍摄要求:请在充足光源的环境下使用,勿将摄像头直接对准太阳等强光源,以免光学器件受损。

保洁要求:请勿在粉尘密度过大的环境下使用,以免镜头以及其他部件沾染粉尘,影响拍摄效果。(如遇镜头或镜片表面有手印灰尘请使用干净软材质无尘布擦拭)