

INSTRUCTION MANUAL

Please read the user manual carefully before using the product and keep it properly

Product Illustration

Install TF card

- Insert the TF card as shown
- Please use a genuine TF card
- Maximum support for 256GB, C10 high-speed card

Indicator Light Description

(1) Blue light:

1

● The blue light is on when the device is turned on, the blue light is always on and in standby mode with a card, and the blue light flashes slowly to record the video. The blue light flashes rapidly and there is no card or no card read.

(2) Green light:

- Green light on WiFi, green light flash WiFi connection successfully.

(3) Red light:

- The red light slow flash battery is low, the red light is always on to connect the computer or is charging, the red light is turned off to be fully charged.

Key Description

(1) :

- Press and hold to turn on while in the off state, and press and hold to turn off while in the on state. Short press to start recording in standby mode, and short press to stop recording in recording mode. Short press once to take a photo in standby mode. Short press to enter the album in album mode, and view videos in the album. Short press to play videos. Press twice in a row to enter delete in the album. Short press to confirm the current option while deleting status.

(2) :

- Short press to switch modes in the power on state, short press to switch videos or pictures in the album, delete the short press switch option, long press to return to the previous step in the album, long press to turn on WiFi in recording and photography standby mode, and long press to turn off WiFi when WiFi is on.

2

Operation instructions

(1) Starting:

- Press and hold the " " key in the shutdown state to turn on the device. The display screen will light up, and the blue light with a card will remain on to enter standby mode. If there is no operation, the screen will automatically turn off after 1 minute, and it will automatically turn off after 3 minutes.

(2) Shutdown:

- Press and hold the " " key at any power on state to turn off the display screen.

(3) Video:

- The default recording standby mode is when the device is turned on. Press the " " key briefly once to turn on the slow flashing blue light for recording. Press the " " key briefly once to stop recording and return to standby mode. The blue light remains on.

(4) Take a photo:

- Short press the " " key to switch to standby mode for taking photos. Short press the " " key to flash the blue light once and take one photo. The blue light will automatically save and return to standby mode.

(5) Album:

- Viewing album files: Short press the " " key in standby mode to switch to the album interface. Short press the " " key to enter

3

video and image preview. Short press the " " key to quickly switch between videos and images. Switch to video files. Short press the " " key to play. In playback mode, short press the " " key to stop playing. Long press the " " key to return to the previous step.

Delete album files: Press the " " button twice in a row under the preview videos and images in the album to enter the deletion interface. Short press the " " button to select whether to delete the current or all. After selecting, short press the " " button to enter execution or cancellation (short press the " " button to select execution or cancellation, and then short press the " " button to confirm). Long press " " while in delete mode to exit and return to the previous step.

Reset

- The machine crashes, the buttons are invalid, and it cannot be used normally. You can press the "R" or "REST" button to force a reset and restart.

Time Settings

- After connecting to a hotspot WiFi and entering the app, the device will automatically synchronize the time. The time watermark can be turned on or off in the app settings.

APP Download

Scan the QR code below to download and install "Sports DV", or search for "Sports DV" on Google Play or App Store to download and install

4

WiFi hotspot

- WiFi switch: Long press the " " button in standby mode for recording and taking photos, and the green light will turn on to turn on WiFi. Long press and shake the " " button once in the on state, and the green light will turn off to turn off WiFi. (WiFi will automatically shut down if not connected for 3 minutes while WiFi is on)
- Open the app and click on " " interface to automatically redirect to the settings of your phone or tablet. Search for a network with a connection name starting with "M" (such as Mox_ABC88888) in the WLAN settings list, and the green light will flash if the connection is successful.
- APP operation for taking photos and recording: Open "Sports DV" to enter the main interface and click " " to enter the real-time preview interface. Click " " on the preview interface to start recording. Click " " in recording mode to stop recording and save the current recording file. Click " " to take a photo and save the current one. Files with a card are saved to the device's memory card " " by default. If you want to save them to your phone, click " " to switch to the phone's photo album. Files without a card are saved to your phone by default.

5

- Memory card file download: Click on " " in the preview interface to enter the album, select the memory card and click on " " to enter. Clicking on the image will automatically download it, and clicking on " " will enter the download mode for video download (long video segments, slow download speed). Once the download is complete, it will be directly saved to the phone album.
- Recorder settings: Click " " on the preview interface to enter the recorder settings, where you can set some functions and parameters of the machine through the APP.

Connect to computer

- In any mode, it can be directly connected to the computer and can be used as a USB flash drive to freely copy, clip, delete, and format files.

Charging instructions

Tip: red light slow flash battery low power, please timely charge.

Built-in rechargeable lithium battery, the first time using the machine, please charge first, when charging the red indicator light is always on, full of extinguishing, can be charged by the following ways:

- Connect the computer to charge, use USB to connect to the computer.
- Charge using a power adapter or mobile power supply.
- Charge after each use of the battery, support fast charging for about 1 hour or so (charging time depends on the adapter)

Recommendation: Try not to use the feature while charging, which may cause damage to the battery as well as the TF card!

6

Note:

Usage scene:

Please strictly abide by relevant laws of the country where the product is used, and do not use this product for any illegal purpose, otherwise, you should bear the consequences.

Operating temperature:

Please use the product at the natural temperature and do not use it in temperature where human body can not adapt to.

Shooting requirements:

Please use the product in an environment with sufficient light sources and do not direct the camera at the sun and other strong light sources so as to avoid damage to optical devices.

Cleaning requirements:

Do not use the product in an environment with too large dust density so as to avoid the lens and other components contaminated with dust, which will affect the camera effect. (If the lens has fingerprints or dust, please use clean soft material dust-free cloth to wipe it).

7

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference.
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equip generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio comm. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

8

使用说明书
INSTRUCTION MANUAL

使用产品前请仔细阅读用户手册，并妥善保管
Please read the user manual carefully before using the product and keep it properly

产品图示

横屏款 方屏款

安装TF卡

- 如图方式插入TF卡
- 请使用正版TF卡
- 最大支持256G, C10高速卡

指示灯说明

(1) 蓝灯:

1

- 蓝灯亮设备开机, 蓝灯常亮有卡待机模式, 蓝灯慢闪录像状态, 蓝灯快速闪烁无卡或未读到卡。

(2) 绿灯:

- 绿灯亮开启WiFi, 绿灯慢闪WiFi连接成功。

(3) 红灯:

- 红灯慢闪电池低电, 红灯常亮连接电脑或正在充电, 红灯熄灭充满电。

按键说明

(1) :

- 在关机状态下长按开机, 在开机状态下长按关机。在待机模式下短按开始录像, 在录像状态下短按停止录像。在拍照待机模式下短按一次拍照1张, 在相册模式下短按进入相册, 在相册查看视频短按播放视频。在相册连接按两次进入删除, 在删除状态短按确认当前选项。

(2) :

- 在开机状态下短按切换模式, 在相册短按切换视频或图片, 在删除短按切换选项, 在相册长按返回上一步, 在录像, 拍照待机模式下短按开启WiFi, WiFi开启状态下长按关闭WiFi。

操作说明

(1) 开机:

- 在关机状态下长按 " " 键开机, 显示屏亮, 有卡蓝灯常亮进入待机模式, 无卡长按操作1分钟后自动熄屏, 3分钟后自动关机。

2

(2) 关机:

- 在开机任何状态下长按 " " 键关机显示屏熄。

(3) 录像:

- 开机默认录像待机模式, 短按 " " 键一次蓝灯慢闪开启录像, 在录像状态短按 " " 键一次停止录像返回待机模式蓝灯常亮。

(4) 拍照:

- 短按 " " 键切换到拍照待机模式, 短按 " " 键蓝灯闪烁一次拍照1张, 自动保存返回待机模式蓝灯常亮。

(5) 相册:

- 查看相册文件: 在拍照待机模式下短按 " " 键切换到相册界面, 短按 " " 键进入视频和图片预览, 短按 " " 键快速切换视频和图片, 切换到视频文件短按 " " 键播放, 在播放状态下短按 " " 键停止播放。长按 " " 键返回上一步。
- 删除相册文件: 在相册预览视频和图片下连续按两次 " " 进入删除界面, 短按 " " 键选择删除当前或删除全部, 选择好后短按 " " 键进入执行或删除 (短按 " " 键选择执行或删除, 选择好后短按 " " 键确认)。在删除状态下长按 " " 键返回上一步。

复位

- 机器出现死机, 按键无效, 无法正常使用, 可按 "R" 或 "REST" 键强制复位重启。

时间设置

3

- 设备连接热点WiFi进入APP后会自动同步时间, 时间水印可在APP设置开启或关闭。

APP下载

扫描下方二维码来下载安装 "Sports DV", 或在 Google play, App Store 搜索 "Sports DV" 下载安装

热点WiFi

- WiFi开关: 在录像, 拍照待机模式下长按 " " 键绿灯亮开启WiFi, 在开启状态长按 " " 键蓝灯熄灭关闭WiFi, (WiFi开启状态下不连接3分钟后自动关闭WiFi)
- 打开App在主界面点击 " " 手机或者平板电脑的设置, 在设置WLAN列表搜索连接名为M开头的网络 (例如 Mox_ABC88888), 连接成功绿灯闪烁。
- APP操作拍照录像: 打开 "Sports DV" 进入主界面点击 " " 进入实时预览界面, 在预览界面点击 " " 开始录像, 录像状态下点击 " " 停止录像并保存当前录像文件, 点击 " " 拍照一张并保存当前照片, 有卡文件默认保存至设备内存卡 " ", 无卡则保存至手机, 请点击 " " 切换至手机相册, 没有插卡默认保存手机。
- 内存卡文件下载: 在预览界面点击 " " 进入相册, 选择内存卡 " " 点击进入, 图片点击一下会自动下载, 视频下载点击 " " 即可进入下载状态 (视频分段长, 下载速度慢), 下载完成直接保存至手机相册。

4

- 记录仪设置: 预览界面点击 " " 进入记录仪设置, 可通过APP对机器的一些功能以及参数设置。

连接电脑

- 在任何模式下, 均可直接连接电脑, 连接电脑后可以作为U盘使用, 可以自由进行文件的复制, 剪贴, 删除, 格式化。

充电说明

提示: 红灯慢闪电池低电, 请及时充电。

本机内置可充电锂电池, 初次使用本机时, 请先进行充电, 充电时红色指示灯常亮, 充满熄灭, 可以通过以下方式充电:

- 连接电脑充电, 使用USB与电脑连接。
- 使用电源适配器或移动电源充电。
- 每次使用完锂电池后再充电, 支持快充大约1小时左右充满 (充电时间根据适配器而定)

建议: 尽量不要在充电时使用功能, 可能会导致电池以及TF卡损坏!

5

注意事项

使用场合

请严格遵守使用所在国家相关法律, 不得将此产品用于任何非法用途, 否则后果自负。

工作温度

请在自然温度下使用, 请勿在人体不能适应的温度下使用。

拍摄要求

请在充足光源的环境下使用, 勿将摄像头直接对准太阳等强光源, 以免器件受损。

保洁要求

请勿在粉尘密度过大的环境下使用, 以免镜头以及其他部件沾染粉尘, 影响摄像效果 (如遇镜头有手印或灰尘请使用干净软材质无尘布擦拭)。

6