

EN

Two mobile phones are shown side-by-side. The phone on the left has a screen and a keypad, while the phone on the right is a basic flip phone without a screen.

CONTACT US FOR MORE TECH SUPPORT
☎ +1 (971) 391-2223 | Mon-Sun 8AM-5PM (PST)

1

EN

2

EN

107

EN



IV. Function D

4

EN

5

EN

The diagram shows a device screen with a large central area labeled 'Main screen Display Area A' containing a photo of a child. Above this area is a 'Voice mode icon'. To the right of the main area is a 'Small window B display area' showing a smaller photo of the same child. Below the main area is a row of application icons.

6

EN

Figure 1 shows a mobile phone with a photo of a child on the screen. Figure 2 shows the same phone with a 'Delete photo' button and a 'Save photo' button overlaid on the screen. The 'Delete photo' button is located at the bottom left of the screen, and the 'Save photo' button is located at the bottom right of the screen. The phone has a camera lens at the top and a keypad at the bottom.

7

EN

8

EN

V. Troubleshooting		
Problem	Possible Cause	Solution
Can't turn on	Dead battery	Charge for 100mins, then retry.
No connection	Paired device off / out of range	Turn on the paired device; keep within range
Can't take photos	Memory full	Delete old photos
Auto-shutdown	Low battery	Charge immediately.

9

END

CE FCC RoHS
Made in China

EN

veenixtoy@gmail.com

+1 (971) 391-2223 | Mon-Sun 8AM-5PM (PST)

 veenixtoy@gmail.com

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.