

Bluetooth FM Transmitter

Model: BT27

Safety Instructions

Read the instructions carefully before using this product. Avoid extreme temperatures. Do not use this product if it is broken. Do not disassemble this product without permission. Incorrect assembly may result in a risk of electric shock. Use original or certified cables. Unplug this product before attempting any maintenance or cleaning. Exposing this product to open flames may cause it to explode. Use a dry, soft lint-free cloth to clean. Always obey traffic laws and pay attention to the road.

Notice

This product complies with the radio interference requirements of the European Community.

Package Content

1x FM Transmitter
1x User Manual

Specifications

PMW: Wireless FM Transmitter
Model: BT27
HYIN: BT27
Hardware Version: BT27-AC6956C-V1.0
Software Version: V1.0
Wireless Version: V5.4
DC Input: 12V-24V
Bluetooth Frequency Range: 2402.00-2480.00MHz
FM Frequency Range (US/CA): 88.1-107.9MHz
FM Frequency Range (JP): 76-108.0MHz
FM Frequency Range (UK/EU): 87.5-108.0MHz
FM Transmting Power (UK/EU): -46.80m(EIRP)
Receiver Category: 2
Extreme Temperature: -20-45℃
The USB port in product shall only be connected to a USB interface of version USB3.0 and below.
Wireless Connection Distance: 10m
PD30W Charging port: 5V/3A, 9V/3A, 12V/2.5A

Button operation function

CH-	Short press	FM frequency goes down
CH+	Short press	FM frequency increases
Multifunction button	Right rotation	Volume Up
	Rotate left	Volume Down
	Short press	Play/Pause
	Press and hold for 5 seconds	Reject a call
Incoming call mode	Short press	Respond
	Press and hold for 5 seconds	Reject a call
	Short press	hang up
	Press twice briefly	Call back
During a call	Press and hold	Switch between private (mobile) and hands-free calls.
	Press and hold for 5 seconds	Press and hold to activate Siri/Google Assistant
* BASS + button	Short press	Enter low volume mode
Light button / power button	Press and hold for 5 seconds	FM transmitter ON/OFF
	Short press	Ambient lighting ON/OFF

How to Install

1. Start the car, insert the FM transmitter into the car cigarette lighter.
The LED display will show the car battery voltage first, then "FM frequency," if not, the power button "⏻" on the side of the transmitter for 3-5 seconds to turn it on.

Tips: If the display has been turned on, but the LED light is not on, you can press the "⏻" button to turn on the light.

2. Tune your car radio to a clean, empty station with no programming.
Tips: What is a blank station? A blank station is a channel with no programming or no broadcasting. There is only a slight rustle sound.

USB Flash Drive Playing

If you want to use the U disk to play music, please also set up the device from step 1-3, then insert the U disk into the USB flash drive port "d". The transmitter will read the U disk and play music automatically.

If not working

(1) Please confirm if the U disk is in FAT32 format.
Tips: (U disk music files should support playing music in folders, please do not store the songs in folders by category.)

Music Playing Function:

1. **Volume Adjustment**
turn left "⏮" for volume-
turn right "⏭" for volume+

2. **Music Control**
Press "⏮" to play/pause music

3. **3.Bass Sound Adjustment**
Press "b" button

Phone Calling Function

1. Press "☎" to answer or hang up the call
2. Press "☎" twice to call back
3. Press and hold "☎" for 5 seconds to reject coming call
4. Press and hold "☎" during a call to switch Handset/Hands-free answering mode

Turn on/off the FM Transmitter

If you want to listen to the car radio or when you leave the car, you can press and hold the power button "⏻" for 5 seconds to turn on the FM transmitter. The Wireless function will be turned off then, but the USB charging function will still work.

Can not play USB flash drive

1. Check if the capacity of the USB flash drive is within 64GB.
2. Check if the USB flash drive is in FAT32 format.
3. Music can not be put into folders.

Can not play phone music

1. If the wireless is connected successfully, make sure you have used a blank radio station and make sure the station on the transmitter is set to the same one as the radio.

Can not hear the voice of other party

1. Try to press and hold the "☎" button during a call to switch from "Handset Mode" to "Hands-Free Mode".

Activate Phone Voice Assistant

Press and hold "☎" for 5 seconds to activate voice assistant, such as Siri & Google assistant.

USB Charging Function

The port marked with "PD30W" supports type C PD 30W fast charge. The max output of the port is 5V/6A when both of the ports work simultaneously.

Trouble Shooting:

Transmitter does not turn on
1. Press and hold the power button "⏻" for 5 seconds to turn on the transmitter.
2. Check if the cigarette lighter is functional.

Can not play USB flash drive

1. Check if the capacity of the USB flash drive is within 64GB.
2. Check if the USB flash drive is in FAT32 format.
3. Music can not be put into folders.

Can not play phone music

1. If the wireless is connected successfully, make sure you have used a blank radio station and make sure the station on the transmitter is set to the same one as the radio.

Can not hear the voice of other party

1. Try to press and hold the "☎" button during a call to switch from "Handset Mode" to "Hands-Free Mode".

Activate Phone Voice Assistant

Press and hold "☎" for 5 seconds to activate voice assistant, such as Siri & Google assistant.

Sound is not good

1. The original FM station chose might be busy or not clear enough, please try to use another blank FM station.
2. For the best audio quality, please set the volume of your phone and FM transmitter to the max, and then adjust the car volume to an appropriate level.

Transmitter beeps, keeps out of syn or radio changes station by itself

1. Please turn off or disable the "TA" function if there is a "TA" button on your car to avoid interference when you use this product.

Precautions for safe use (please be sure to follow these instructions)

- Use with the specified power supply voltage.
- This may cause fire, electric shock, or malfunction.
- If thunder starts to rumble, do not touch this product or any cables or plugs. Please do not be.
- There is a risk of electric shock due to lightning strikes.
- Do not touch this product with wet or dirty hands.
- This may result in electric shock or malfunction.
- If dust or dirt accumulates on the accessory socket of this product, do not install the product while it is in this position.

FC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference, and

2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

CE FC

219-259108

MADE IN CHINA

HUNDiR Wireless FMトランスミッター 型番: F27 取扱説明書

保証書とアフターサービスについて
ご使用中、もし何かご質問、ご相談などがございましたら、ご注文先、販売店、お問い合わせ先までご連絡ください。24時間いつでも誠意に対応させていただきます。
万が一、初期不良、何か不具合があった場合は至急新品交換、全額返金、返品サービスをお対応いたします。ご安心ください。

お問い合わせ先: hundirect@outlook.com
受付時間: 9:00-18:00 平日のみ (土・日・祝日・当社休業日を除く)

※レシートや納品書などの購入証明書を、ご購入日を証明する大切な書類となりますので、保証規定と併せて大切に保管してください。
※マニュアルの記載に従った正常状態で故障した場合に、保証期間内容に基づき修理または交換を無償で致します。
保証期間内でも以下の場合の修繕または交換は有償となります。
弊社および弊社が指定するサービス機関以外で修理、調整、改造された場合。
マニュアル、文書、説明ファイルに記載の使用方法、および注意に反する取り扱いによって生じた故障、損傷の場合。

この度は、お買い上げいただき誠にありがとうございます。この取扱説明書には、本製品の使用方法や安全にお取り扱いいただくための注意事項が記載されています。ご使用前に必ずよくご覧ください。
読み終わってもよいので取扱説明書は大切に保管してください。
デザイン・仕仕について改良のため予告なしに変更することがあります。
本書に記載の社名及び製品名は各社の商標又は登録商標です。

最初にご確認ください
お使用になる前に、セット内容がすべて揃っているか、注文内容、付属品、お買い合せ内容などについて、足りないものがないか、確認してください。不足の品がございましたら、お問い合わせください。

セット内容

- FMトランスミッター x1台
- 取扱説明書(保証書(本書)x1部

商品仕様

型番	B127
適合規格	Wireless Ver.5.4
対応周波数	FM100MHz
FM周波数	121~240MHz
出力電力	DC12~24V
Type-C出力	DC12~24V
出力電力	760~1080MHz
Type-C出力	5V-3A/9V-3A/12V-2.5A (PD30W) 最大
出力電力	10~40°C
保存温度範囲	20~60°C
ポート数	3ポート
Type-C充電ポート	2ポート
Type-C充電ポート	2ポート
Type-C充電ポート	2ポート

対応オーディオフォーマット
MP3/WAV/FLAC
LDA対応 5.4GHz (FA12/F3/F4/F5/F6/F7/F8/F9/F10/F11/F12/F13/F14/F15/F16/F17/F18/F19/F20/F21/F22/F23/F24/F25/F26/F27/F28/F29/F30/F31/F32/F33/F34/F35/F36/F37/F38/F39/F40/F41/F42/F43/F44/F45/F46/F47/F48/F49/F50/F51/F52/F53/F54/F55/F56/F57/F58/F59/F60/F61/F62/F63/F64/F65/F66/F67/F68/F69/F70/F71/F72/F73/F74/F75/F76/F77/F78/F79/F80/F81/F82/F83/F84/F85/F86/F87/F88/F89/F90/F91/F92/F93/F94/F95/F96/F97/F98/F99/F100/F101/F102/F103/F104/F105/F106/F107/F108/F109/F110/F111/F112/F113/F114/F115/F116/F117/F118/F119/F120/F121/F122/F123/F124/F125/F126/F127/F128/F129/F130/F131/F132/F133/F134/F135/F136/F137/F138/F139/F140/F141/F142/F143/F144/F145/F146/F147/F148/F149/F150/F151/F152/F153/F154/F155/F156/F157/F158/F159/F160/F161/F162/F163/F164/F165/F166/F167/F168/F169/F170/F171/F172/F173/F174/F175/F176/F177/F178/F179/F180/F181/F182/F183/F184/F185/F186/F187/F188/F189/F190/F191/F192/F193/F194/F195/F196/F197/F198/F199/F200/F201/F202/F203/F204/F205/F206/F207/F208/F209/F210/F211/F212/F213/F214/F215/F216/F217/F218/F219/F220/F221/F222/F223/F224/F225/F226/F227/F228/F229/F230/F231/F232/F233/F234/F235/F236/F237/F238/F239/F240/F241/F242/F243/F244/F245/F246/F247/F248/F249/F250/F251/F252/F253/F254/F255/F256/F257/F258/F259/F260/F261/F262/F263/F264/F265/F266/F267/F268/F269/F270/F271/F272/F273/F274/F275/F276/F277/F278/F279/F280/F281/F282/F283/F284/F285/F286/F287/F288/F289/F290/F291/F292/F293/F294/F295/F296/F297/F298/F299/F300/F301/F302/F303/F304/F305/F306/F307/F308/F309/F310/F311/F312/F313/F314/F315/F316/F317/F318/F319/F320/F321/F322/F323/F324/F325/F326/F327/F328/F329/F330/F331/F332/F333/F334/F335/F336/F337/F338/F339/F340/F341/F342/F343/F344/F345/F346/F347/F348/F349/F350/F351/F352/F353/F354/F355/F356/F357/F358/F359/F360/F361/F362/F363/F364/F365/F366/F367/F368/F369/F370/F371/F372/F373/F374/F375/F376/F377/F378/F379/F380/F381/F382/F383/F384/F385/F386/F387/F388/F389/F390/F391/F392/F393/F394/F395/F396/F397/F398/F399/F400/F401/F402/F403/F404/F405/F406/F407/F408/F409/F410/F411/F412/F413/F414/F415/F416/F417/F418/F419/F420/F421/F422/F423/F424/F425/F426/F427/F428/F429/F430/F431/F432/F433/F434/F435/F436/F437/F438/F439/F440/F441/F442/F443/F444/F445/F446/F447/F448/F449/F450/F451/F452/F453/F454/F455/F456/F457/F458/F459/F460/F461/F462/F463/F464/F465/F466/F467/F468/F469/F470/F471/F472/F473/F474/F475/F476/F477/F478/F479/F480/F481/F482/F483/F484/F485/F486/F487/F488/F489/F490/F491/F492/F493/F494/F495/F496/F497/F498/F499/F500/F501/F502/F503/F504/F505/F506/F507/F508/F509/F510/F511/F512/F513/F514/F515/F516/F517/F518/F519/F520/F521/F522/F523/F524/F525/F526/F527/F528/F529/F530/F531/F532/F533/F534/F535/F536/F537/F538/F539/F540/F541/F542/F543/F544/F545/F546/F547/F548/F549/F550/F551/F552/F553/F554/F555/F556/F557/F558/F559/F560/F561/F562/F563/F564/F565/F566/F567/F568/F569/F570/F571/F572/F573/F574/F575/F576/F577/F578/F579/F580/F581/F582/F583/F584/F585/F586/F587/F588/F589/F590/F591/F592/F593/F594/F595/F596/F597/F598/F599/F600/F601/F602/F603/F604/F605/F606/F607/F608/F609/F610/F611/F612/F613/F614/F615/F616/F617/F618/F619/F620/F621/F622/F623/F624/F625/F626/F627/F628/F629/F630/F631/F632/F633/F634/F635/F636/F637/F638/F639/F640/F641/F642/F643/F644/F645/F646/F647/F648/F649/F650/F651/F652/F653/F654/F655/F656/F657/F658/F659/F660/F661/F662/F663/F664/F665/F666/F667/F668/F669/F670/F671/F672/F673/F674/F675/F676/F677/F678/F679/F680/F681/F682/F683/F684/F685/F686/F687/F688/F689/F690/F691/F692/F693/F694/F695/F696/F697/F698/F699/F700/F701/F702/F703/F704/F705/F706/F707/F708/F709/F710/F711/F712/F713/F714/F715/F716/F717/F718/F719/F720/F721/F722/F723/F724/F725/F726/F727/F728/F729/F730/F731/F732/F733/F734/F735/F736/F737/F738/F739/F740/F741/F742/F743/F744/F745/F746/F747/F748/F749/F750/F751/F752/F753/F754/F755/F756/F757/F758/F759/F760/F761/F762/F763/F764/F765/F766/F767/F768/F769/F770/F771/F772/F773/F774/F775/F776/F777/F778/F779/F780/F781/F782/F783/F784/F785/F786/F787/F788/F789/F790/F791/F792/F793/F794/F795/F796/F797/F798/F799/F800/F801/F802/F803/F804/F805/F806/F807/F808/F809/F810

未注公差要求 (mm)		名 称		型号	
尺寸小于1	±0.05	制图	日期	比例	1:
尺寸小于20	±0.10	设计	日期	材料	
尺寸小于50	±0.15	审核	日期	重量	
尺寸小于100	±0.20	深圳市博美斯实业有限公司			
尺寸小于160	±0.25				