 


T24

Wireless Earbuds

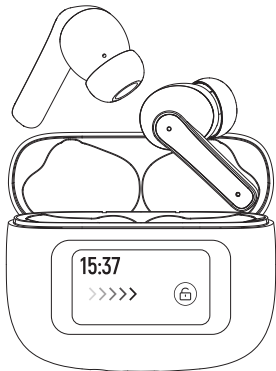

User Manual


Please read this manual carefully before use and keep it properly.

CONTENTS

Product Overview	01
Type-C Charging Cable	02
Power On & Bluetooth Connection	02
Reset Earbuds	04
Power Off	05
Touch Operation Instructions	06
Power Button	07
LCD Touch Screen Operation	07
Charging Instructions	11
Specifications	12
Question & Answer	14
Safety Instructions	16
Warning	17
After-Sales Service	18

Product Overview

 Charging Case



① Charging Port of the Case

② LCD Touch Screen

 
③ Charging Case

④ Power button

⑤ Type-C Charging Port

⑥ Charging Pin

Earphones



① Ear tips

②/③ Speaker vent hole

 
④ Charging indicator light hole

⑤ Touch area

⑥ Microphone hole

⑦ Charge Pin


Type-C Charging Cable



Type-C Charging Cable



 Earbuds Tips (S/M/L)
(M size pre-installed on the earphones)

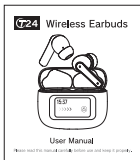

English User Manual


- ※ Insulating stickers are attached to the left and right earphones When purchased. Before use, pinch the raised part and peel them off and choose the appropriate size earbuds tips.

Power On & Bluetooth Connection

Power on

Automatic

Take out the earbuds from the charging case, they will power on automatically and prompts "power on".

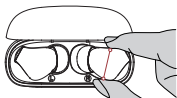

Tips for quickly removing earbuds

Manual

When the earbuds are OFF, keep pressing the touch button of L/R earbud for 5 seconds.



Bluetooth connection

1. Open the charging case and take the earbuds out of the case. Make sure they are "power on".
2. Select the [T24] from device list in your Bluetooth settings.
3. After connection, the Bluetooth icon in the upper left corner of the LCD screen will change to white and prompt "connected".



Note: When re-pairing, remove one or both earbuds from the charging case and the earbuds will automatically connect to your phone.


Reset Earbuds

When should you reset your headphones?

1. When your phone's Bluetooth connection can't find the headphones.
2. When there's a delay in the sound from the headphones.
3. When the sound from the left and right headphones is out of sync.

Reset steps


1. Make sure the headset is not connected and delete pairing record on the phone.
2. Simultaneously tap both earbuds 5 times to receive the "power off" prompt.
3. Put earbuds back to charging case, and repeat the pairing operation.

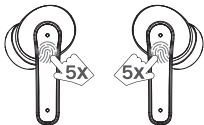

Power Off

Automatic:

Put the earbuds into the charging case, they will power off automatically.

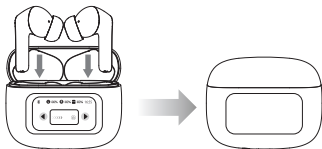

Note:

1. When you turn off both earphones on both sides, the Bluetooth icon on the top left of the LCD screen of the charging device will change to red.
2. If the earbuds are away from the phone or the phone's Bluetooth is turned off, earbuds automatically switches off after 5 minutes.

Touch Operation Instructions

	Tap L / R 2 times for Answer/End Calls
	Hold L / R for 3 secs to Reject Calls
	Tap L / R for Play/Pause
	Tap R 2 times for Next
	Tap L 2 times for Previous
	Tap L / R 3 times for ANC/Transparency mode (Click in rapid succession)
	Tap L / R 4 times to Activate Voice Assistant
	Hold R for Volume UP (Click in rapid succession)
	Hold L for Volume Down

Power Button



●		Press once for Screen Lock/Unlock
● ●		Press 2 times for Power Off/Restart/Factory Reset
—		Press and hold for 5 seconds for Restart directly

LCD Touch Screen Operation

If there is no operation for a long time, the display will be off. You can activate the display by pressing the power button at the bottom or reopening the earphone compartment.

Lock Screen

Swipe from left to right to enter the operation page



Music Playback Control

Tap to play/pause or skip forward/backward through songs.



Volume Control


Adjust the volume following the on-screen instructions to decrease or increase the sound.



ANC Mode Settings

You can select the optimal noise cancellation mode based on your usage. (The default mode is Normal mode.)

- ① Normal Mode
- ② ANC Mode
- ③ Transparency Mode

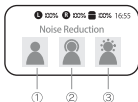

Equalizer Settings

The equalizer offers five modes: Normal, Rock, Pop, Classical, and Jazz. You can switch between these modes to find your preferred sound.



Alarm Settings

Set alarms as needed. (The alarm is only played through the earphones and cannot be played externally.)
(5min / 10min/60min / 60min)



Brightness Settings

Adjust the brightness as instructed on the screen to make it clearly visible.




Language Settings

Switch between languages of your choice.



Screen lock wallpaper

There are 5 images stored in the headset, you can choose one (customization is not currently supported).

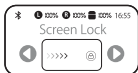

Find Earbuds Function

Tap the "L Earbud/R Earbud" icon, then follow the on-screen instructions to locate each earbud.

Find My Earphone

※ The earbuds must be powered on.

※ The earbuds must be within Bluetooth connection range.



Time and Date


In addition to confirming the time and date, you can also set time calibration.



Camera Function

Press the camera icon to remotely trigger the shutter button on connected devices such as smartphones.

- ※ To use this feature, grant permission through your smartphone during the initial pairing.
- ※ When using headphones to remotely control the camera, please open the camera page on the device in advance.

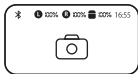

Lighting Function

After pressing the "Power On" button, the touch screen will emit a white light. Click any area again to return.




Charging Instructions

Charging the Earphone Case

- ※ Before the first use, please fully charge the product using Connect the Type-C cable to the Type-C port on the earphone case.
- ※ Charging and playback times may vary depending on the operating environment.

Charging the Earphones


Place the earphones into the charging case and close the lid.

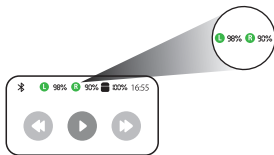

Note: Ensure the earphones are correctly placed in the charging case. If the left and right earphones are placed incorrectly in the charging case, the charging contacts on the earphones will not connect to the charging pins in the earphones not charging.

Charging Earphone Case

1. Connect the Type-C cable to the Type-C port on the earphone case.
2. Plug the charging cable into a USB port on your computer, or use a commercially available USB-compatible power adapter and connect it to a power outlet.

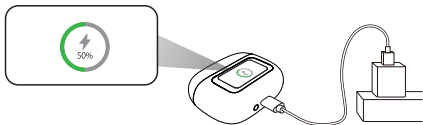

- When the earphone battery drops below 20%, a voice prompt will say, "Battery is Low, Please Charge."
- When the charging case battery is below 10%, the LCD screen will display a red battery icon.

FCC ID: 2BBOA-T24

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

(This label will also be reflected on the product packaging box)

Specifications

Model	T24
Bluetooth	6.0
Maximum Communication Range	Up to approximately 15 meters (line of sight)
Frequency Response	20Hz - 20kHz
Supported Profiles	A2DP,AVCTP,AVDTP,AVRCP, HFP,SPP,RFCOMM,PNP,HID,SDP
Compatible Devices	iOS, Android, Windows
Battery	500mAh
Earphone Charging Time	Approximately 1.5 hours
Individual Earbud Weight	Approximately 4.4g
Charging Case Weight	Approximately 50.0g

Question & Answer

Q1: Can the earbuds connect to multiple devices at the same time?

A1: No. The earbuds can only pair with one device at a time. To connect to another device:

1. Disconnect the earbuds from the current device.
2. Turn on Bluetooth on the new device and pair again.

Q2: What devices are compatible with the earbuds?

A2: The earbuds work with all Bluetooth-enabled devices, including:

- iPhone / iPad
- Android phones / tablets
- Laptops and smartwatches

They perform perfectly with both iOS and Android systems.

Q3: What should I do if there's sound delay or the audio between earbuds is out of sync?

A3: Try the following steps:

1. Ensure the Bluetooth signal is stable (stay within 10 m, avoid walls/obstacles).
2. Put both earbuds back into the charging case.
3. Turn off Bluetooth on your device and delete the previous pairing record.
4. Reconnect the earbuds.

If the issue continues, please reach out through your Amazon order page for assistance.

Q4: What should I do if the earbuds cannot connect to my device?

A4:

1. Make sure the earbuds are charged and your device's Bluetooth is turned on.
2. Delete any old pairing records and search again.
3. Place both earbuds into the charging case, close it, then reopen and retry pairing.
4. Ensure your device supports Bluetooth 5.0 or above.
If you still can't connect, please contact support via Amazon.

Q5: What should I do if the charging case doesn't charge?

A5:

1. Check that the charging cable and adapter are working properly.
2. Ensure the port is clean and free of dust.
3. Use a standard 5 V / 1 A adapter.
4. If the indicator light doesn't turn on, try another cable or adapter.
If the issue persists, contact our support team.

Q6: What should I do if the earbuds don't charge?

A6:

1. Place the earbuds correctly in the charging case.
2. Check that the charging pins are aligned.
3. Clean the metal contact points with a dry cotton swab.
4. Long-press the earbuds for 5 seconds to reset, then test again.
If they still don't charge, contact support for a replacement or repair.

Q7: Are the earbuds waterproof?

A7: Yes. The earbuds have an IPX7 waterproof rating, making them resistant to sweat and light rain—ideal for workouts, running, and outdoor use.

 Do not use while swimming, showering, or under heavy water flow.

Safety Instructions

1. When walking, remove the earphones or wear only one earbud, and pay close attention to traffic conditions to avoid accidents.
2. Turn the volume down to the lowest setting before use. Avoid excessive volume, which can damage your hearing.
3. Do not use this product if it has been dropped into flammable materials or liquids (such as water).
4. Opening the interior may cause a malfunction or electric shock.
5. Do not touch the interior. Furthermore, if the interior has been manually modified, we cannot guarantee its performance.
6. Do not charge or touch the charging port with wet hands. This may result in electric shock.
7. If you feel any discomfort while using this product, discontinue use immediately.
8. If you wear a medical device such as a pacemaker, consult a doctor before use.
9. Keep this product out of the reach of young children to avoid accidental ingestion.

Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

After-Sales Service

30-Day Free Return + 12-Month Warranty

This product includes a 12-month limited warranty. If any performance issues occur within 30 days of purchase, please reach out through your Amazon order page for assistance or replacement.

After-Sales Service Guide

This product comes with a 12-month warranty. If you have any questions about your device, encounter technical issues, or suspect a malfunction, please contact us. When inquiring, please provide the following information so we can respond as quickly as possible:

- Order Number
- Problem/Symptom

Contact Path

1. Orders Support:

Go to Your Orders → Contact Seller → Describe issue

2. Direct support:

Visit seller storefront - Click "Ask a Question"