

Product Parameters(English)

1. Transmission distance: about 10 meters
2. Use time: about 8 hours
3. Charging time: about 1.5 hours
4. Battery capacity: 80mAh/3.7V
5. Product Weight: 16g (without packaging)

Feature

1. Switch the machine on and off: Hold down the function key for 3 seconds
2. Answer a call: Press the function key once when a call comes in
3. Reject calls: Hold down the function key for 2 seconds when an incoming call comes in
4. Hang up: Press the function key once during a call
5. Voice switch: Double-click the function button after the device is powered on (when the phone is not connected)
6. Play music: Open the mobile phone player and press the function key to play/pause
7. Up and down music: When playing music, press the key twice to switch to the previous track, and press it three times to switch to the next track.

Charging instructions

1. Charging power supply: AC input 110-240V~50/60Hz DC output 5V, 2A
2. Operating Frequency Band: 2.400 – 2.4835 MHz

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with

the limits for a Class B digital device, pursuant to part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.