

Marshall


BROMLEY 450 - PARTY SPEAKER

MARSHALL.COM

QUICK START GUIDE

CONTENTS

 ①

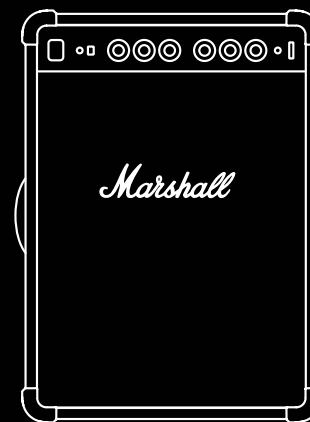

②



③



④



1. MARSHALL BROMLEY 450

Bluetooth® party speaker with microphone & instrument inputs, effects, and lights.

2. MARSHALL BATTERY

45-Watt power bank for Bromley (preinstalled in the speaker).

 
3. QUICK START GUIDE AND LEGAL & SAFETY INFORMATION

Read the Legal & safety and follow the Quick start guide before using the speaker.

4. MAINS LEAD (REGION SPECIFIC)

Connects Bromley 450 to a wall socket.

SPEAKER LAYOUT

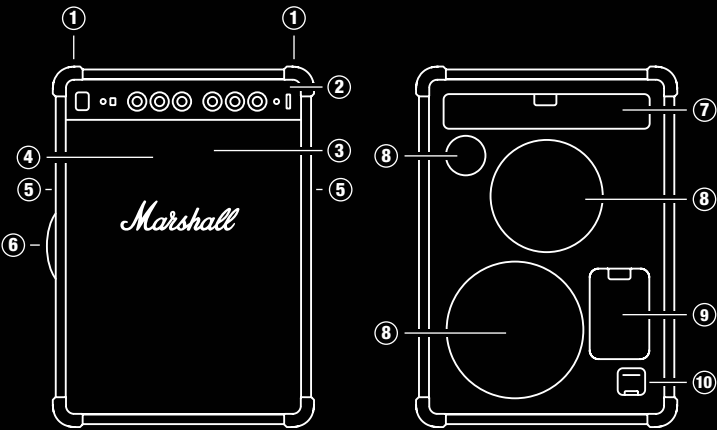


- 1. ANCHORS FOR CARRYING STRAP
- 2. FRONT PANEL
- 3. FRONT DRIVERS

- 4. LIGHT PANEL
- 5. SIDE DRIVERS
- 6. CARRYING HANDLE

- 7. INPUT PANEL
- 8. REAR DRIVERS
- 9. BATTERY HATCH
- 10. MAINS POWER

 BATTERY AND POWER

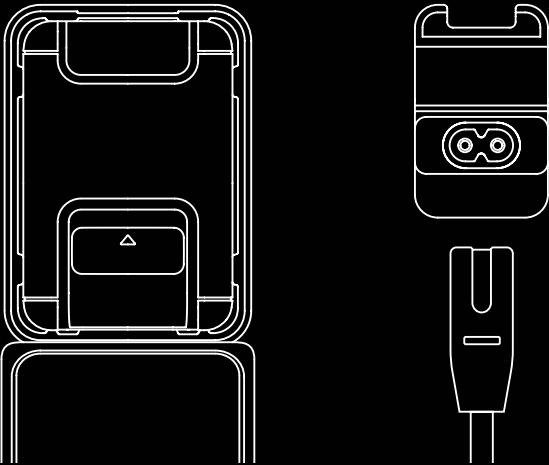

BATTERY SOCKET


Open the hatch to access the battery. Grab the battery while pressing the lock button, then pull to remove it. Insert the battery and push it until you hear a click to install it. The battery is charging when Bromley 450 is plugged into a mains socket.

MAINS POWER INPUT

Open the mains input hatch to access the power input. Connect the mains lead to the speaker and then to the wall socket to power the speaker and charge the battery.


Caution: Always unplug the mains lead from the wall socket before disconnecting it from the speaker.

SIGNAL FLOW

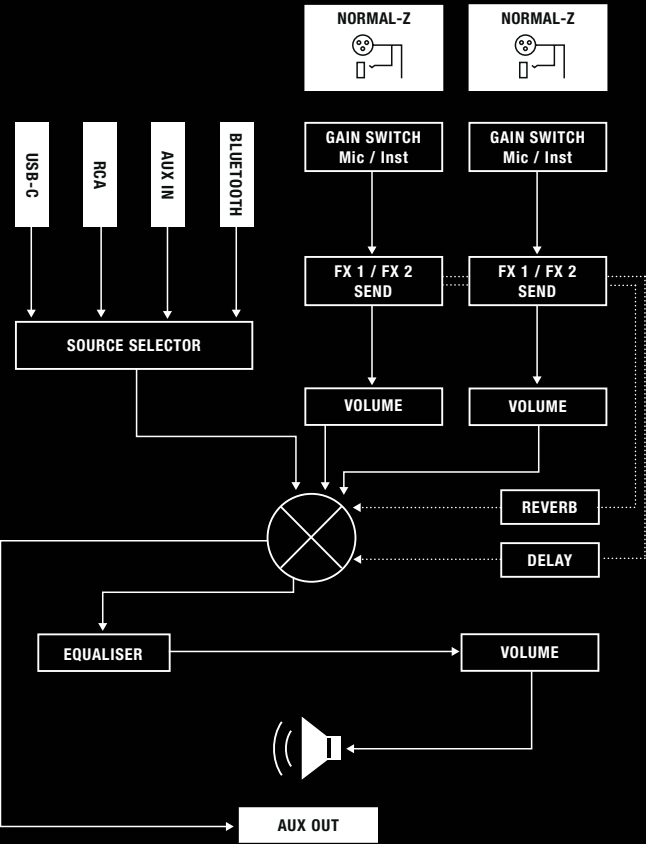

All intellectual property in the product and packaging (including the Marshall trademark, copyright, designs, and patents) are owned by Marshall Group AB and may not be used without permission. All rights reserved. The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Marshall Group AB is under license. Google Play is a trademark of Google LLC. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Marshall Group AB, Centralplan 15, 111 20 Stockholm, Sweden. www.marshall.com

FRONT PANEL

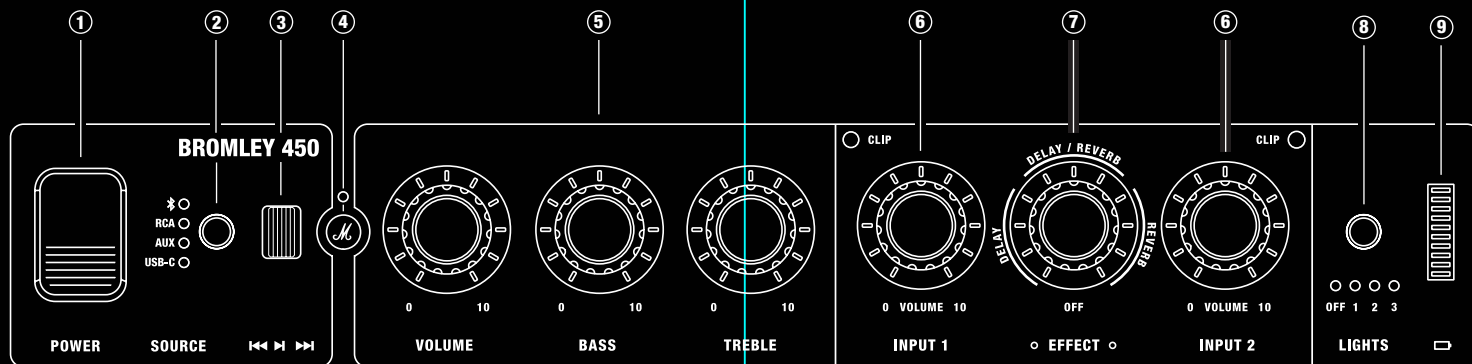

1. POWER SWITCH

Turns the speaker on or off.

2. SOURCE SELECTOR

Use the source selector button to select Bluetooth then push and hold it until the LED start blinking.

3. MEDIA CONTROL

Play, pause, or change track when playing via Bluetooth.

4. AUDIO CONTROLS

Adjust the volume, bass, and treble.

5. CUSTOMISABLE M-BUTTON

Assign a custom action for the M-button in the Marshall app.

6. INPUT 1 AND INPUT 2 VOLUME CONTROL

Each input channel has a dedicated volume control and a clip indicator to indicate if the input is too loud.

7. INPUT 1 AND 2 EFFECT CONTROL

Push the knob to toggle between input 1 and 2, then turn it set an effect and its level for the selected input.

8. LIGHT MODE BUTTON


Push the button to select light mode.

9. BATTERY INDICATOR

The 10-segment battery indicator shows the battery charge.

Pushing the Source selector and the Light mode buttons for 2 seconds will enable or disable the child lock.

GETTING STARTED

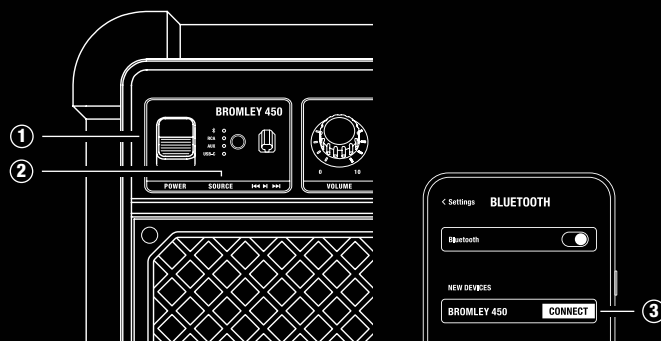

1. POWER ON

Push the power switch to turn on the speaker.

2. START PAIRING


Use the source selector to select Bluetooth and then push and hold the button until the LED start blinking.

3. SELECT BROMLEY 450

Open your audio device's Bluetooth list and select BROMLEY 450.

Download the Marshall app to get the most out of your speaker. The full user manual is available in the app or at marshall.com

INPUT PANEL

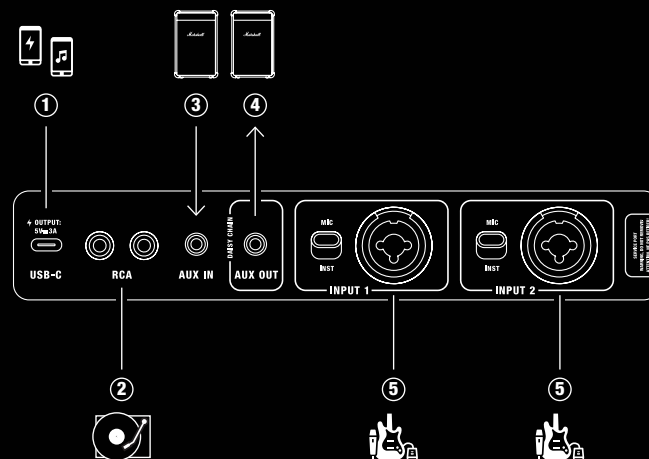

1. USB-C PORT

Connect a USB-C audio device or any other USB device to charge it.

2. RCA INPUTS

Plug in an RCA audio device, such as a DJ mixer or turntable with a RIAA preamp.

3. AUX INPUT

Plug in an audio device with an analogue output and a 3.5 mm stereo jack.

4. AUX OUTPUT

Connect to the AUX in on a Bromley party speaker and create a bigger sound system.

5. INPUT 1 AND INPUT 2

Connect a music instrument or microphone to the XLR/6.3 mm TRS combo jack. The switch sets the input gain +4 dBm or +18 dBm.

Note: An electric guitar should always be connected through a preamp or effect pedal.

