 


单页75×100mm, 页间留存0.5mm折痕线
单色印刷
风琴折



AR

 


<https://global.machenike.com/>
<https://global.machenike.com/pages/warranty>
 中文: www.machenike.com



10

微信公众号




Warning:


Do not disassemble, strike, squeeze, or throw this device into fire. Do not expose it to high temperatures or use it after water immersion. Use this device with the included cable and keep it out of reach of children. Some products contain batteries; do not continue using the device if the battery becomes swollen. Replacing the battery pack with an incorrect model may disable safety protection features. Do not disassemble or repair this product without professional qualifications; improper handling may cause further damage or personal injury.

Do not disassemble, poke, squeeze, or throw this device into fire. Do not expose it to high temperatures or use it after water immersion. Use this device with the included cable and keep it out of reach of children. Some products contain batteries; do not continue using the device if the battery becomes swollen. Replacing the battery pack with an incorrect model may disable safety protection features. Do not disassemble or repair this product without professional qualifications; improper handling may cause further damage or personal injury.

 ذکر:

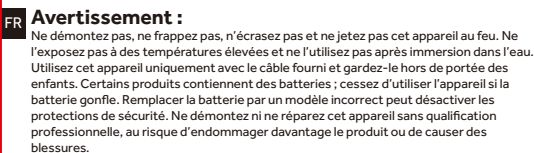

PT Aviso: Não desmonte, golpeie, pressione ou jogue este dispositivo no fogo. Não exponha a altas temperaturas nem o utilize após imersão em água. Utilize este dispositivo apenas com o cabo incluído e mantenha-o fora do alcance de crianças. Alguns produtos contêm bateria; pare de usar imediatamente se a bateria inchar. Substituir por um modelo incorreto pode desativar os recursos de segurança. Não desmonte ou repare o produto sem qualificação profissional; manuseio inadequado pode causar danos ou ferimentos.

 

Uyarı: Bu cihazı sökmeyin, vurmayın, sıkıştırmayın veya ateşe atmayın. Yüksek sıcaklıklara maruz bırakmayın ve suya daldıktan sonra kullanmayın. Cihazı yalnızca birlikte verilen kablo ile kullanın ve çocukların erişemeyeceği yerde tutun. Baza ürünü pil için; pil şişerse cihazı kullanmayın birakın. Yanlış pil modeli kullanımı güvenliğini korumasını devre dışı bırakabilir. Profesyonel yeterlilik olmadan cihazı sökmeyin veya tamir etmeyin; yanlış kullanımı hasara veya yaralanmaya neden olabilir.

2 Cảnh báo: