

料号: 416-DS17091-OR00R

7b

 
ARC

Step 1, Turn off the SPEAKER and TV, connected the SPEAKER to the TV through the optical cable. **(Remove the white cover on cable).**

Step 2, Turn on the SPEAKER, press the "MODE" on the SPEAKER remote, then select the input mode "ARC" which is shows on the LED display.

Step 3, Turn on the TV, press the home on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** or turn off **TV speaker**, save the **setting**, then back to **audio** (sound setting) → select **expert setting** → **digital audio output** (or optical output) → select **PCM** (some TV called **SPDIF** or **ARC**). Save the **setting**.

Step 4, Play TV show to test the SPEAKER.

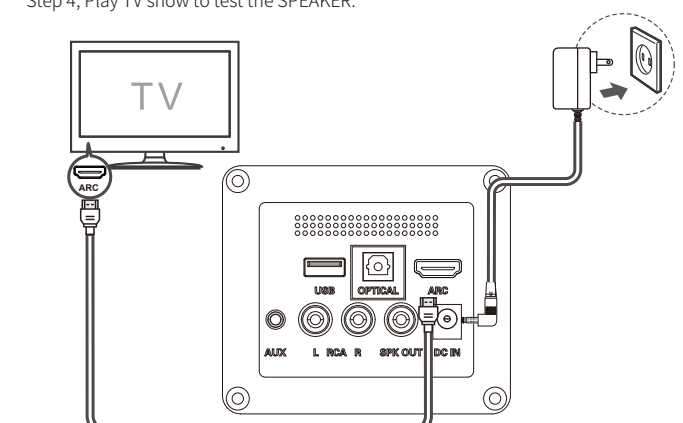

Kindly Note: for optical connection, please change TV audio output to PCM(or SPDIF and ARC) and external speaker, otherwise you will get cracking noise or no sound.

7c

 
AUX

Step 1, Choose line in cable (3.5mm to 3.5mm) or RCA cable connect the SPEAKER to your TV.

Step 2, Turn on the SPEAKER, press the "MODE" on the sound bar remote, then select the input mode "AUX" which is shows on the LED display.

Step 3, Turn on the TV, press the **home** (or menu) on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** (turn off TV speaker), save the **setting** (For some TVs, please back to **audio(sound)** → select **analog output** → select the **<Variable>**, save the setting).

Step 4, Play TV show to test the SPEAKER.

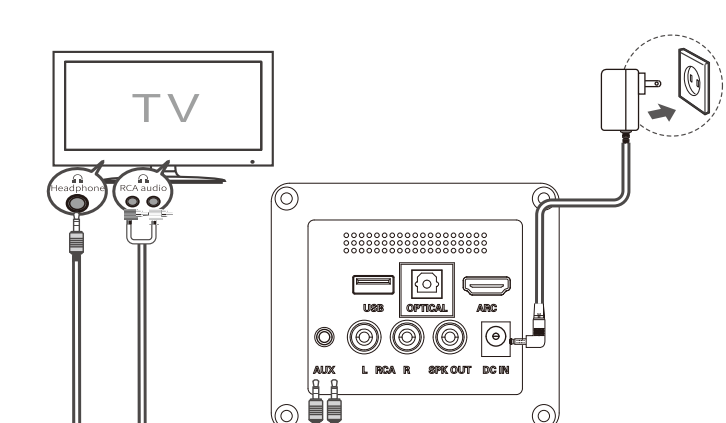

3.5mm to 3.5mm cable (not supplied)

7d

BT

 
The BT connection

1, Press the "MODE" on the SPEAKER remote, then select the input mode "BT" which is shows on the LED display, the "BT" will be flash.

2. Turn on BT on the BT device. (see the device's manual for more information)

3. Select **"OR-01"** from the device BT list, connect it. When your BT device is connected, the LED display will stop flash.

4. Play music from the BT device to test the SPEAKER.

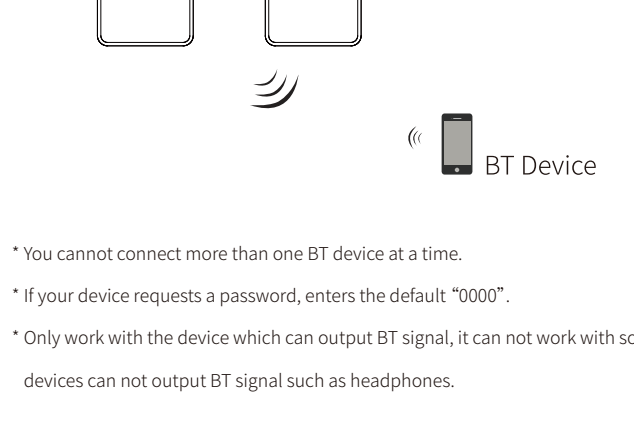

BT Device

 
7e

USB

1. Connect your USB drive to the USB jack on the SPEAKER.

2. Press the "MODE" on the sound bar remote, then select the input mode "USB" which is shows on the LED display.

3. Play music to test.

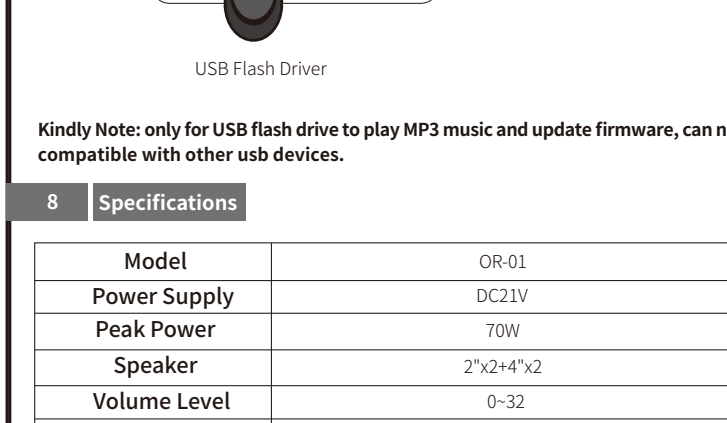

USB Flash Driver

Kindly Note: only for USB flash drive to play MP3 music and update firmware, can not compatible with other usb devices.

8

Specifications

Model	OR-01
Power Supply	DC21V
Peak Power	70W
Speaker	2"x2+4"x2
Volume Level	0-32
BT Version	5.0
Distortion	<1%
Product Weight	4.3kg
Product Dimension	5.7(L) x 6.1(D) x 9.4(H) inch

TV Brand	Setting Steps
Roku Stick	① Setting → Audio → Digital Output Format → Select Stereo. ② Setting → Audio → Audio Mode → Select Stereo.
Fire Stick	① Settings → Display & Sounds → Audio → Surround Sound → PCM
Samsung	① Setting → Sound → Sound Output → Turn off TV Speaker or select External Speakers. ② Setting → Sound → Expert Setting → Digital Output Audio Format → PCM.
Vizio	① Setting → Audio → TV Speakers → OFF. ② Setting → Audio → Digital Audio Out → PCM.
Sony	① Setting → Display&Sounds → Audio Output → Speakers → Audio System. ② Setting → Display&Sounds → Audio Output → Digital Audio Out → PCM. ③ Setting → Display&Sounds → Audio Output → Pass Through Mode → OFF.
LG	① All Setting → Sound → TV Speakers → OFF or select External Speakers. ② All Setting → Sound → Advance Settings → Digital Sound Output → PCM.
TCL Rock	① Setting → Audio → Audio Out → Auto. ② Setting → Audio → Digital Audio Format → Select Stereo.
TCL (Android system)	① TV Setting → Audio → TV Speakers → OFF or select External Speakers. ② TV Setting → Audio → Advance Setting → Digital Audio Out → Select PCM. ③ TV Setting → System → T.Link → Select ON.
Hisense Roku	① Setting → Audio → TV Speakers → Select Disabled. ② Setting → Audio → Digital Audio Out → Select Stereo.
ONN Roku	① Setting → Audio → TV Speakers → Select Disabled. ② Setting → Audio → Digital Audio Format → Select Stereo.
Sharp	① TV Setting → Sound → Advance Audio Setting → Digital Audio Out → Select PCM. ② TV Setting → Sound → Advance Audio Setting → TV Speakers → Select OFF or select External Speakers.
Sharp (Android system)	① Setting → Devices Preferences → Sound → Digital Output → Select PCM. ② Setting → Devices Preferences → Sound → Speakers → Select External Audio System.
Insignia Fire & Toshiba Fire	① TV Settings → Display & Sounds → Audio Output → TV speakers → Select OFF. ② TV Settings → Display & Sounds → Audio Output → Digital Audio Format → Select PCM.
Panasonic	① Menu → Audio Settings → Advance Audio → TV speakers → Select OFF. ② Menu → Audio Settings → Advance Audio → Digital Audio Out → Select PCM.

Kindly Note: TV settings may differ according to TV models difference, if the listed method can not work, or your TV is not listed, please contact us via service mail: support@goodsoundsonic.com, or contact the TV manufacturer for help, thank you!