

User's Guide

Android technology platform

Attention:

- The handbook contains important security measures and the correct use of the product information, in order to avoid accidents. The measures for reading the manual carefully before use the device.
- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature. Especially in summer don't put the device in the car when it's too hot.
- Avoid fall or violent contact of the device, don't make the TFT display screen abnormal or damage.
- Please increase the appropriate volume. Low headphones should not be too big volume. If feel tired, lower the volume or stop using it.
- Please charge in the following condition:
 - The battery power (LCD) shows near to power.
 - The system automatically shut off, starts after power off soon.
 - Operation buttons no response.
 - The machine that the top right corner show red icons.

- When the device in the format or ongoing upload and download file, please don't suddenly disconnect. This could cause application error.
- For those who because of damage to the product, repair, or other causes of loss of memory. The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol, thinner or benzene to scrubbing products.

- Don't use the device one of the place of prohibit to use electronics equipment in regional (such as the plane).
- Please don't using the Tablet PC when you in driving or walking down the street.
- USB just only be used for data transmission.

The company reserves the right to improve product, products specification and design have any change. The information is subject to changes without prior notice.

[Remark] All picture in this manual is just for your reference, products specification and design have any change. The information is subject to changes without prior notice.

- DC voltage
- For indoor use only
- RECYCLING
- Do not dispose of electric appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection system available. If electric appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- Polarity of d.c. power connector

1.Desk:



1.1 Touch panel
Capacitive touch panel. In the Operation, to click dragging on the touch panel.

1.2 POWER
Setting using Press and hold the power button, the system will enter the main interface.

1.3 Lock screen
Short press Power button to lock screen or unlock screen. Remark: When power is empty screen will shut down automatically.

1.4 BACK
Short Press BACK button will return the last interface.

1.5 BNC
Including:

- 1. Volume + Volume -
- 2. After low battery shut down screen DC voltage device will return low battery charging need to wait some time until the battery is enough power to enter the main menu.

1.6 headphone jack
3.5mm standard headphone jack.

1.7 TF card

TF card can use external TF/USB card.

1.8 Mini USB

Mini USB jack, you can use it to connect the computer for data transmission, charging and external connection USB data drive.

1.9 DC Adapter

For charging, you tablet battery.

1.10 Recovery

When the Tablet under the condition of the crash, upgrade firmware.

2. First use

2.1 Battery management and charge
Before first use, please use the device's battery is fully charged. Just need to connect the adapter or USB interface, then you can charge.

The first two times charging please keep about 5 hours, after that you just need 4 hours to charge.

[Remark] This tablet using Built-in type polymer battery. Charge must be choose standard output input AC110V-240V 50/60Hz Max 1000mA, Output: DC3.7-5.5V 1.5A, this device without support DC charging, USB interface can charge. Choose USB interface to charge. During the charging, the battery icon will exist.

When finished charging, battery icon will become green and stop rotating. In order to prolong the service life of the machine, suggest use out battery power below charge 1.

[Remark] 1. If you long time don't to use this tablet, in order to avoid power consumption caused damage, please charge this battery once a month.

2. After low battery shut down screen DC voltage device will return low battery charging need to wait some time until the battery is enough power to enter the main menu.

3. Device charging should be in stability status, for each normal charging time.
Because with device and screen consumption may cause longer

charging time.

2.2 Connection with PC

Use USB cable to connect device to PC device will stop up the USB connection windows like Turn on USB device to connect to PC.



Into the tool mode, you can copy, delete the file on the device and the file on the memory card.

3. Equipment operation interface

3.1 Main interface describe

After startup will enter the main interface.



 
In the main interface, you can:
Management: user interface software. CONG: long press the icon 3 second, after the screen will light, then you can drag anywhere in the

interface



Delete icons, long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red. Loosen your hand, after that you can delete icons.

You touch the screen image a time, appear the sliding bar. You can Home screen" or power down.



3.2 Status bar describe

- The status bar above of the screen.
Top left display main interface software, 11:58 am, USB connection status and so on.
The right display the battery charge status, current time, and some Settings items, ESC button.

3.3 Use touch panel

Device equipped with a touch screen. Following the main touch screen area is disabled, and describes some of the key for how to use the touch screen.

No matter which interface you are on the screen, you can go back to main screen through pressing the soft key **Back** on the bottom right corner of the main screen.

[Remark] The main screen soft key **Back** functions as the machine back key.

In different applications, by tapping the back key **Back**, the touch screen corner on the touch screen, you can return to the interface or the upper.

In different applications, by tapping the menu key **Menu** on the upper right corner of touch screen, the screen will appear the operation entry interface as follows.

 
[Remark] The main screen soft key **Menu** functions as the machine menu key.




In the main interface, you can long press the icon to open the APP. In different browser, music, video, pictures, You shift and drag the screen bar, so that the file list display or down level.

4. Equipment basic set

Setting: Click setting icon **Settings** enter setting interface.



 4.1 Silent mode, Volume, Notification, airplane, Audible selection screen tick sounds.



Or Review sources: Click "Online Sources", then click "OK".
Manage application manager and uninstall Application.

 
[Remark] when you Firmware Upgrade, pls close the USB connect.

How to install:
1. enter the setting>"Application">"Manage application". And then there will be installed the program list.

2. Click you want to uninstall icon, will enter the following interface.

3. Click Uninstall, then you can delete the application.

4.3 Privacy
Factory data reset



[Remark] You touch option "Device ID" card, all that can verify to verify the card.

4.5 Language & Keyboard
Language (Language), text input and automatic error correction options.



Select language: 24 kind of national languages are available.
Remark: Current system can support the kind of language, now menu interface just support 14 languages.
Android keyboard: Android keyboard setting.
Sound on: Keyboard.
Auto-correction:
Show suggestions: Display suggested words while typing.
Auto-capitalization: Sentence and punctuation automatically insert right-hand word.

4.6 Date & Time setting
Set date, set time, Select time zone and select date format.



4.7 Developer options
Choose USB work pattern: OTG/HOST/SLAVE.



5. Apps install and manage

5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the marketplace, can copy to NAND FLASH or SD card.

Click Application icon, will appear install, manage, Uninstall options.
Install: Click install, enter App install interface.
Settings: for viewing Memory data and SD Card data.
Select the APP, you would like to install, click it to install go back to main menu, will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory and downloaded 3rd party app may not install properly on device.

Click install icon, will enter App install interface.

6. Problem solution
6.1 Device can't to open
1. Check the battery power.
2. Connect adapter first, then check again.
6.2 After startup the screen or the opening picture has been repair, the device appear shutdown

1. Press is not enough, please change.
Headset can't hear the voice.
2. Pls check the volume whether set to 0.
3. Check the headset is whether damaged. Try playing other music, if the file tone damaged may need to various noise or two seconds.

6.3 Can copy the air play music and so on.
1. Pls check between computer and device is correct connection.
2. Check the memory storage space is already full.
3. About the USB settings question not.
4. USB connection is disconnected.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.