

使用说明书

OWS 蓝牙耳机

耳机x2pcs
充电仓x1pcs
Type-C充电线 x1pcs
说明书x1pcs

将耳机取出悬挂在耳朵上，悬浮挂耳式佩带，悬浮空气感轻盈贴合不入耳，全天候轻盈舒适久戴不累耳。

功能	操作	指示灯	提示音
配对的名称	M115		
开机	在充电和充电槽下方，按下电源/自动开机/耳机关闭按钮2秒，长按电源/自动开机/耳机关闭按钮5秒。	红灯交替闪烁5秒	Power on/开机
关机	耳机关闭或长按电源/自动开机/耳机关闭按钮10秒，长按电源/自动开机/耳机关闭按钮5秒。	红灯长亮后熄灭	Power off/关机
左右耳机关闭	左右耳机关闭后自动进入配对模式	左右耳灯同时熄灭，主机耳灯闪烁5秒后熄灭，耳灯闪烁1分钟	Connect to (连接或配对失败)
切换至英文显示	长按电源/自动开机按钮2秒，连续按压左右耳灯触摸键4次，进行语言切换。		English/中文
智慧设备连接	当耳机处于配对模式，自动进入待机连接状态，长按电源/自动开机按钮5秒，耳机关闭按钮5秒，M115 进行连接，耳机关闭按钮与智慧设备连接成功，有提示音，且耳机关闭按钮熄灭	左右耳灯光熄灭	Connected /连接成功
切换音乐/游戏模式	连接设备状态下连续左右耳灯触摸键4次，耳机关闭按钮5秒，耳机关闭按钮5秒。	/	音乐/游戏模式 MUSIC GAME
播放/上一曲	音乐播放模式已开启，双击任意左右耳灯触摸键一次	/	/
播放/下一曲	音乐播放模式已开启，连击左右耳灯触摸键三次	/	/
下一曲	音乐播放模式已开启，连击左右耳灯触摸键三次	/	/
播放/暂停	音乐播放模式已开启，单击左右耳灯触摸键	/	最大音量提示音
减小音量	音乐播放模式已开启，单击左右耳灯触摸键	/	/
语音助手	连接状态下，长按左右耳灯触摸键2秒，关闭/唤醒语音助手。	/	可听
接听来电	待机状态下，双击任意左右耳灯触摸键	/	手柄铃声/来电音
拒接来电	待机状态下，长按任意左右耳灯触摸键2秒	/	/
挂断电话	通话状态下，双击任意左右耳灯触摸键	/	/

耳机参数

- | | |
|--------------------------|--------------------------------|
| 1.产品名称:M115 | 10.喇叭额定功率:5mW |
| 2.蓝牙版本:Bluetooth 5.49 | 11.耳机电池容量:3.7V/40mAh (聚合物电池) |
| 3.支持模式:AAC/FSBC | 12.充电仓电池容量:3.7V/300mAh (聚合物电池) |
| 4.蓝牙传输距离:10m | 13.充电接口:USB Type-C |
| 5.载波频率:2.402GHz~2.480GHz | 14.耳机使用时间:≈4-5小时 |
| 6.频响范围:20Hz~20KHz | 15.耳机单次充电时间:≈1.5小时 |
| 7.喇叭尺寸:φ 13mm | 16.充电仓充电时间:≈1.5小时 |
| 8.喇叭灵敏度:100dB ± 3dB | 17.充电仓给耳机充电次数:约3-4次 |
| 9.喇叭阻抗:32Ω ± 15% | 18.关机待机电时:≈3000h/次 |

安全指引

1. 初次使用本产品前，请先充满电再使用。
2. 产品不是玩具，12岁以下的儿童必须在成人监护下使用。
3. 请避免通过任何第三方厂家认证的5V/1A充电器，避免支持高压快充的充电器对产品造成损坏。
4. 请在安全的环境下充电，在充电完成前请勿充电，电量充满后请尽快将充电器拔出，避免长时间充电造成充电器损坏。充电完成后请及时将充电器Type-C接口拔出。
5. 本产品内部不可拆卸的含有强电锂电池，重复拆卸充电器接口和故障将会造成时间推移而导致性能性下降，对于所有用户可以重复充电电池均属于正常现象。
6. 本产品支持有理论电池，如长时间未使用，请至少一个月充电一次。
7. 个别产品差异原因，如佩戴时感到皮肤不适，请停止佩戴并暂停使用。
8. 在佩戴本产品使用时候，请将耳机音量调至合适音量大小，以长期稳定在普通状态对于听力造成低危害。
9. 如您想从事需要集中注意力活动中使用本产品，应注意自身和他人的安全，例如驾车或骑行时请勿在，在道路、施工处、铁路上或步行行走时，您应取耳或降低音量以确保可以听到周围的声音。相关法规。
10. 本产品所在地区国家的相关法规，按照要求使用本产品。
11. 本产品含有腐蚀性材料，使用或存放产品时，请远离具有强磁场强电场的环境，如微波炉、电冰箱等。

警告

- 请遵循本说明书的内容进行使用, 避免产品因错误操作而损坏。
- 本产品请远离儿童使用, 防止儿童误触本产品, 造成火灾、触电、溺水及化学灼伤。
- 请勿长时间使用大音量收听, 以免对听力造成不良影响。
- 请勿将产品及附件浸入任何液体或用水冲洗产品, 否则会导致火灾或触电危险。
- 请勿将产品放置于长时间直射阳光或高温度的地方。高温会缩短电子部件的使用寿命, 损坏电池, 使产品性能暂时变化。
- 请勿将本产品存放于高温、湿度过高或高度过高的地方保存。
- 请勿将磁条卡(例如银行卡、公文卡等)长期接触本产品, 否则可能导致磁条卡被磁场损坏。
- 请勿在本产品上施加较大的压力、或拆卸、摔打、震动本产品, 以防产品损坏。
- 请勿将本产品靠近液体使用, 如热水、蒸汽、热油、热蒸汽等。炉灶或明火产生的仪器(例如燃气灶)附近使用本产品, 可能导致火灾、触电、烫伤、火灾等危险。
- 请勿在雷雨天气下使用本产品, 雷暴可能导致电击、火灾、触电、火灾的危险。
- 请避免本产品及其附件雨淋或受潮, 且长时间运动或出汗较多时使用本产品, 防止液体渗透进入内部损坏产品。
- 本产品属于正常合理管理电池, 不可更换, 请勿弄丢或混入火中, 以免爆炸、起火等危险发生。
- 如因产品质量原因上至警告而下至召回等不当使用所造成的个人人身财产损害将自行承担一切法律责任本公司不承担任何法律责任。



INSTRUCTION MANUAL

OWS Bluetooth earphones

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Take out the headphones and hang them on your ears, wearing them in a suspended ear style. The suspended air feels light and fits snugly without getting into your ears, making them lightweight.

Function	operate	Light	Tone
Pair	M15		
Boot	Headphones in the case of charging bit taps the headphones automatically boot/headphones off state, (long Touch Key 3 seconds to boot)	Red and blue lights flashes alternately	Power on/开机
Shutdown	Tap the earphone into the charging bit and shut down automatically the touch button for 5 seconds to shut down the earphone	The red light stays on for 3 seconds before turning off	Power off/关机
Pair the left earphones	The left and right earphones will automatically enter pairing mode after powering on	After successful pairing of the left earphone, the red and blue lights of the main headphones flashes alternately, and the height of the speaker can go up	Connect/配对成功
Toggle the English and English prompt tones	Without connecting the smart device, double-click any left/right ear touch key 4 times, the language switch factory default English		English/中文
Smart device connectivity	When the ear are successfully paired, it will allow to enter the time to connect to a device within 10 seconds. If the smart device search and click "M15" to connect, after the earphones are connected, the earphones will be a prompt tone, and the headset indicator will go up	The lights in the left and right ears are turned off	Connected /连接成功
Toggle Music/ Genre mode	Connect the device to the state of the left earphone touch button to toggle switching, the factory default music mode		音乐/游戏模式 MUSIC/GAME MODE
Play/Pause	After the music player starts, double-click any left/right headphone touch button	/	/
Previous song	After the music player starts, click the left earphone touch button three times	/	/
Next song	After the music player starts, click the right earphone touch button three times	/	/
Increase the volume	After the music player starts, click the touch button on the right headset	/	Maximum volume indicates (knock)
Reduce the volume	After the music player starts, click the touch button on the left headset	/	/
Voice assistant	Press the touch key of the left earphone touch button 2 seconds to open the voice assistant		Ding Dong
Answer an incoming call	When the call is incoming, double-click any left or right earphone function key		Ringtone of your phone

Headset parameters

- | | |
|--|---|
| 1. Product name: M115 | 10. Horn rated power: $\leq 5\text{W}$ |
| 2. Bluetooth version: Bluetooth 5.49 | 11. Headphone battery capacity: $\geq 3.7\text{V}/40\text{mAh}$ (polymer battery) |
| 3. Support mode: AAC/SBC | 12. Charging bin battery capacity: $3.7\text{V}/300\text{mAh}$ (polymer battery) |
| 4. Bluetooth transmission distance: $\geq 10\text{m}$ | 13. Charging interface: USB Type-C |
| 5. Carrier frequency: $2.402\text{GHz} \sim 2.480\text{GHz}$ | 14. Headset use time: ≥ 4.5 hours |
| 6. Frequency response range: $20\text{Hz} \sim 20\text{kHz}$ | 15. Standby time: ≥ 1.5 hours |
| 7. Horn size: $\Phi 13\text{mm}$ | 16. Charging time: ≤ 1.5 hours |
| 8. Horn sensitivity: $100\text{dB} \pm 3\text{dB}$ | 17. Charge the headset: About 3-4 times |
| 9. Horn impedance: $32\Omega \pm 15\%$ | 18. Shutdown standby time: ≥ 3000 hours |

Safety guidelines

1. Before using this product for the first time, please fully charge it before using it.
2. The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
3. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer of electronic products. Do not use a non-standard charger with unstable voltage output.
4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable as soon as possible after the power is fully charged to avoid damage to the charging cable and the charging case.
5. The product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the earbuds will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.
6. This product comes with a healthy battery, if it has not been used for a long time, please charge it at least once a month.
7. Please do not use the product when wearing it due to individual differences (please stop wearing it and consult a doctor).
8. When using this product with Bluetooth connection, please adjust the volume to an appropriate volume to avoid hearing damage caused by long-term loud volume.
9. If you use this product while engaging in activities that require concentration, you should pay attention to your surroundings, such as driving, walking, or walking. You should remove your headphones or adjust the volume to ensure that you can hear the sounds around you, including alarms and warning signals.

warn

- Please follow the content of this manual to avoid damage to the product due to incorrect operation.
- Do not use the product away from children, tire heat, refrigeration, water and chemicals.
- Do not listen at a loud volume for a long time to avoid adverse effects on hearing.
- Do not immerse the product and accessories in any liquid or rinse the product with water.
- Do not place the product in a place where the product has high temperature.
- Do not place the product in the sun or in a place with high temperature. High temperatures will damage the product.
- Do not store this product in conditions containing a lot of dust, high or low temperature and humidity.
- Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
- Do not apply greater pressure to the product, or disassemble, bend, or shake the product to prevent damage to the product.
- Do not use this product near heat sources, such as radiators, hot air regulators, stoves, or other instruments that produce heat.
- Do not block the openings of this product, such as charging ports, indicator lights.
- Do not use the device in rainy/steamy weather, thunderstorms may cause the device to malfunction and increase the risk of electric shock.
- Do not place the product and its accessories in the vicinity of fire. The product and its accessories are exposed to rain or moisture, and when you exercise vigorously or sweat a lot, to prevent liquid from entering the product.
13. The product belongs to the built-in polymer battery, which cannot be replaced, please do not disassemble the battery.
14. If the consumer violates the above warning and inappropriate use, the personal and property damage will be borne by the company, and the company will not incur any legal liability.



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.