


Appendix II -- External Photograph

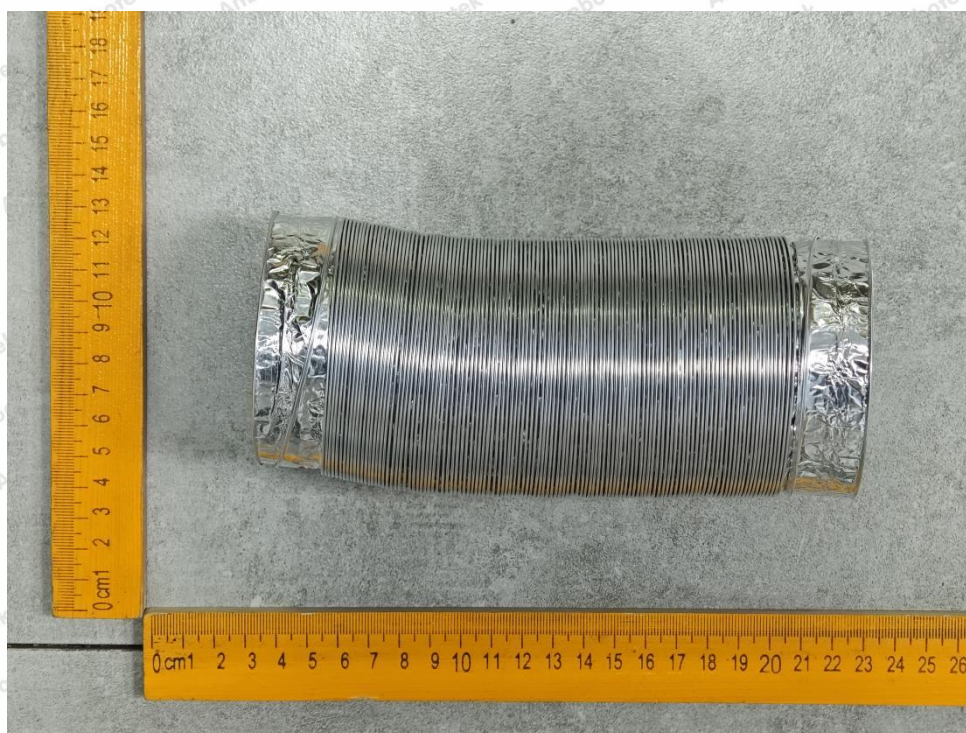



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn





Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn









ATOMSTACK HURRICANE

Signal		Machine state		Signal		Machine state			
 STATUS LIGHT		Finished	 WATER TEMP		Normal	 LASER INDICATOR		Normal	
	Steady blue						Warning		
		Processing			Abnormal			Normal	
	Flashing blue				Abnormal			Abnormal	
		Paused			Abnormal			Normal	
	Steady yellow				Flame detected			Flame detected	
		Abnormal operation		 FLAME DETECTION			Normal		Flame detected
	Flashing red				Flame detected				

REGULATING STEP

1. Loosen this screw * by turning left.
2. Tighten this screw * to the right
3. Tighten this screw * to the right

Please get familiar with all safety precaution and measures before using the machine.

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



Signal		Machine state	Signal		Machine state
STATUS LIGHT	Steady blue	Finished	WATER TEMP	Steady blue	Normal
	Flashing blue	Processing		Steady yellow	Warning
	Steady yellow	Paused		Flashing red	Abnormal
	Flashing red	Abnormal operation	LASER INDICATOR	Steady blue	Normal
				Flashing red	Abnormal
			FLAME DETECTION	Steady blue	Normal
				Flashing red	Flame detected

REGULATING STEP

① Screw above ② Adjusting belt screw

1. Loosen this screw * by turning left. 2. Tighten this screw to * the right

3. Tighten this screw * to the right

Please get familiar with all safety precaution and measures before using the machine.



