



WinsPad10Pro

User Guide

Thank you for choosing the Adreamer tablet. We're excited to help you get the most out of your new device — simply follow these easy steps to get started!

Safety and Precautions

 **【Warning】** Before using and operating the equipment, to ensure the best performance of the equipment and to avoid dangerous or illegal situations, please read and follow all safety information.

1. Usage environment:


- Do not use the power adapter in damp locations such as near sinks, bathtubs or showers. Do not plug or unplug the power adapter with wet hands.
- Do not use this device during thunderstorms, as it may cause equipment failure or the risk of electric shock.
- Please use this product within the temperature range of 0°C to 35°C and store it within the range of -20°C to +45°C.
- Please avoid exposing the device and its accessories to rain or moisture, as this may cause device malfunction.
- Do not place the device near heat sources or exposed flames, such as electric heaters, microwave ovens, ovens, water heaters, stoves, candles or other places that may generate high temperatures.
- Do not use unauthorized or incompatible power supplies, power adapters or batteries, which may cause fire, explosion or other hazards.

2. Battery Safety:

- This device is equipped with a built-in battery that cannot be disassembled. Do not replace the battery by yourself to avoid malfunction of the device or damage to the battery.
- Do not throw the battery into the fire; otherwise, it may cause the battery to catch fire and explode.
- Do not disassemble or modify the battery, insert foreign objects, or immerse it in water or other liquids to prevent battery leakage, overheating, fire or explosion.
- When charging is complete or when not charging, please disconnect the power adapter from the device and unplug the power adapter from the power socket.

Product Overview

1. Product Appearance Description

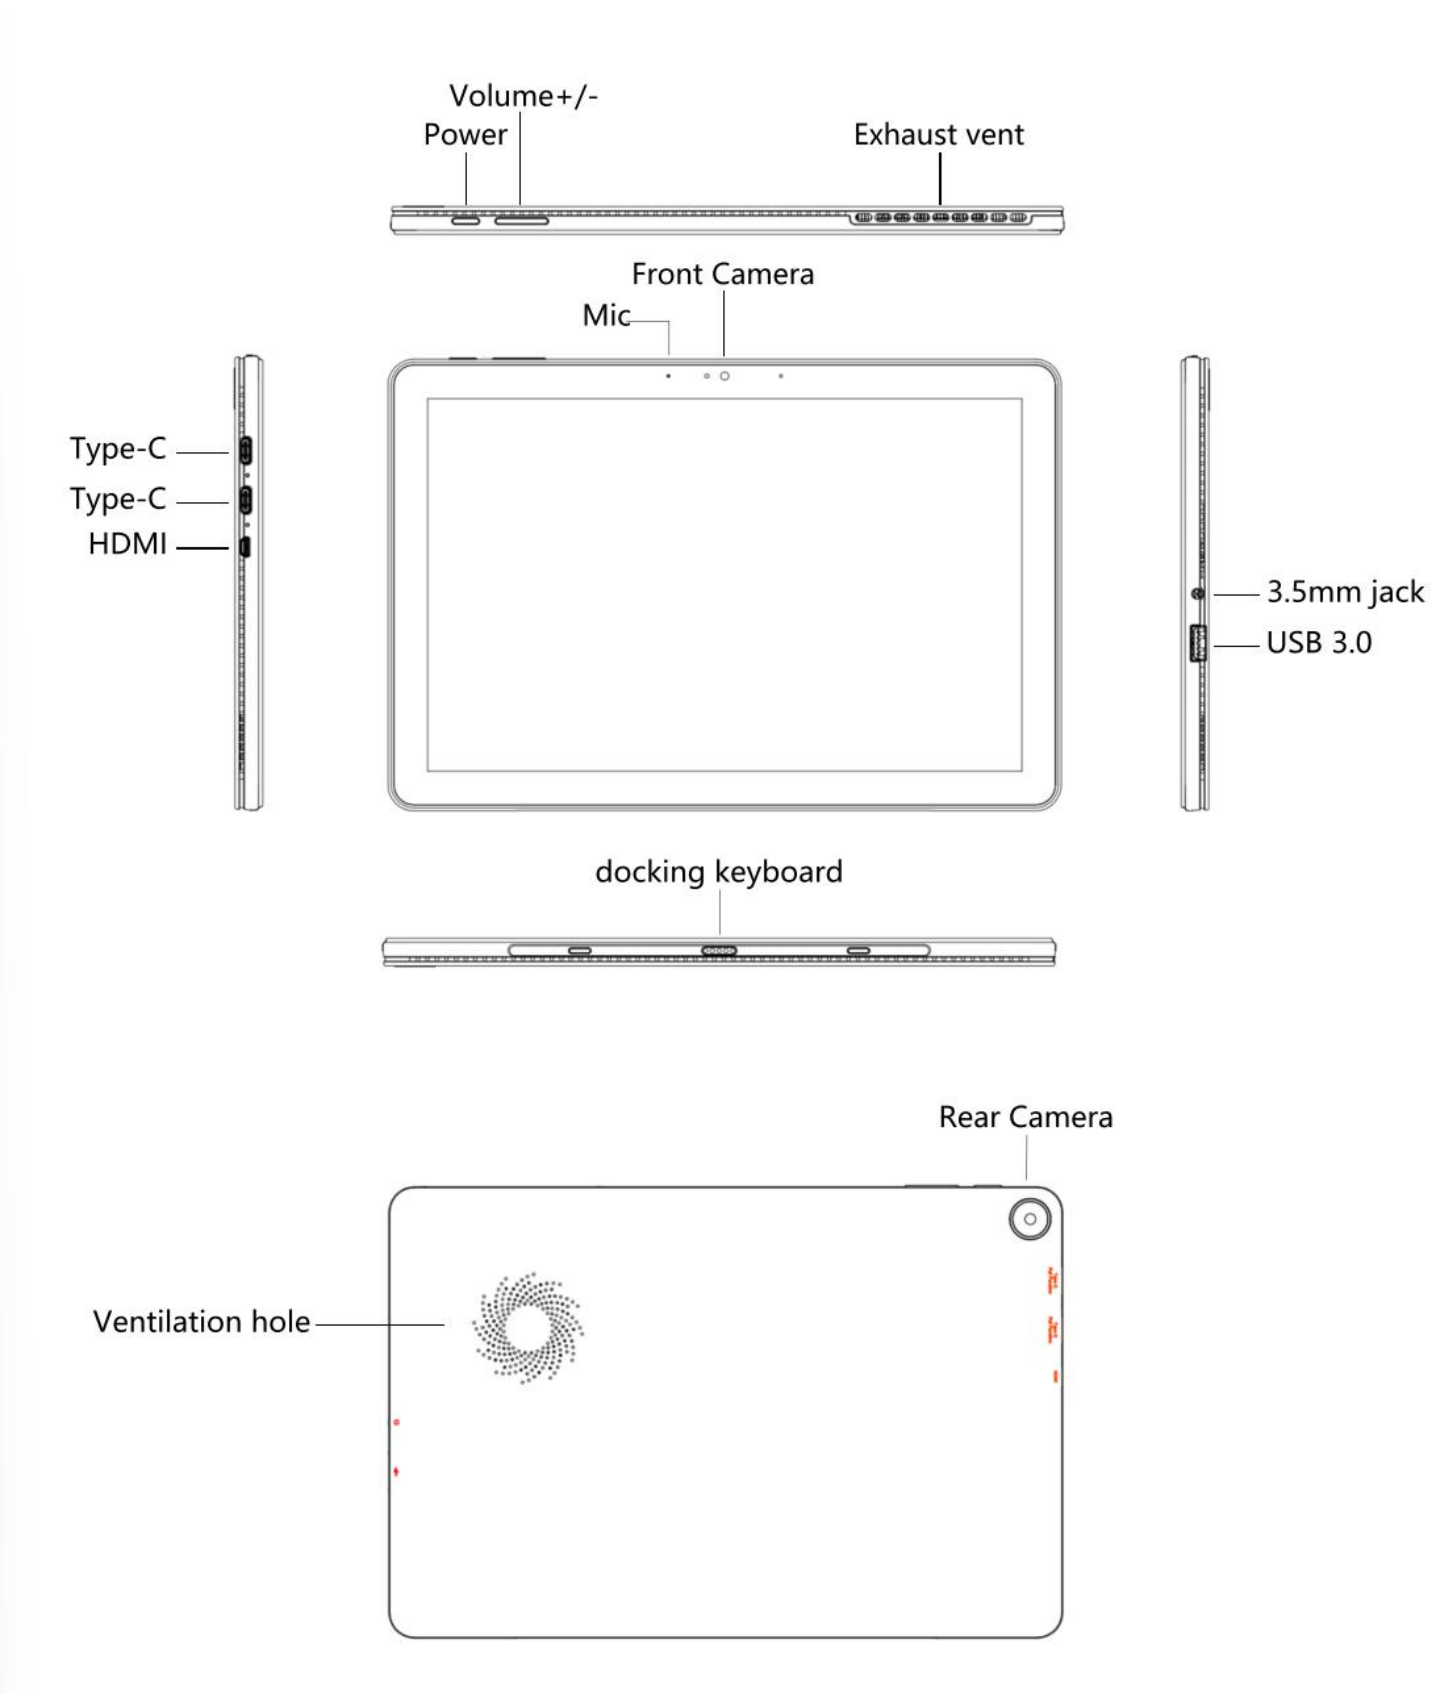

2.Product Specifications

Model	WinsPad10Pro
LCD	10.1" 1280*800
CPU	Intel Alder Lake-N150
RAM	8GB
Storage	SSD 256GB
Camera	Front 5MP, Rear 8MP
WIFI	2.4G/5G,WIFI6
Bluetooth	Bluetooth 5.2
Battery	7.7V/4500 mAh
I/O Type	Type-C (Full Function) *2, USB 3.0 *1 Micro HDMI Type*1, 3.5mm Headphone-out *1, Pogo Pin*1
Input	AC 100~240V
Output	DC 12V/2.5A
System	Windows 11 HOME
Size	249.15*168.06*23.5mm

Basic operations

1.Initial settings

- For the first time using the Windows system, please plug in the power supply, follow the system prompts to complete the initialization and local user creation, and log in to the Microsoft account to activate the system. After the creation is completed, click on the WiFi icon in the status bar to use it.

- Tips

This computer is pre-installed with the Windows system. Please do not install the system obtained from other sources. The drivers may be incompatible with this machine. If you want to reinstall the system, please contact us.

2.Powering on and off

Power on: Press and hold the power button for 3 seconds. The screen will light up and the device will start.To Power off: Press and hold the power button for 3 seconds, then follow the prompt to swipe down to shut down; or click the Start menu → Power icon → Shut down.

3.Touch control function:

The screen supports touch functionality, allowing you to control desktop applications with your fingers.

- Click: equivalent to the left mouse button (select an item/open an application).
- Double-tap: equivalent to right-click.
- Long press (1-2 seconds): Call up the right-click menu.
- Drag: Press and hold with one finger and move (can be used to drag windows, files or scroll pages)

4. Network connection:

Wi-Fi connection: Click the network icon on the taskbar → Turn on Wi-Fi → Select the hotspot.

5. Bluetooth Pairing

Go to System Settings > Bluetooth > Add Device.

6. Peripherals and Connections

Connect the keyboard: Align the tablet with the docking keyboard slot and insert it, Use the keyboard to control it.

Insert the tablet into the docking keyboard port by aligning it properly



Type-C charging / expansion

- Charging: Insert a full-function Type-C data cable. The device can be charged via the Type-C interface from a computer.
- Support for connections: Supports connection to displays, USB flash drives, and docking stations via Type-C interface.

- HDMI: Connect an external display via the micro HDMI interface.

Common Problems and Solutions

1.The device won't boot up.

Solution:

- Check charging: Verify if the device can charge normally and if the charging indicator light is red. Try to power on the device again after charging for 10 minutes.
- Forced restart: Press and hold the power button for more than 15 seconds to discharge the residual power, then turn on the device again.

2.Stuck at the startup screen (such as BIOS/LOGO screen)

Solution:

- Forced shutdown: Press and hold the power button for 10 seconds to turn off the device, then restart it.
- To enter Safe Mode: When restarting, press F8 continuously (for Windows 7) or Shift + F8 (for Windows 10/11), and select Safe Mode to start.
- To reinstall the system: Download the Windows image file to a USB drive, and then press "FN + F7" after startup to boot from the USB drive and reinstall the system.

3.Run slowly

Solution:

- To clear background programs: Press Ctrl + Shift + Esc to open the Task Manager and end high-usage processes (such as "Windows Modules Installer").

- To disable startup items: Task Manager → Startup tab → Right-click and disable unnecessary programs.
- Disk Cleanup: Search for and run "Disk Cleanup" → Check the boxes for Temporary Files and System Cache.

4.No display (black screen)

Solution:

- To restart the device: Press and hold the power button to turn off the device, and then restart it.
- External monitor test: Connect an external monitor using a full-featured Type-C data cable. If the connection is normal, the problem might be with the screen.

5.The WiFi connection cannot be established.

Solution:

- Restart the router and the computer.
- Reset the network: Settings → Network & Internet → Network Reset.

6.The Bluetooth device cannot be paired.

Solution:

- Delete old devices: Settings → Bluetooth and other devices → Remove device and re-pair.
- To restart the Bluetooth service: Press Win + R and enter services.msc → Find Bluetooth Support Service → Restart the service.

7.The battery won't charge.

Solution:

- Check the adapter and data cable: Make sure they are the original ones.

- Calibrate the battery: Discharge the battery until it shuts down automatically, then charge it to 100%.

8.The keyboard/touchpad is not working.

Solution:

- Restart the computer.
- To reinstall the keyboard: Pull out the tablet, align it with the Pogo pin holes on the keyboard and reinsert it. If the keyboard power indicator light is on, it indicates that the keyboard function has been activated.

9.How to enter BIOS?

- Turn on the computer and press the "delete" key to enter BIOS.

10.System crash / Blue screen

Solution:

- Restart the computer.
- Record the blue screen code and search for solutions.
- Uninstall the software or driver that was installed most recently.
- Run memory diagnostics: Search for "Windows Memory Diagnostic" → Restart and test.

Warranty and Support

- This product is in strict compliance with the "Regulations on the Liability for Maintenance and Return of Microcomputer Commodities" and offers after-sales services to consumers who have purchased Adreamer tablet computers.
- If you encounter any problems, please feedback them to our customer service, Company email: service@adreamertech.com

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR)

information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: The device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.