

Smart Speaker Manual



Parameter specifications:
Input voltage: 5V 2A, 9V 2A Wireless Output: 15W
Speaker power: 10W Product dimensions: 118*102*117mm
Material: ABS + PC Net weight of the product: 510g

- Operation declaration:
1. Long press : Switch between Chinese/English prompt tones.
 2. Long press Turn on/off, Short press switching modes: Bluetooth mode/white noise mode/clock mode.
 3. Clock setting: Automatically synchronize time after connecting to Bluetooth on the phone.
Manually set time: Short press switch to clock mode, long press .Screen is flashing, Start setting the time,Short press Adjust the clock, Short press Adjust the minute, Long press Confirm, or automatically confirm after 6 seconds, Double-click Switch between 12 or 24-hour mode.
 4. Alarm clock settings: Short press 1 , Upper left corner of the screen 1 the symbol starts flashing, Press Adjust the clock, Press Adjust the minute,Short press Select the alarm clock ringtone, Long press Adjust the volume, Press 1 Confirm the alarm clock settings, Upper left corner of the screen 1 The symbol for alarm clock 1 lights up to indicate successful setting, The alarm clock duration is 1 minute, Press when the bell rings snooze for 5 minutes and then sound the alarm, Press other keys to turn off the alarm when it rings, Long press 1 Cancel the alarm clock 1 setting, upper left corner of the screen 1 The symbol for alarm clock 1 will disappear,(Alarm clock 2 is set the same as alarm clock 1.)
 5. White noise: Short press Switch to white noise mode, Short press Previous song, Short press Next song, Long press Volume up, Long press Volume down, double-click timed 30-60-90-120 minute, The screen displays the corresponding number, If the time is not set, it will continue to play, Short press Play/pause.
 6. Screen brightness: Press Set 5 brightness levels on the screen.
 7. Bluetooth speaker: Search for Bluetooth name NH-73 on your phone,Short press activate the music rhythm function, Short press Previous song, Long press Increase the volume, Short press Next song, Long press Volume down, Short press Play/pause.
 8. Short press , Emoji light effect carousel light, double-click Select the current emoji to standby mode, long press Close the display screen.
 9. Touch facial expressions, sound interaction: The screen has three touch sensitive points, Gently touch the upper part and left and right sides of the product display screen, Different expressions and voices will appear.
 10. When the battery level is low, a red battery box appears on the display screen, Please charge the product as soon as possible, insert the charger, and the indicator light will turn red, When fully charged, turn off the light (the charging indicator light is located directly below the display screen).
 11. Wireless charging for mobile phones: This product supports 15W magnetic fast charging, Please insert a fast charging adapter into the product, If the adapter is 5V2A, the wireless charger is slow charging.

Package Includes:
Product * 1 Charging cable * 1 Instruction Manual* 1

FCC Statement

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.