

Cozyla Calendar+ 2

All-in-One Family Calendar

User Manual

*Please read the manual before using this product, and save it for future use.



Contents

Preface	4
Warning	4
Packing List	5
Product Specifications	6
Port Connection Instructions	7
Touch & Button Instructions	8
FCC Statement	9
Setup instruction	12
We are ready to support	12

Preface

Thank you for choosing Cozyla Calendar+ 2!

 
Before starting up, please carefully read this user manual to understand how to use the device and important precautions.

Warning


- * Use only the power adapter accessory provided by the original manufacturer.
- * The gaps and openings on the device are designed for ventilation and heat dissipation, Do not block or cover them.
- * Do not use or store the device in dusty, humid, or high-temperature environments.
- * Do not attempt to disassemble or repair the device if it malfunctions. Contact the dealer Cozyla.
- * Avoid stepping on the power cord or power adapter to prevent damage to the wires that may cause electrical hazards. If the power adapter's cord is damaged, do not continue to use it as it may be dangerous.
- * During thunderstorms or when the device will not be used for an extended period, unplug the power cord.
- * Do not place the device on the edge of a desk or in areas where children may easily access it to avoid damage or injury to the child.
- * During transport, do not apply excessive pressure on the display screen or scratch it with sharp or hard objects, as this may cause damage to the screen.
- * Use a dry, soft cloth or a slightly dampened soft cloth with a mild cleaning solution to clean the device. Do not use any type of solvent, such as alcohol or gasoline, as it may damage the surface treatment layer.
- * Make sure children understand the danger of climbing on the product, as dropping or tilting the product may cause serious injury.
- * Do not place the product in an unstable or tilted position.
- * Keep the cables connected to the product organized to avoid tripping, pulling or grabbing.

Packing List


After opening the package, please confirm the contents of the package below.

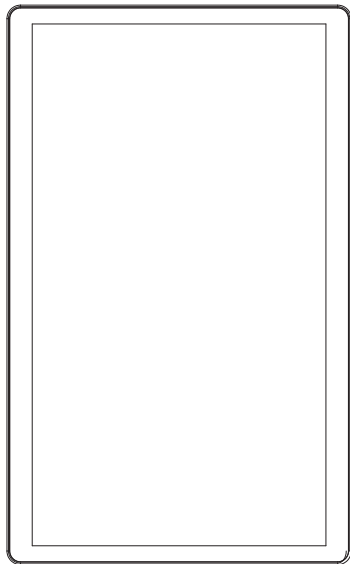


Cozyla Calendar+ 2 *1

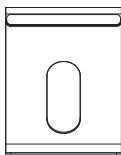 

Upper Desk Stand *1

 

Lower Desk Stand *1

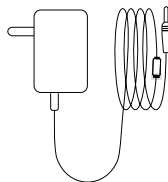 

Power cord *1



KM4.0*6mm*4



Screwdriver*1


Product Specifications

Specifications vary by model configuration.

System	Panel Size	15.6" FHD
	RAM	4GB
	Internal memory	64GB
	Resolution	1920*1080
	Operation system	Android 15
	CPU	SpreadtrumT616 Octa Core 2*A75@2.0GHz+ 6*A55@1.8GHz
Display	Model Type	Capacitive touch screen
	Number of points	10-Point
	Aspect Ratio	16:9
	Wi-Fi	2.4G/5G 802.11 a/b/g/n/ac
	Bluetooth	5.0
Interface	Type-c	Only the ADB function is supported.
	Power Jack	DC power input
Other	VESA	100*100mm
	Button	Power / Vol+ / Vol-
	G-sensor	Support
	Speaker	*2
	Microphone	Standard quad microphone, supports noise reduction and echo cancellation
	Storage Temperature	-20℃ ---60℃
	Working Temperature	0℃ ---40℃ 20~80%RH

Port Connection Instructions

 This device is equipped with a variety of ports to support multiple external devices:

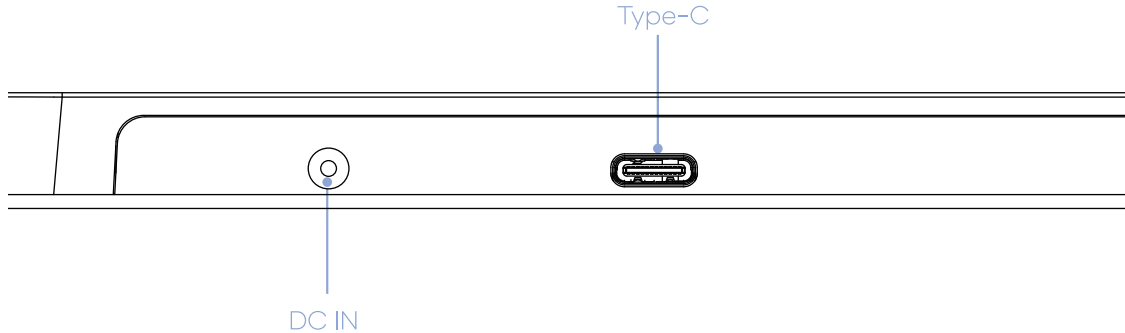


DC IN: Connect the adapter to power on the device.

Type-C: Only the ADB function is supported.

Touch & Button Instructions

 This device features an ultra-HD ten-point capacitive touch LCD display. To ensure optimal touch sensitivity, please keep the screen clean. Additionally, physical buttons are located on the lower right side of the screen (the layout may vary depending on the decorative frame). The table below provides a detailed description.

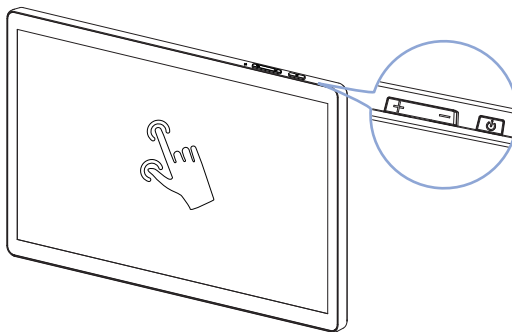

Button	Function
	When the device is off, press and hold for 2-3 seconds to turn it on. When the product is on: Press and hold for 2-3 seconds to access the shutdown confirmation menu (Shutdown/Restart). A short press will turn off the screen, and another short press will turn the screen back on.
	Increase system volume
	Decrease system volume

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

1. This device may not cause harmful interference
 2. This device must accept any interference received, including interference that may cause undesired operation.
- Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

To maintain compliance with FCC 's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.



This device complies with parts of the FCC rules. Operation is subject to the following two conditions:

This device will not cause harmful interference;

This device must accept any interference received, including interference that may cause undesired

Setup instruction

Please scan the QR code below for setup instructions.



Setup instructions

We are ready to support

If you encounter any issues, contact us . Our customer service team will assist you with personalized solutions.

Please note:

If you plan to gift or return this device, please remove the Google account from the device before resetting to fully protect your privacy. Failure to do so may leave your Google account partially on the device, preventing successful setup by the next user. A service fee may be charged for reconfiguring the device if it's returned without the account removed.

Please keep the original packaging materials in case it needs to be returned.