


User Manual

Model No.: DF01T

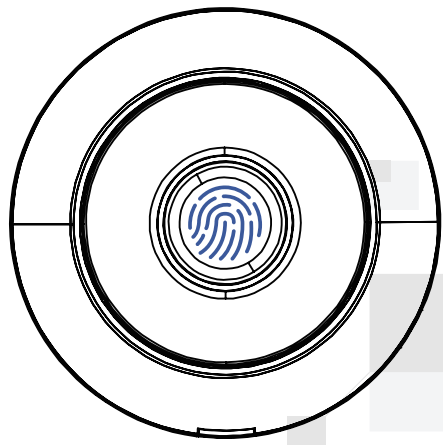

IMPORTANT: Read the instructions carefully before operating the appliance and keep them for future reference.

Safety, intelligence, All in Our Locks.

Congratulations

SMART LOCK

Dedicated to providing market consumers with smart home devices, smart locks.

Hold on 3 "W"


We use cutting-edge technology to develop our products. We focus on human-computer interaction system. We focus on customer experience.

Before installing, please scan the QR codes to watch our easy step-by-step installation video. If you have questions regarding the installation process, please contact us.




Scan the QR code for after-sales support and seamless communication.


PRODUCT DESCRIPTION

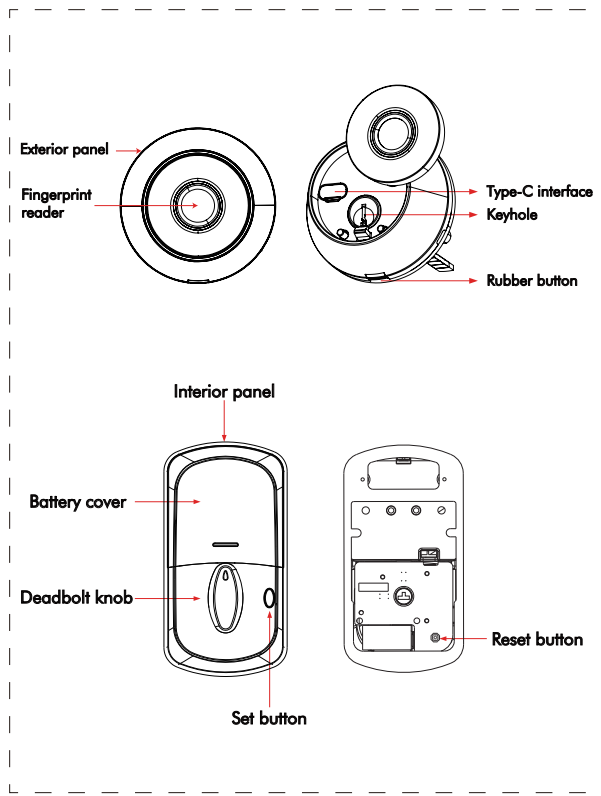

INCLUDED IN THE BOX

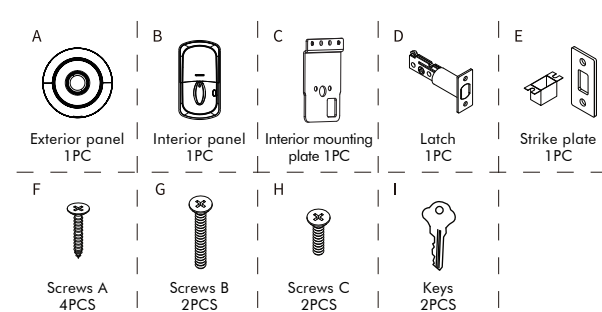


ASSEMBLY DIAGRAM

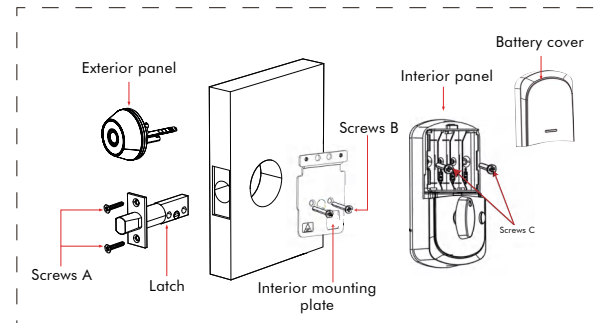


CHECK THE DOOR'S DIMENSIONS

Step 1: Measure to confirm that the door is between 1 3/8" - 2 1/8" (35mm ~54mm) thick.
Step 2: Measure to confirm that the hole in the door is 2 1/8" (54mm).
Step 3: Measure to confirm that the backset is either 2 3/8" - 2 3/4" (60-70mm).
Step 4: Measure to confirm that the hole in the door edge is 1" (24mm).
Note: If you have a new door, please drill the holes according to Drill Template.

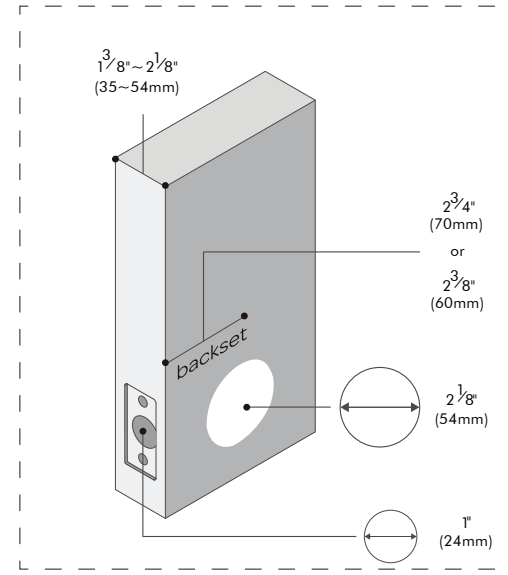


INSTALL LATCH AND STRIKE PLATE


1. Install latch into the door, make sure latch fits inside the door opening.
2. Install the strike into the door frame, make sure the latch can go into the strike smoothly.

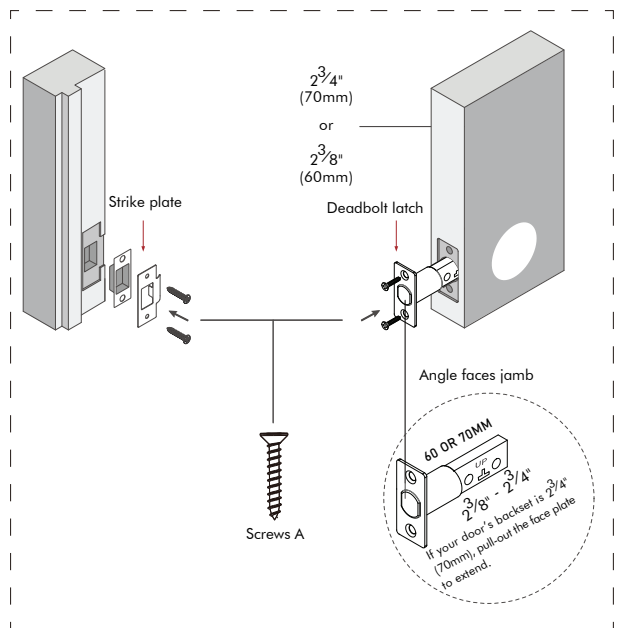


CHECK THE LATCH AND STRIKE PLATE

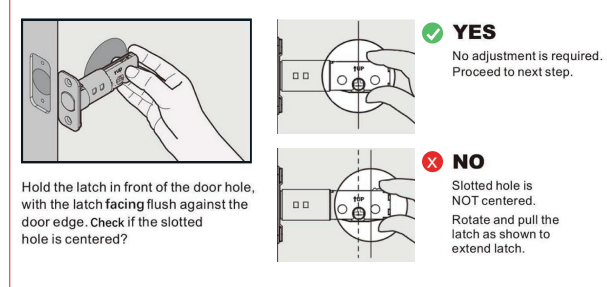


How to adjust the latch?

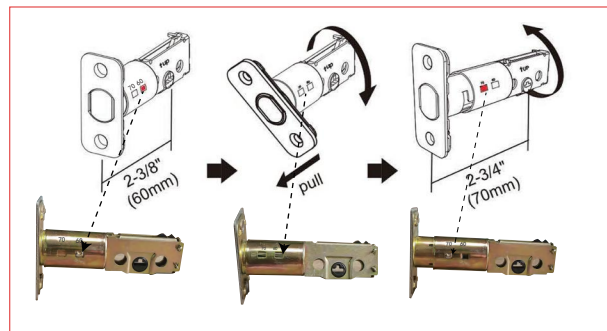

INSTALL THE LATCH


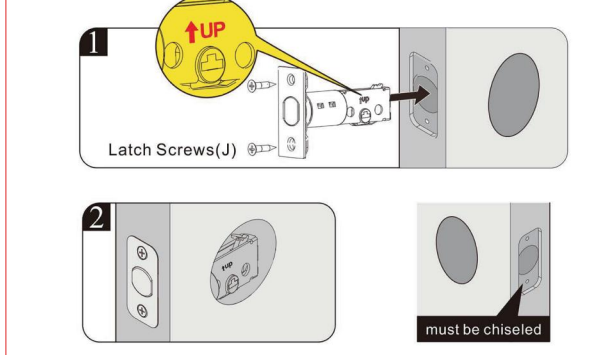


IMPORTANT: Keep the latch in unlocked position before installation.


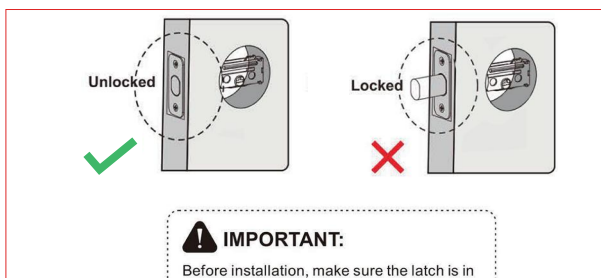


INSTALL EXTERIOR PANEL

DO NOT CLOSE THE DOOR UNTIL THE DOOR LOCK IS FULLY INSTALLED AND THE BATTERIES ARE INSTALLED.

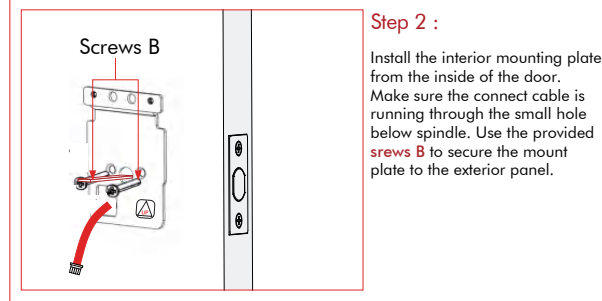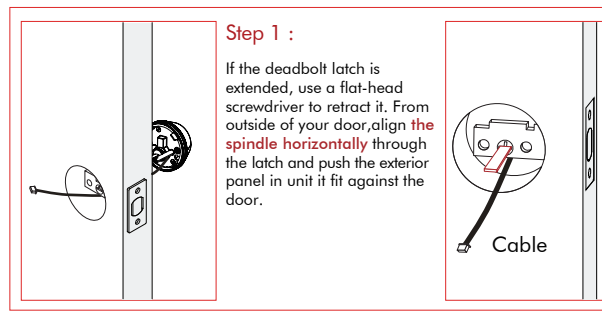


INSTALL INTERIOR ASSEMBLY

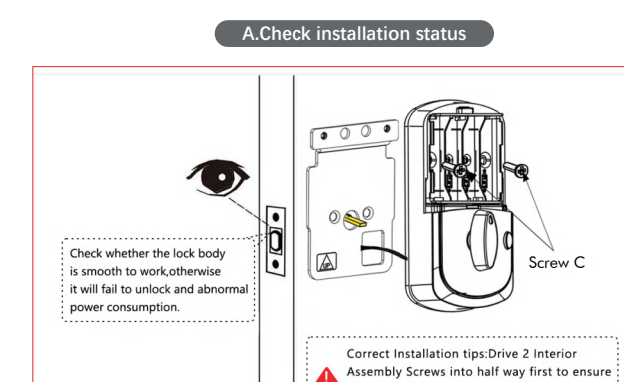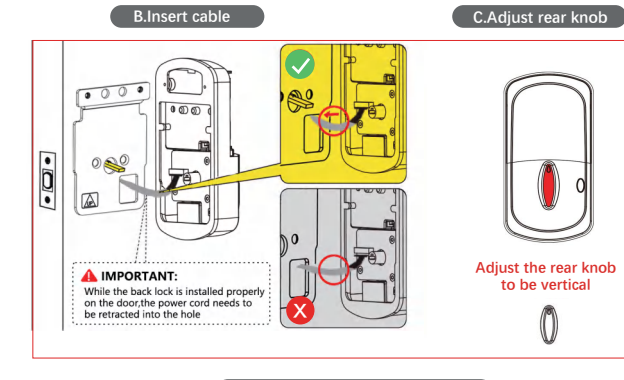

EUERTE

INSTALLING BATTERIES

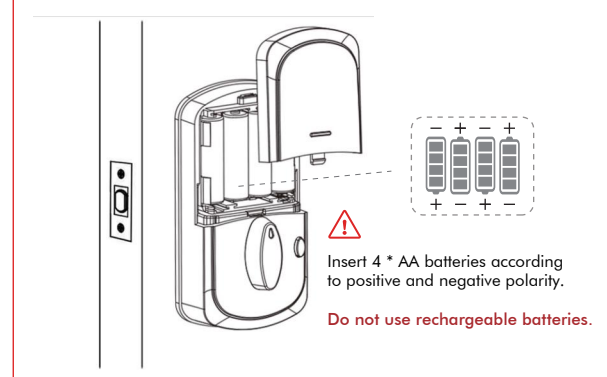

DOWNLOAD THE TT LOCK APP

1. App Download Instructions
A. Scan the QR code on the right you can use Android and iOS to download the APP.
B. Android version software can be downloaded in the Google Play store. Search "TT LOCK".
C. iOS version of the software can be downloaded in the iPhone App Store. Search "TT LOCK".
2. You can register and log in through email or phone number.




Google Play




Apple Store

ADDING DEVICE


1. Adding new door lock by app
(Note: Keep your phone close by the door during this process. When no mobile phone administrator is added, trigger the fingerprint area and hear "Please add a mobile phone administrator". Add a door lock on the app).

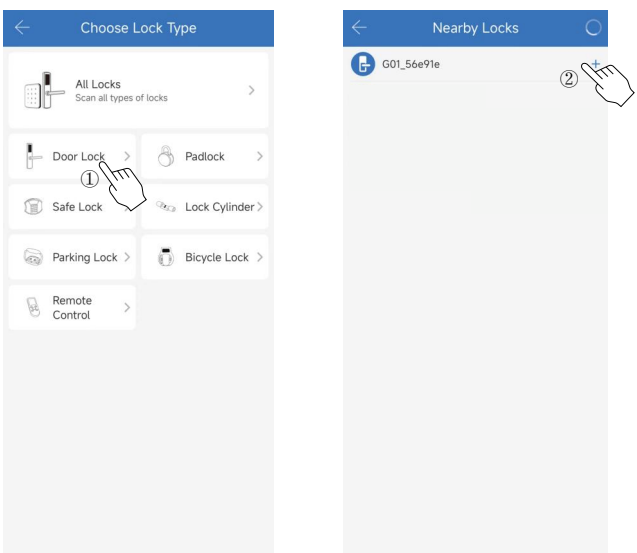


HOW TO ADD FINGERPRINT

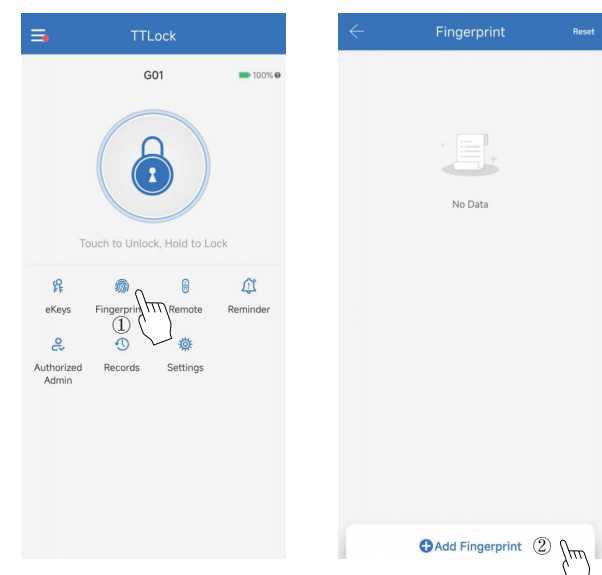

HOW TO SET AUTO-LOCK MODE

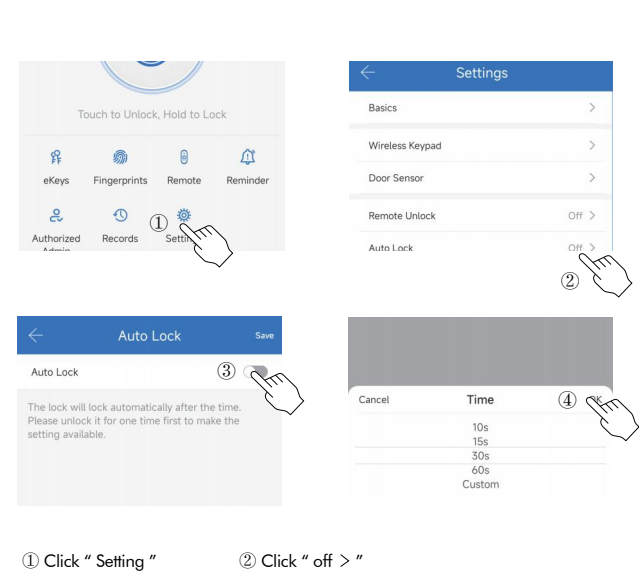


HOW TO DELETE FINGERPRINT

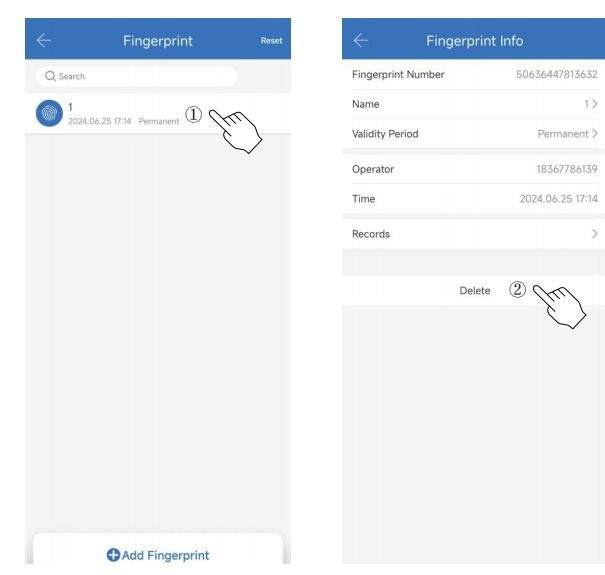

TROUBLESHOOTING

- Q: How to reset the DF01T?
- A1: Press and hold the reset button for 3 seconds, and hearing a long beep for 1 second, the smart lock initialization completed.
- A2: Within 10 seconds of reinstalling the battery, press and hold the set button for 10 seconds. After the voice broadcast "Please press your finger", touch the fingerprint (administrator) once, and the voice broadcast reads "Factory reset successful!". Mean time, the fingerprint indicator light will remain green for 5 seconds, the smart lock initialization completed.
- A3: Open TT LOCK APP, click on "Settings", slide to the bottom find "delete", and re-adding devices.
- Q: Does DF01T work with third-party accessories such as deadbolt latch?
- A: It is recommended to use the original accessories for best performance and stability.
- Q: What notification will receive when the battery is low?
- A1: When using fingerprint to unlock, the voice prompt reads "Low battery, please replace battery before unlocking."
- A2: When you unlock the device through the TT LOCK APP, you will receive push notification message with low battery warning. (Member Services - Subscription Required)
- A3: You can check the battery power on TT LOCK APP
- Q: Why DF01T doesn't lock or unlock?
- A1: Check for low batteries.
- A2: Try to see if you can manually lock the door. (to see if you install the lock correctly).
- Q: My DF01T doesn't respond. It is not powering and the front light doesn't flash. In this case, the device can't connect to any smartphone.
- A1: The fast solution will be the replacement of the batteries.
- A2: Re-connect the cable is also a good way to go.

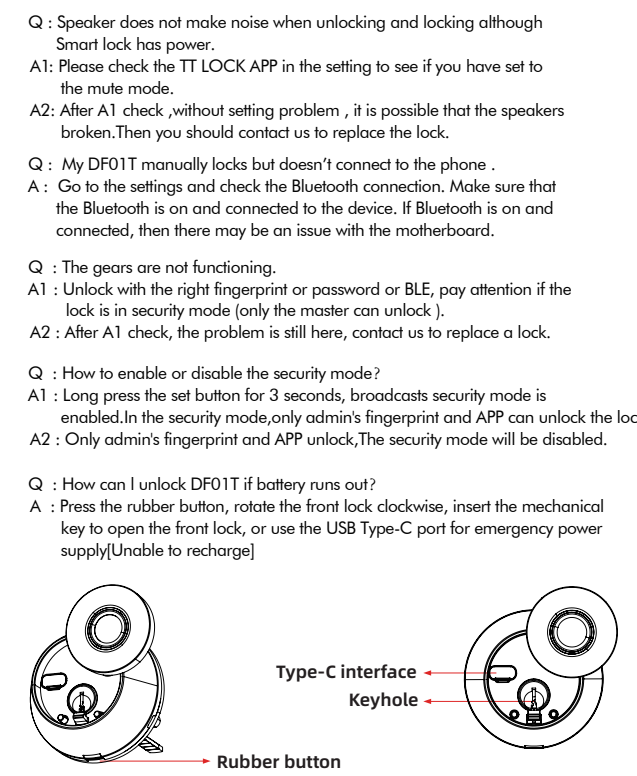

FCC WARNING

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

SPECIFICATIONS

Technical Parameters		
No.	Name	Parameter Description
1	Unlocking method	APP, Fingerprint, Mechanical key
2	Fingerprints max	50
3	Low power warning	4.8V
4	Voltage range	4.5~6.5V
5	Stand-by current	75uA
6	Working current	<300mA
7	Unlock time	≈1.5 sec
8	Range of working Temperature	Exterior panel -13°F ~158°F
9	Door thickness	1.38in-2.13in(35-54mm)
10	Fingerprint head type	Semiconductor fingerprint
11	Power	4*AA alkaline batteries