

2D Wireless Dual Mode

Scanner Setup Manual



Version

Factory Default



Bluetooth Pairing instruction

Pair instruction
A: Barcode Scanner pair with USB dongle
Step 1, Scan Below Pairing barcode I, barcode II in sequence, and the scanner LED indicator become blue and flashing.

I



II



Step 2, Connect the USB dongle to host device and wait a second, the LED indicator blue on barcode scanner after succeed pairing.

B: Barcode scanner pair with bluetooth device
Step 1, Scan Below Pairing barcode I, barcode II in sequence, and the scanner LED indicator become blue and flashing.

I



II



Step 2, Open mobile device bluetooth settings and search for “RB_Scanner_HID” then connect it. When the scanner LED indicator becomes blue, the pairing is complete.

Wired Direct Transmission Mode



Wired Mode



 
Wireless Mode (default)

Note: Plug in the charging cable to connect to the computer device, scan this setting code, you can switch to wired transmission mode. (Some models support wired mode)

3 Optional Wireless Mode



Normal



Inventory



Automatic storage(default)

- Note:**
- 1) Instant upload mode: Scan the barcode to enter the instant upload mode. You will hear a "beep" sound normally. In this mode, the scanned results will be uploaded to the computer instantly.
 - 2) Internal storage mode (inventory mode): Scan the barcode to enter the inventory mode. The scanned data will be stored in the internal memory. A "beep" sound will be heard normally. All barcodes stored in this mode can be uploaded by scanning the setting code. data to computer.
 - 3) Automatic storage mode (default mode): Scan the barcode to enter automatic storage mode, that is, no loss mode. In this mode, when there is a signal (the normal sound is a "beep"), the data will be uploaded to the computer immediately. When the signal is weak or there is no When there is a signal (the normal sound is a "tick"), the scanned data will be stored in the internal memory. When there is a signal, the data will be automatically uploaded to the computer.

Data Upload Instruction in Inventory Mode



Upload all data



Upload new data



Display all data



Display new data



Data delete

Transmit Speed



No Delay(default)



Delay 10ms



Delay 20ms

End Character



CR(default)



CR&LF



Disable

Scan Mode



Manual(default)



Continuous



Auto-sensing

Buzzer



ON



OFF

Keyboard Language



USA(default)



Czech



France



Germany



Spain



Italy



Turkey Q



Turkey F



Brazil



Russia

Image Reverse



Disable



Enable

URL Barcode Configuration



Disable



Enable

Turn on/off all symbologies



Enable all
1D barcodes



Disable all
1D barcodes



Enable all
2D barcodes



Disable all
2D barcodes

Sleep time setting



1 minute



5 minute



No sleep

Prefix Setting



Prefix

Eg: Add prefix "A"
Step 1: Scan above code to add "Prefix";
Step 2: Scan the numeric code "9" and "9" in sequence (Refer to Appendix 1);
Step 3: Because ASCII value of A in Hexadecimal is "41", so scan "4" and "1" in sequence (Refer to Appendix 1 & Appendix 2);
Step 4: Scan "Saved" code to save (Refer to Appendix 1).

Suffix Setting



Suffix

Note:
The method of adding the suffix is he and Sam east and prefix.

Appendix 1:



0



1



2



3



4



5



6



7



8



9



A



B



C



D



E



F



Saved

Appendix 2:

Hex	Char	
00	NUL	(Null char.)
01	SOH	(Start of Header)
02	STX	(Start of Text)
03	ETX	(End of Text)
04	EOT	(End of Transmission)
05	ENO	(Enquiry)
06	ACK	(Acknowledgment)
07	BEL	(Bell)
08	BS	(Backspace)
09	HT	(Horizontal Tab)
0a	LF	(Line Feed)
0b	VT	(Vertical Tab)
0c	FF	(Form Feed)
0d	CR	(Carriage Return)
0e	SO	(Shift Out)
0f	SI	(Shift In)
10	DLE	(Data Link Escape)
11	DC1	(XON) (Device Control 1)
12	DC2	(Device Control 2)
13	DC3	(XOFF) (Device Control 3)
14	DC4	(Device Control 4)
15	NAK	(Negative Acknowledgment)
16	SYN	(Synchronous Idle)
17	ETB	(End of Trans. Block)
18	CAN	(Cancel)
19	EM	(End of Medium)
1a	SUB	(Substitute)
1b	ESC	(Escape)
1c	FS	(File Separator)
1d	GS	(Group Separator)
1e	RS	(Request to Send)
1f	US	(Unit Separator)
20	SP	(Space)
21	!	(Exclamation Mark)
22	"	(Double Quote)
23	#	(Number Sign)
24	\$	(Dollar Sign)
25	%	(Percent)
26	&	(Ampersand)
27	'	(Single Quote)
28	(	(Right / Closing Parenthesis)
29	)	(Right / Closing Parenthesis)
2a	*	(Asterisk)
2b	+	(Plus)
2c	,	(Comma)
2d	-	(Minus / Dash)
2e	.	(Dot)
2f	/	(Forward Slash)
30	0	
31	1	
32	2	
33	3	
34	4	
35	5	
36	6	
37	7	
38	8	
39	9	
3a	:	(Colon)
3b	;	(Semi-colon)
3c	<	(Less Than)
3d	=	(Equal Sign)
3e	>	(Greater Than)
3f	?	(Question Mark)

	Char	
40	@	(AT Symbol)
41	A	
42	B	
43	C	
44	D	
45	E	
46	F	
47	G	
48	H	
49	I	
4a	J	
4b	K	
4c	L	
4d	M	
4e	N	
4f	O	
50	P	
51	Q	
52	R	
53	S	
54	T	
55	U	
56	V	
57	W	
58	X	
59	Y	
5a	Z	
5b	[	(Left / Opening Bracket)
5c	\	(Back Slash)
5d	]	(Right / Closing Bracket)
5e	^	(Caret / Circumflex)
5f	_	(Underscore)
60	`	(Grave Accent)
61	a	
62	b	
63	c	
64	d	
65	e	
66	f	
67	g	
68	h	
69	i	
6a	j	
6b	k	
6c	l	
6d	m	
6e	n	
6f	o	
70	p	
71	q	
72	r	
73	s	
74	t	
75	u	
76	v	
77	w	
78	x	
79	y	
7a	z	
7b	{	(Left/ Opening Brace)
7c		(Vertical Bar)
7d	}	(Right/Closing Brace)
7e	~	(Tilde)
7f	DEL	(Delete)

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition, compliance with exposure requirements.