

Digital Camera

Quick Guide

English	1-13
Español	14-25
Deutsch	26-37
Italiano	38-40
Français	41-43
Dansk	44-46
日本語	47-49
한국인	50-52
Svenska	53-55
Nederlands	56-58
Polski	59-61
Português	62-64
čeština	65-67
Română	68-70
magyar	71-73
ελληνικά	74-76
suomi	77-79
български	80-82
hrvatski	83-85
Slovenčina	86-88
Lietuvių	89-91
Latviešu	92-94
eesti	96-97

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING

To reduce the risk of fire or electric shock,

1. Do not expose this device to rain or moisture.
2. Do not place objects filled with liquids (such as vases) on this device.
3. Do not expose the battery to excessive heat, such as sunlight or fire.
4. Do not swallow batteries to avoid chemical burns.
5. Keep new and used batteries out of the reach of children. If the battery compartment is not securely closed, stop using this product and keep it out of the reach of children.
6. If you think a battery may have been swallowed or placed in any part of the body, seek medical attention immediately.

CAUTION

If the battery pack is mishandled, it may explode, causing fire or even chemical burns. Please observe the following precautions.

1. Do not disassemble.
2. Do not crush the battery pack or subject it to any impact or external force, such as hammering, dropping, or stepping on it.
3. Do not short-circuit the battery pack, and do not allow metal objects to come into contact with the battery terminals.
4. Do not expose to temperatures exceeding 60°C (140°F), such as in direct sunlight or in a car parked in the sun.
5. Do not incinerate or dispose of in fire.
6. Do not dispose of damaged or leaking lithium-ion batteries.
7. Keep the battery pack out of the reach of children.
8. Keep the surface of the battery pack dry.
9. Replace only with the specified type of battery. Failure to do so may result in explosion, fire, or injury.
10. Dispose of used batteries according to the instructions.
11. When using the AC adapter/battery charger, use a nearby wall outlet. If any malfunction occurs, unplug the battery pack from the wall outlet. If you are using a product with a charging light, please note that even if the light turns off, the product will not be disconnected from the power source.
12. Do not use the AC adapter/battery charger in confined spaces, such as between walls and furniture.
13. If static electricity or electromagnetic interference causes data transmission to be interrupted midway, restart the app or disconnect and reconnect the communication cable (USB, etc.).


About the camera

System requirements


Users can transfer videos and photos to a computer with the following configuration:
 Intel Pentium 2.0GHz or higher / Microsoft Windows XP or higher operating system 2GB
 RAM 40GB or more available disk memory / standard USB port / 1GB GPU or higher
 1920x1080 pixel or higher resolution.

Camera Parts

Rear view

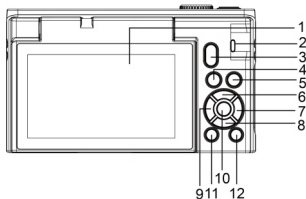


Front view

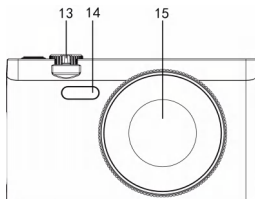


- 1: Display
- 2: Charging Indicator / Working Indicator
- 3: Q Button (Quick Parameter Adjustment)
- 4: Playback Button
- 5: Delete Button
- 6: Up Button/Fill Light Shortcut / Press and Hold to Turn on Wi-Fi
- 7: Right Button

- 8: Down Button
- 9: Left Button
- 10: OK Button/Mode Button
- 11: DISP Button
- 12: Menu Button
- 13: Digital zoom toggle button
- 14: Fill light
- 15: Rear camera

 
Top view

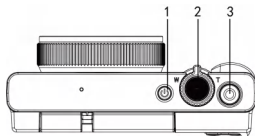

Bottom view

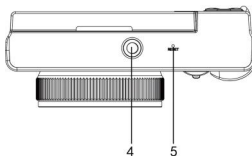 

Left side view

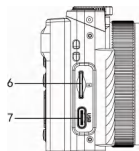 


- 1: Power button
- 2: Photo button
- 3: Video recording button
- 4: Tripod port
- 5: Reset button

- 6: Memory card slot
- 7: Type-C USB port

Buttor / Indicator	Function
Power button	Power on/off
	Short press to pause the video while recording
PHOTO button	Take a photo/half-press to focus
Video button	Start recording/Stop recording
indicator light	Red charging indicator light/blue working indicator light
Q button	Quick parameter adjustment
Playback button	Open/exit media playback
Delete button	Delete photos/videos
Up button	Select Up
	Short press to turn on/off the fill light
	Long press to turn on/off WIFI
Right button	Select right
Down button	Select Down
Left button	Select Left
OK button	confirm
	Open the mode selection page
DISP button	Short press twice to lock the screen
MENU button	Open/Close menu settings
USB	USB cable charging
	onnect the computer with a USB cable

 Charge the camera

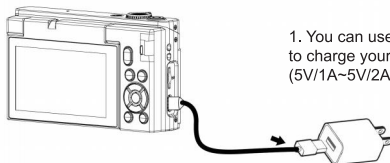

1. You can use the provided USB cable to charge your camera via the adapter (5V/1A~5V/2A).

*The charging indicator lights up red while the camera is charging.


*When the camera is fully charged, the charging indicator turns off automatically

A typical full charge of the battery takes about 3 hours.

A fully charged battery provides approximately 120 minutes of recording time.

Turn camera on/off

Press the power button and the camera will turn on automatically

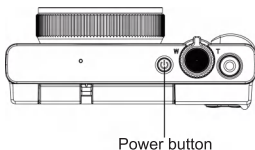

To turn off the camera, press and hold the power button for 3 seconds.


Note: The first time you use the camera, you must press and hold the power button to turn it on.

Set the camera

You can customize your camera settings.

After turning on the camera, press the Menu button to open the Mode menu and enter System Settings.

Menu Settings

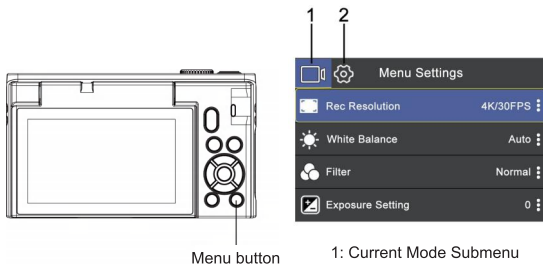

1: Current Mode Submenu


2: System Settings

Submenu	Menu Contents
Image rotation	Turn off/Turn on
Icon display	Turn off/Turn on
Focus Mode	Auto focus/Manual focus
Wi-Fi	Turn off/Turn on
APP User Guide	Scan the QR code to view the tutorial
Light source frequency	Auto/50Hz/60Hz
LED indicators	Turn off/Turn on
AF assist lamp	Turn off/Turn on
Auto screen saver	Off/30S/1 minute/2 minutes
Auto power off	Off/3 minutes/5 minutes/10 minutes
Display brightness	High/Medium/Low
Button Prompt	High/Medium/Low/Turn Off
Startup music	Turn off/Turn on
Language	Simplified Chinese / Traditional Chinese / English/Japanese/Korean/ Russian/ German/French/ Italian/ Spanish/ Portuguese/Thai/ Dutch/ Polish/ Swedish /Romanian/ Indonesian/ Turkish/ Greek
Time format	YYYY/MM/DD MM/DD/YYYY DD/MM/YYYY
Time Set	Hour/Minute/Second
Date Set	Year/Month/Day
Format	Confirm/Cancel
Device Info	Product model and version
Factory Reset	Confirm/Cancel

Insert and format the memory card

We recommend using a Class 10 or higher memory card for proper operation.

 1. Insert the memory card until you hear a click.


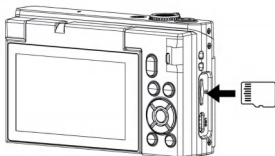


Insert the card in the direction shown, paying attention to the edges and corners.

2. To remove the memory card, push the card in and it will pop out automatically.

Formatting a memory card

It's recommended to format the memory card before first use. To format a memory card, press the Menu button to open the menu system. Then, press the left or right arrow key to navigate to System Settings. Press the up or down arrow key to find "Format," then press the OK button to enter the submenu. Select "Confirm" to format the memory card.

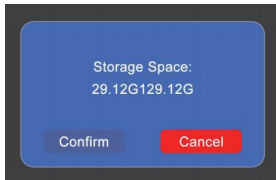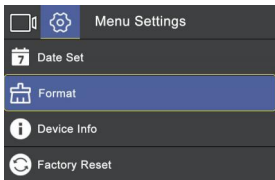


Note:

If the file system on the memory card is not supported, a prompt will appear: "Unsupported file system, format?" Please format the memory card as described above. Formatting the memory card will delete all data stored on it, making it irrecoverable. Before formatting, please save important data on a PC.

Using the Camera

Press the MODE button to enter the mode selection page. Press the Up/Down/Left/Right button to select the desired mode and then press the MODE button to confirm.

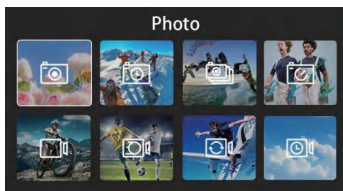



icon	model	illustrate
	Photo	Take a single photo normally
	Video	Record video in normal mode
	Auto	Automatic loop shooting after a specified number of seconds
	Slowly	Record videos in slow motion mode
	Burst	Take a specified number of photos continuously
	Loop	Record video in an infinite loop
	Timer	Take a single photo after a specified number of seconds
	Lapse	Compressed time recording video

The camera supports setting up a menu for each mode.

After selecting the desired mode, press the Menu button to open the menu and select the desired settings.

Press the Photo button to take a photo, which will automatically be saved to the memory card.

Press the Record/Stop button to start recording, and press it again to end. You can also press the Power button to pause/resume recording during recording

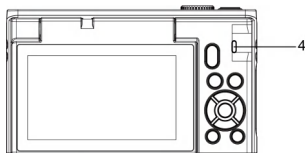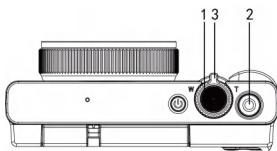

- 1: Photo button (takes photo/focuses)
 - 2: Video button (starts/stops recording)
 - 3: Digital zoom toggle
 - T: Digital zoom in / W: Digital zoom out
 - 4: Indicator light
- The active indicator light flashes while recording

Focus function

This function includes two focus modes: fully automatic focus and manual focus. Press the Menu button to open the menu, then press the left/right button to switch to system settings. Press the up/down button to find "Focus Mode", press the OK button to enter the focus mode, and select the mode you want.

Fully automatic focus

In this mode, simply hold the camera steady while taking a photo or video, and it will automatically focus. When you're done, press the capture button.

Manual focus

In this mode, when taking a photo or recording a video, half-press the photo button and a focus frame will appear on the display until the camera is in focus. Then press the photo button fully to take the clearest photo or start recording with the clearest image.

Fil light

In video mode, pressing the Up button quickly turns the fill light on or off. In photo mode, the fill light has three flash modes, and pressing the Up button quickly switches between them.

	No flash
	Auto flash
	Mandatory flash

Note: When the fill light is in auto-flash mode, it will only flash when taking pictures in dark environments. When switched to forced flash mode, the flash will always be on.

Media Playback

Press the Playback button to open the media library.

Select the video or photo file you want to view, then press OK to access the corresponding file to view the videos and images stored on the camera's memory card

Current/total number of images



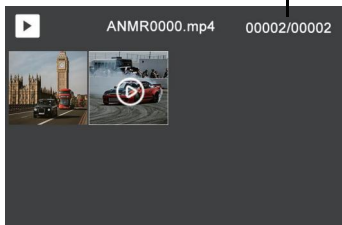


Photo playback/Video playback

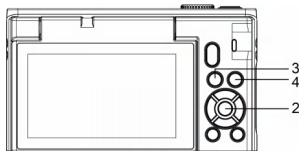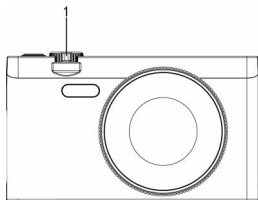

1: To view detailed information about a captured photo, toggle W/T

Note: After zooming in, you can move up/down/left/right to view more details

2: Press OK to play/pause the video.


3: Press Play to exit the video/photo playback.

4: Press Delete to delete the photo/video.


Note: Once deleted, it cannot be recovered

Connect to a computer

1. Use the provided USB cable to connect the camera's Type-C USB port to a USB port on your computer.

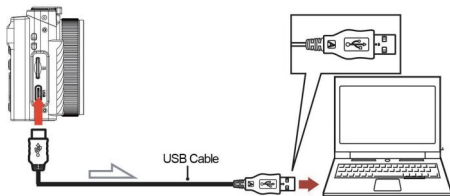

2. With the camera powered on, the screen will display available options. Press the Up/Down button, then press the OK button to confirm your settings.

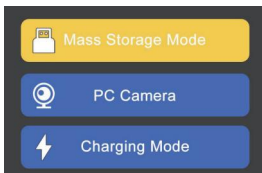

Storage Mode

Select "Storage Mode" and the computer will display the camera's memory card tray, allowing you to transfer files from the memory card to the computer.

PC Camera

Select "PC Camera" mode to use the camera as a PC camera, live streaming, and more.

Note: When using the camera as a PC camera, only the digital zoom button on the camera can be used: other functions are unavailable.

Charging mode

Select charging mode, and the camera will support normal video recording. Turning off the camera's power will fully charge faster than leaving it on.

WIFI APP User Guide

Press the MENU button to enter the menu. Press the left /right button to enter the system settings. Then press the up/down button to find the "APP User Guide" submenu. Press OK to scan and view the tutorial. To download the app, scan the QR code below.



WIFI APP User Guide QR Code



WIFI APP download QR code

Camera cleaning and maintenance

- (1) When the camera is not in use for an extended period, charge it at least once a month to extend the battery life. Store it in a dust-free, dry environment at a temperature not exceeding 30°C.
- (2) If dust or dirt gets on the lens or screen, gently wipe it with a clean, soft lens cleaning cloth.
- (3) As this is a precision instrument, do not drop it or subject it to strong shock or vibration.

Troubleshooting

If you are experiencing problems with your camera, refer to this section.

1. The camera cannot be turned on

(1) The battery is low, please charge the camera.

2. The camera is not charging

(1) The charging indicator light is off and the charger is not properly plugged in. Please check whether the charger is properly connected.

(2) The ambient temperature is below 10°C, which may cause slow charging or failure to charge.

4. Camera freezes

If the camera freezes unexpectedly, use a pinhole needle to poke the reset hole on the camera to reset it.

Tip: Do not press the capture button quickly while the camera is recording or taking a photo. Normally, the camera will display a waiting icon.

5. Memory card cannot be recognized:

(1) Please check whether the memory card complies with the SD card (Class

10) standard and does not exceed 256GB

(2) Please check whether the memory card is inserted upside down.

(3) When using a memory card with a camera for the first time, it is recommended to format it first.

Supplementary Notes

(1) Do not insert any objects other than the memory card into the slot.

(2) The camera may display an unstable image for a few seconds after turning on the power. This is not a malfunction.

(3) Due to the optical characteristics of the lens, there may be color dispersion (chromatic aberration amplification) at the edges of the image. This is not a malfunction of the camera.

(4) It is normal for the memory card to heat up after prolonged use.

(5) It is normal for the camera screen to heat up after prolonged use.

ADVERTENCIA

Para reducir el riesgo de incendio o descarga eléctrica:

1. No exponga este dispositivo a la lluvia ni a la humedad.
2. No coloque objetos llenos de líquidos (como jarrones) sobre este dispositivo.
3. No exponga la batería a calor excesivo, como la luz solar o el fuego.
4. No ingiera las baterías para evitar quemaduras químicas.
5. Mantenga las baterías nuevas y usadas fuera del alcance de los niños. Si el compartimento de las baterías no está bien cerrado, deje de utilizar este producto y manténgalo fuera del alcance de los niños.
6. Si cree que se ha tragado una batería o se ha introducido en alguna parte del cuerpo, acuda inmediatamente al médico.

PRECAUCIÓN

Si se manipula incorrectamente la batería, puede explotar y provocar un incendio o incluso quemaduras químicas.

Tenga en cuenta las siguientes precauciones.

1. No lo desmonte.
2. No aplaste la batería ni la someta a impactos o fuerzas externas, como golpes con martillos, caídas o pisotones.
3. No provoque cortocircuitos en la batería y no permita que objetos metálicos entren en contacto con los terminales de la batería.
4. No la exponga a temperaturas superiores a 60 °C (140 °F), como la luz solar directa o un coche aparcado al sol.
5. No la incinere ni la tire al fuego.
6. No tire las baterías de iones de litio dañadas o con fugas.
7. Mantenga la batería fuera del alcance de los niños.
8. Mantenga seca la superficie de la batería.
9. Sustitúyala únicamente por una batería del tipo especificado. De lo contrario, podría producirse una explosión, un incendio o lesiones.
10. Deseche las baterías usadas según las instrucciones.
11. Cuando utilice el adaptador de CA/cargador de batería, utilice una toma de corriente cercana. Si se produce algún fallo de funcionamiento, desenchufe la batería de la toma de corriente. Si utiliza un producto con luz de carga, tenga en cuenta que, aunque la luz se apague, el producto no se desconectará de la fuente de alimentación.
12. No utilice el adaptador de CA/cargador de batería en espacios reducidos, como entre paredes y muebles.
13. Si la electricidad estática o las interferencias electromagnéticas provocan la interrupción de la transmisión de datos, reinicie la aplicación o desconecte y vuelva a conectar el cable de comunicación (USB, etc.).

Acerca de la cámara

 
Requisitos del sistema

Los usuarios pueden transferir vídeos y fotos a un ordenador con la siguiente configuración:


Intel Pentium 2,0 GHz o superior / Sistema operativo Microsoft Windows XP o superior 2 GB de RAM 40 GB o más de memoria de disco disponible / Puerto USB estándar / GPU de 1 GB o superior Resolución de 1920 x 1080 píxeles o superior.

Piezas de la cámara

Vista trasera

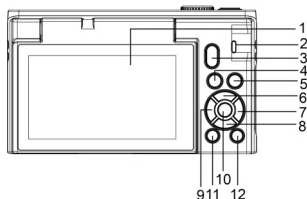


Vista frontal

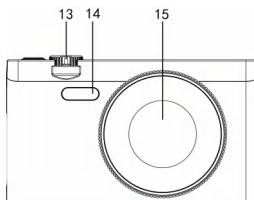 


- 1: Pantalla
- 2: Indicador de carga / Indicador de funcionamiento
- 3: Botón Q (ajuste rápido de parámetros)
- 4: Botón de reproducción
- 5: Botón de borrado
- 6: Botón arriba Atajo de luz de relleno / Mantenga pulsado para activar el Wi-Fi
- 7: Botón derecho

- 8: Botón abajo
- 9: Botón izquierdo
- 10: Botón OK/Botón modo
- 11: Botón DISP
- 12: Botón menú
- 13: Botón de zoom digital
- 14: Luz de relleno
- 15: Cámara trasera

 
Vista superior

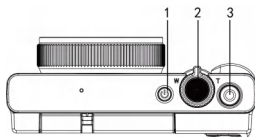

Vista inferior

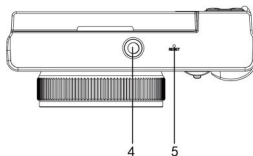 

Vista lateral izquierda

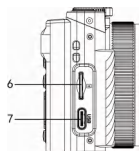 


- 1: Botón de encendido
- 2: Botón de foto
- 3: Botón de grabación de vídeo
- 4: Puerto para trípode
- 5: Botón de reinicio

- 6: Ranura para tarjeta de memoria
- 7: Puerto USB tipo C

Buttor / Indicador	Función
Botón de encendido	Encendido/apagado.
	Pulse brevemente para pausar el vídeo durante la grabación.
Botón FOTO	Haga una foto/pulse a medio recorrido para enfocar.
Botón Vídeo	Inicie la grabación/detenga la grabación.
Indicador luminoso	Indicador luminoso rojo de carga/indicador luminoso azul de funcionamiento.
Botón Q	Ajuste rápido de parámetros.
Botón Reproducción	Abrir/salir de la reproducción multimedia.
Botón Eliminar	Eliminar fotos/vídeos.
Botón Arriba	Seleccionar arriba.
	Pulsación corta para encender/apagar la luz de relleno.
	Pulsación larga para encender/apagar el wifi.
Botón Derecha	Seleccionar derecha.
Botón Abajo	Seleccionar abajo.
Botón Izquierda	Seleccionar izquierda.
Botón Aceptar	Confirmar.
	Abrir la página de selección de modo.
Botón DISP	Pulsación corta dos veces para bloquear la pantalla.
Botón MENÚ	Abrir/cerrar ajustes del menú.
USB	Carga con cable USB.
	Conectar el ordenador con un cable USB.

 Cargue la cámara.

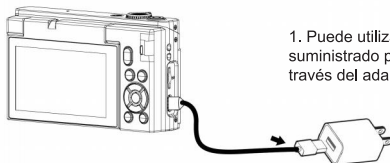

1. Puede utilizar el cable USB suministrado para cargar la cámara a través del adaptador (5 V/1 A~5 V/2 A).

*El indicador de carga se ilumina en rojo mientras la cámara se está cargando.


*Cuando la cámara está completamente cargada, el indicador de carga se apaga automáticamente.

Una carga completa típica de la batería tarda aproximadamente 3 horas.

Una batería completamente cargada proporciona aproximadamente 120 minutos de tiempo de grabación.

Encender/apagar la cámara

Pulse el botón de encendido y la cámara se encenderá automáticamente.

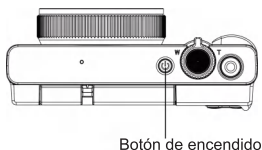

Para apagar la cámara, mantenga pulsado el botón de encendido durante 3 segundos.


Nota: La primera vez que utilice la cámara, deberá mantener pulsado el botón de encendido para encenderla.

Configure la cámara.

Puede personalizar la configuración de la cámara.

Después de encender la cámara, pulse el botón Menú para abrir el menú Modo y acceder a Ajustes del sistema.

Configuración del menú

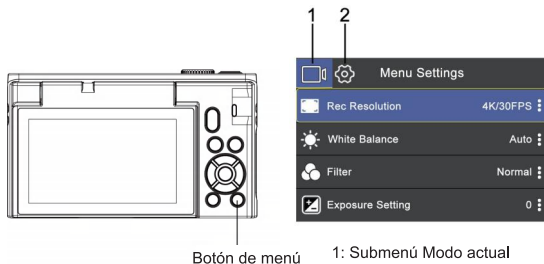

Botón de menú

1: Submenú Modo actual


2: Configuración del sistema

Submenú	Contenido del menú
Rotación de imagen	Apagar/Encender
Visualización de iconos	Apagar/Encender
Modo de enfoque	Enfoque automático/Enfoque manual
Wi-Fi	Apagar/Encender
Guía del usuario de la aplicación	Escanee el código QR para ver el tutorial
Frecuencia de la fuente de luz	Automático/50 Hz/60 Hz
Indicadores LED	Desactivar/Activar
Luz de ayuda al enfoque automático	Desactivar/Activar
Protector de pantalla automático	Desactivado/30 s/1 minuto/2 minutos
Apagado automático	Desactivado/3 minutos/5 minutos/10 minutos
Brillo de la pantalla	Alto/Medio/Bajo
Indicador de botón	Alto/Medio/Bajo/Desactivar
Música de inicio	Desactivar/Activar
IdiomaIdioma	Chino simplificado / Chino tradicional / Inglés / Japonés / Coreano / Ruso / Alemán / Francés / Italiano / Español / Portugués / Tailandés / Neerlandés / Polaco / Sueco / Rumano / Indonesio / Turco / Griego
Formato de hora	AAAA/MM/DD MM/DD/AAAA DD/MM/AAAA Hora/Minuto/Segundo
Configuración de hora	Año/Mes/Día
Configuración de fecha	Confirmar/Cancelar
Formato	Modelo y versión del producto
Información del dispositivo	Confirmar/Cancelar
Restablecimiento de fábrica	

Inserte y formatee la tarjeta de memoria.

Recomendamos utilizar una tarjeta de memoria de clase 10 o superior para un funcionamiento adecuado.

 1. Inserte la tarjeta de memoria hasta que oiga un clic.


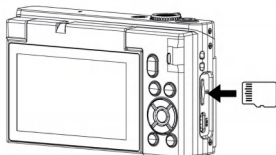


Inserte la tarjeta en la dirección indicada, prestando atención a los bordes y las esquinas.

2. Para extraer la tarjeta de memoria, empújela hacia dentro y saldrá automáticamente.

Formatear una tarjeta de memoria

Se recomienda formatear la tarjeta de memoria antes de usarla por primera vez. Para formatear una tarjeta de memoria, presiona el botón Menú para abrir el sistema de menús. Luego, presiona la tecla de flecha izquierda o derecha para navegar hasta Configuración del sistema. Presiona la tecla de flecha arriba o abajo para encontrar «Formatear» y, a continuación, presiona el botón Aceptar para entrar en el submenú. Selecciona «Confirmar» para formatear la tarjeta de memoria.

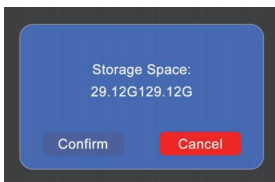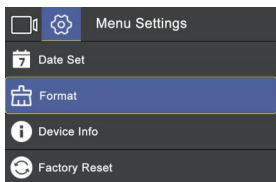

Nota:

Si el sistema de archivos de la tarjeta de memoria no es compatible, aparecerá el siguiente mensaje: «Sistema de archivos no compatible, ¿formatear?». Formatee la tarjeta de memoria tal y como se ha descrito anteriormente.

Al formatear la tarjeta de memoria se borrarán todos los datos almacenados en ella, que serán irrecuperables. Antes de formatearla, guarde los datos importantes en un ordenador.