

H Licht / Lights / Lumière / Lucas / Verlichting

1



2



3



OFF



1x



2x



3x



4x



I Blinken / Flashing / Clignotement / Intermitentes / Knipperen

1



2



3



4




1x




2x



1x

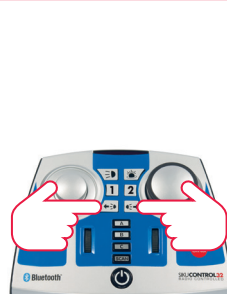

2x

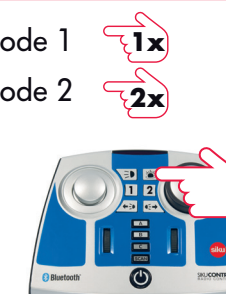


J Front-Anbaugerät wechseln / Change front attachment device / Remplacer un outil rapporté frontal / Cambiar equipo adicional frontal / Aanbouwapparaat voor wisselen

1



2

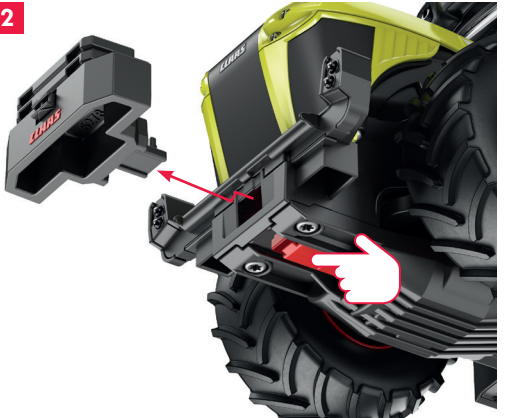

3



4




L Eigenen Modellnamen vergeben / Assign your own model name / Attribuer des noms de modèles propres / Asignar un nombre de modelo propio / Eigen modelnaam geven


1



2

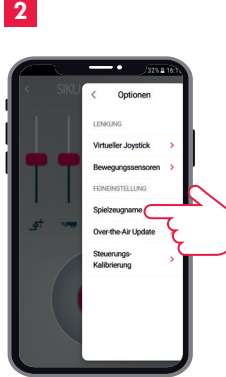

3

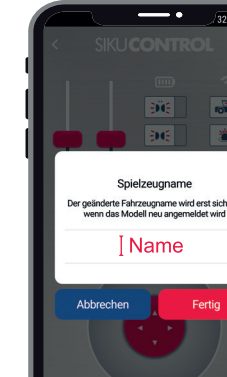


K Lenkjustierung / Steering adjustment / Ajustage de la direction / Ajuste de dirección / Stuurinrichting afstellen

1



2

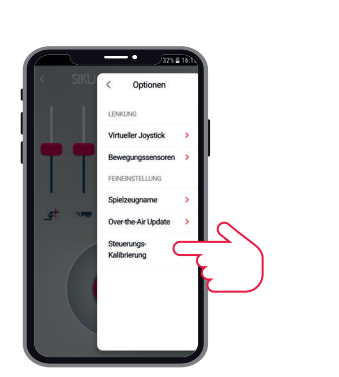

1.



2.



3.






<http://www.siku.de/de/downloads.html>

SIKUCONTROL
Bedienungsanleitung 6791 / Operating instructions for 6791
Mode d'emploi 6791 / Instrucciones de uso 6791
Gebruikshandleiding 6791

A Batterien einlegen / Inserting the batteries / Placer les piles / Colocación de las pilas / Baterijen plaatsen

1

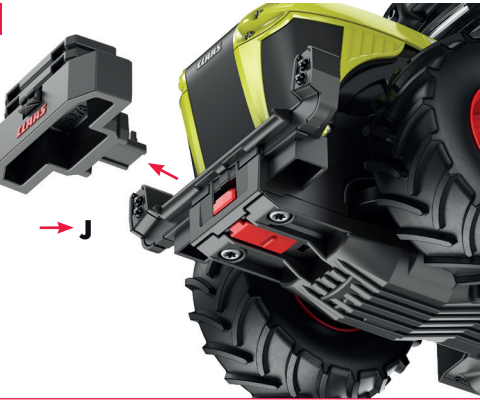


2




3



4

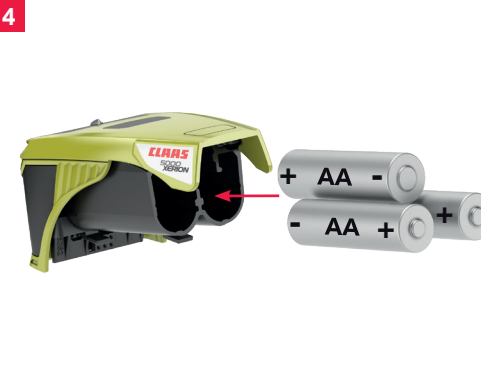

5

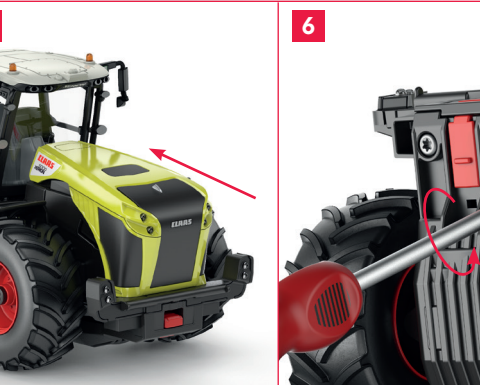

6

