 



Wireless Earbuds User Manual

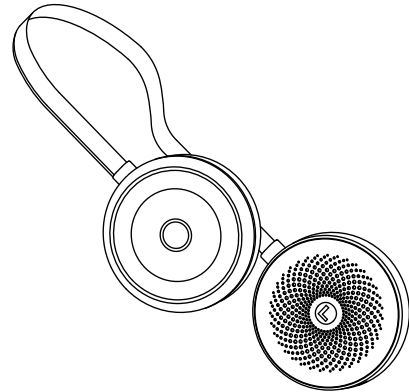

Model:T40

Package List

 Headphone x 1
Type c charging cable x 1
User manual x 1
Carry bag x 1




- ① Indicators
- ② MFB (Multifunction Button)
- ③ MFB(Volume+, Next song)
- ④ MFB(Volume-, Previous Song)

Specifcation

Working range	10 Meters
Working time	30H
Charging time	2H
Battery	200mAh
Working temperature	-20 C - 50 C

 Charger Your Speaker

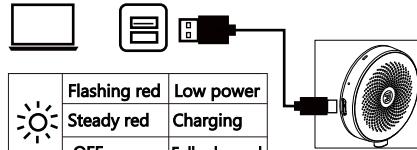

Flashing red	Low power
Steady red	Charging
OFF	Fully charged

▲Use the included USB cable to charge your speaker and make sure it is fully charged before frst use.

Pair With Your Device

Press and hold the power button 5s, Indicator will flashlight red and white fast

 
open the Bluetoothon your device and select “ **T40** ” start to pairing.



When turned on, the speaker will automatically connect to the last connected device if available. If not, it will enter pairing mode


Having connection problems? Remove “ **T40** ” from your device's Bluetooth history, ensure it's less than 3 feetaway then try pairing again.

How to place the headphones inside the helmet:

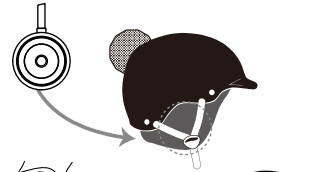

①

 1. Place the earphones into the slots inside your helmet liner.

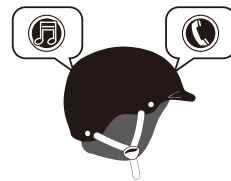

②

2.Listen to music, make calls and more while snowboarding and skiing.

On/Off

Press key	Operation	Action
○	Power On	Press and hold 3 second
○	Power Off	Press and hold 3 second

Music

Press key	Operation	Action
○	Play / Pause music	Single press
^	Volume +	Single press
v	Volume -	Single press
^	Next song	Press and hold
v	Previous Song	Press and hold

Voice assistant

Press key	Operation	Action
○	Activate Vioce Assistant	Twice press
○	Stop Vioce Assistant	Twice press

Call

Press key	Operation	Action
○	Answer Call	Single press
○	End Call	Single press
○	Reject Call	Press And Hold 2second (When A Call Coming)

Sound Notifications

Function	Voice
Turn on	Power on
Turn off	Power off
Bluetooth pairing	Pairing
Connected	Connected
Disconnected	Disconnected
Low battery	Please charger
Battery 70-100%	Battery high
Battery 30-70%	Battery Medium
Battery 10-30%	Battery low

Indicator

Power on	White light flashes 3 seconds
Power off	Red light flashes 2 seconds
Pairing	White and red light flashes altemately
Connected	White light fashes every 10 seconds
Charging	Red light
Fulled charged	Light off

Troubleshooting

1. The phone cannot find the headphones:

Possible reasons:

- (1) The headphones are not turned on and under standby mode;
- (2) Headphone program error;
- (3) Phone program error.

Solution:

- (1) Put the earphones into the charging case and close the case; then open the case and take the earphones out (the red and blue indicator lights flash alternately) to enter the pairing mode;
- (2) Please clear the pairing record of the earphones.
- (3) Restarting the phone and clear all pairing data in the phone's Bluetooth.

2. No sound from headphones:

Possible reasons:

- (1) Improper phone volume;
- (2) The headphones are not properly connected to the phone;
- (3) The headphones are out of operating range.

Solution:

- (1) Adjust the phone volume;
- (2) Reconnect the headphones;
- (3) Keep the earphones and phone within a range of 10m.

Precautions:

- (1) Do not perform any other actions while searching Bluetooth.
- (2) Please use headphones near your phone to ensure signal stability.

3. The red indicator light does not light up during charging Possible reasons:
The headphones have not been used for a long time.

Solution:

Charge the headphones for 30 minutes and the red indicator will light up.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and

(2)This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC RulesThese limits

are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposurerequirement. The device can be used in portable exposure conditionwithout restriction.