 


Break x1

ALL-IN-ONE PORTABLE PARTY SPEAKER

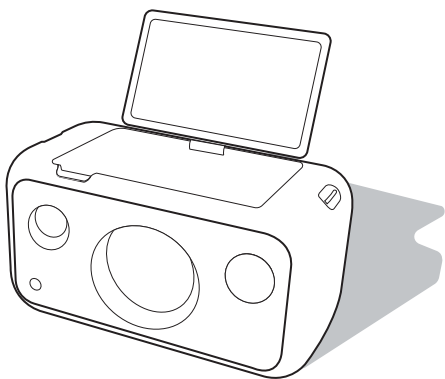

**INSTRUCTION
MANUAL**

Ikarao

TABLE OF CONTENTS

ABOUT THIS MANUAL	3
SPECIFICATION	4
01 PARTS AND FEATURES	4
1.1 WHAT'S INCLUDED	
1.2 PRODUCT OVERVIEW	
02 IMPORTANT SAFETY INSTRUCTIONS	6
03 QUICK START GUIDE	10
04 DETAILED USAGE GUIDE	11
4.1 POWER ON	
4.2 HOW TO USE THE KARAOKE MACHINE	
4.3 MAINTENANCE	
05 FREQUENTLY ASKED QUESTIONS	17
06 TRADEMARK	18

ABOUT THIS MANUAL

Congratulation on your purchase!

Get ready for a fantastic journey with this fully-function, portable karaoke machine.

The Ikarao Break X1 offers exceptional quality and value with Wi-Fi connectivity, stylish design as well as a 13.3 inches high-definition screen. It comes with two wireless microphones and a stunning 100-watt speaker, providing Bluetooth, Aux, USB,TF and HDMI for various devices, all to make you enjoy the party or have fun with your loves.

Our mission is to create vitality and bring joy. All concentration and expertise are incorporated into building this product with high performance for you. You will immersed in the powerful bass, cool LED lights and get a wonderful experience.

This manual is written to help you understand all karaoke kit and use it quickly.

Now, initialize your karaoke speaker by reading this instruction. Rock on and have an amazing time!

Ikarao Team

SPECIFICATIONS

AC power input:	90-240V~50-60HZ
DC power output:	24V 3.5A
Built-in battery	88.8 wh
Total output power:	100W
Speaker drivers:	2*2.25inch tweeters + 1*6.5inch woofer
Standby power consumption:	<0.5W
Singal-to-noise(S/N) ratio:	>85dB
Frequency response:	45Hz-20KHz (-10dB)
Battery charge time:	≤4 hrs
Battery play time:	≤10 hrs
Microphone charge time:	≤4 hrs
Microphone play time:	≤30 hrs
Bluetooth version:	5.3
WiFi profile:	EWN-8821CSN1CA
Screen size	13.3 inches
Product dimension(LxHxD):	500*275*253mm
Packaging dimension(LxHxD):	580*360*320mm
Net weight:	11.8kg
Gross weight:	15kg

1. PARTS AND FEATURES

1.1 What's included



2 x Wireless Microphones



1 x Karao Karaoke Speaker



1 x Shoulder Strap



1 x Power Cord



1 x User Manual



 
1 x Quick Start




1 x Warranty Card

1.2 Product overview

1.2.1 Top Panel

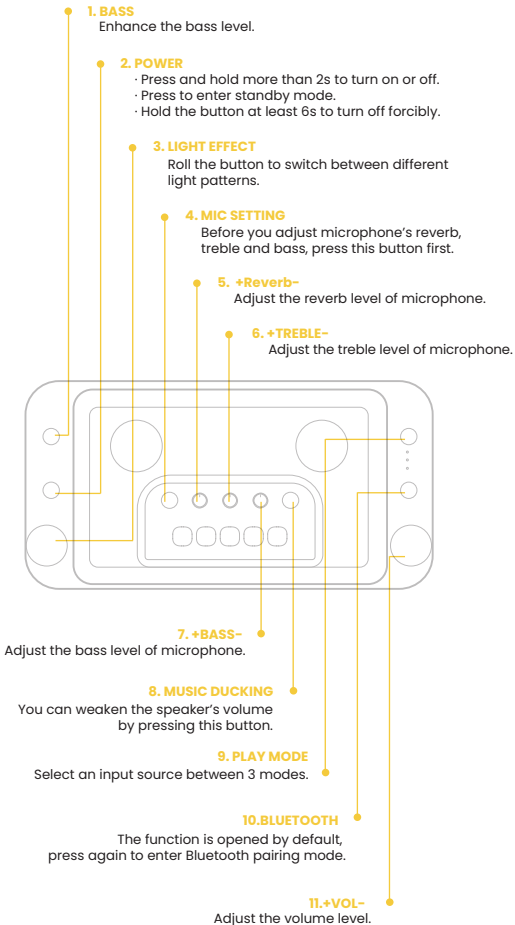

 1.2.2 LED behavior

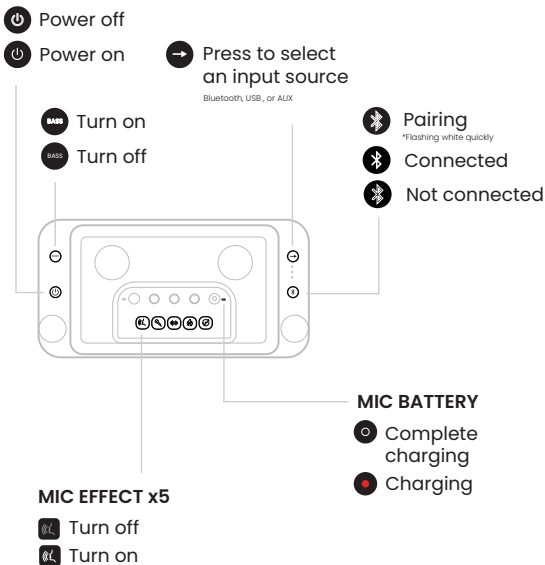


2. IMPORTANT SAFETY INSTRUCTIONS

Adhere to all warnings

1. Please read and retain this manual for future reference.
2. Do not block any of the machine's vents/openings.
3. Do not listen too close to the product.
4. Do not listen for an extended period of time at a high sound pressure level.
5. Do not install the product in an area that impedes access to the power plug.
6. Ensure the power cord is safeguarded from being stepped on or compressed, particularly at plugs, wall outlet and machine connection.
7. Use only attachments/accessories specified by the manufacturer.

 1.2.3 Back panel

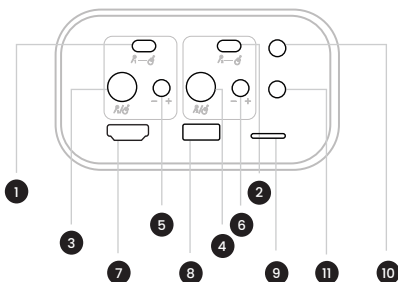

① ②

MIC - GUITAR

Switch to the device you plug in.

③ ④

MIC / GUITAR

Connect to microphone or guitar.

⑤ ⑥

GAIN

Adjust the resistance of guitar.

⑦

HDMI

Connect TV and cast the image to TV.

⑧

USB

1.Connect to a USB storage device.
2.Charge your mobile device.

⑨

TF

Insert a TF card.

⑩

AUX OUT


Connect an external audio device like earphone to output the audio source.

⑪

AUX IN

Connect an external audio device through a 3.5mm AUX cable(not supplied).

 -
8. The internal battery is not end-user replaceable. Do not attempt to remove the battery from this product.
 9. Do not force the TF card or SD card into the slot. Insert the card in correct order to avoid breakdown.
 10. Operating temperature should be between 0°C to 40°C.
 11. Clean with dry clothe after use. Do not use any corrosive cleaner or oil.
 12. To maintain peak performance and battery longevity, fully charge the apparatus once at least every three months and before storing it for a long period of time.



Check the machine from damage before each use.



Unplug this apparatus during lightning storms or when unused for long periods of time.



Do not expose apparatus to excessive heat such as sunshine, fire and other heat sources to reduce risk of fire or explosion.



Can't be placed in wet condition to avoid electric shock. Do not run charging cable through puddles or other moisture.

* Caution:

Risk of explosion battery is replaced by an incorrect type, dispose of used batteries according to the instructions.

Notice:



This product complies with the radio interference requirements of the European Community.

Declaration of Conformity Hereby, Taide Intelligence Technology Co., Ltd declares that this product is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: -----

Max Output Power: 10dBm

Operating Frequency Range: 2.402Ghz-2.480Ghz



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following.

MEASURES:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement (Only for Speaker)

 
This equipment complies with FCC radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiation & your body.

3. QUICK START GUIDE

- #1** Place the speaker on a flat, stable surface.



- #2** Unlock the tablet, and gently rotate it to the desired angle.



- #3** Charge the machine and microphone. Keep microphones into the shell, in which way they can be charged.



- #4** Power on the machine and the microphones. Adjust the mic volume level by pressing +vol-.



- #5** Open the "WiFi" in the home page and search your Wi-Fi name to connect network.



- #4** Open your installed app to enjoy video or music.



- #7** Open the Bluetooth on your smartphone and search your device name (IKARAO-X1-xx) on the corresponding page of the screen to make connection.



- #8** Select your favourite song on the phone and twisting with the music!



Notice:

See the "Detailed Usage Guide" section of this manual for more information on how to operate your machine.

4.DETAILED USAGE GUIDE

4.1 Power on

Cautions:

- Use the provided power cord only.
- You can use built-in battery as power supplier to the speaker after full charge.
 - 1) To use the built-in battery, disconnect AC power after charging the speaker.
 - 2) Press Power and hold for about 2 seconds to power on.

TIPS:

- Fully charge the speaker before first-time use to prolong the lifespan of the built-in battery.
- To protect battery lifespan, fully charge at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.
- You can check the electric quantity and select standby mode on the screen. Press your power button can enter standby state. Press your power button again or random touch your screen will go back to normal.

4.2 How to use the karaoke machine

You can quick start using this karaoke machine in accordance with quick guide and see more details in the following part.

Notes:

- The option order is Bluetooth -> AUX -> Local play(USB included).
Switch to the mode you like on screen or on the function board.
- The machine will remember your last option before you turn it off.
- When you select the mode, the Bluetooth connection will not be affected.



Bluetooth



AUX



Local play(USB included)

4.2.1 Table

How to connect to WiFi

Find the WiFi in the "Setting" menu and select a WiFi network from one of the available options.

How to use the Slide-Up menu on the tablet

- The main menu is located at the left side of the screen's Homepage and offers shortcut options that give you access to WiFi, Bluetooth, Light effect, Music effect, Setting, Accelerate, etc.
- The "Sing" section lets you access the Media player easily, where you can browse music libraries and create your personalized song list for a free-spirited singing experience.
- The "APP" section provides quick access to a variety of apps, catering to your needs for video, music, films, or shorts. Also, you can easily install your favorite apps using the install pack.
- The "More" part allows you to manage local files, cleaning app as well as screen cast.

 
Shortcut:

- Quickly access Bluetooth or WiFi by clicking on the respective icon on the Homepage.
- The equalizer can be changed to 3 audio modes, click on "Music Effect" to switch music effects between Hi-Fi, outdoor, light in turn.
- Easily adjust some parameter such as volume, brightness, resolution in "Setting".
- Use the "Accelerate" feature to clean out old files to speed up your machine.
- Find a simple user guide in the "Help" section.

4.2.2 Microphone

How to turn the microphone on/off

Press power on each of the microphones to turn on and off. Short press can change the mic mode.




How to charge the microphone

After using a microphone, turn it off first and put in into the slots of the shell, they can be charged when the machine is in normal. When microphone's battery is low, it will turn off automatically.



How to adjust the microphone volume

 Press +Mic Vol- to adjust the volume level of the microphones.



How to switch to other songs

  While using local player, long press the middle button to change next song and press to control music playing.



How to use Mic Priority mode

To turn Mic Priority mode on or off, press the Music Ducking (8) button on the machine's function board.

4.2.3 Speakers

How to connect Bluetooth

1) Connect

- First time to use Bluetooth, turn on the Bluetooth Setting on your smartphone and search for the machine name "IKARAO-X1-xx". Then choose this name to make connection.
- When you turn on this speaker next time, it will reconnect the last connected device automatically in the first 1min, and after 1min other devices can search this machine.

- If you want disconnect current device, you can short press the Bluetooth ⌘ to enter pairing mode and connect other devices. Bluetooth mode will turn off if you do not operate in 10mins.

2) Disconnect

- Once you turn off the Bluetooth mode on your phone, the machine will be disconnected and enter pairing mode, in which situations can be connected by other phones.

* Caution: Do not turn your smart device volume to maximum or damage to speakers may occur.

How to connect to a TV (HDMI Mode)

Plug an HDMI cable into the HDMI port **(7)** on the machine's back panel board and into your TV. The image will now come from both the machine and TV simultaneously.

How to start USB mode

Plug a USB cable into USB port **(8)** and your device to play music from a USB drive. Press **→** to change your play mode. Once local play mode is opened, the LED light will shine on the function board. Then enter the File management and choose which file you'd like to play.

How to use SD mode

Plug your TF card into the TF port **(9)** on the back panel. Press **→** to enter local play mode.

Then find the "Media Player" on the screen and choose which file you'd like to play.

How to use AUX (in) mode

1. Playing music from an AUX-compatible device

(such as phone or MP3 player):

When the machine is on, plug an Aux cable into the AUX In port on the back panel and into the designated output on the device. Then press **→** to enter AUX mode.

2. Use your Aux In port to broadcast:

Register your preferred broadcast app (such as Facebook, Tiktok, YouTube, etc.) and connect your phone to the machine. You can use Break X1 now broadcast live online.

* Caution: Do not turn your external device volume to maximum or damage to speakers may occur.

How to use AUX (out) mode

Output audio file from karaoke machine:

When the machine is on, plug an Aux cable into the AUX out port on the back panel and into the designated output on the device (Such as earphone). Then press → to enter AUX mode.

* Caution: Do not turn your external device volume to maximum or your ear will hurt.

How to connect a guitar to the machine

The Mic port is also compatible with guitar. Plug a guitar cable into the MIC/GT. IN (1/2) on the machine and into the guitar.

To adjust the guitar's volume on the machine's speakers, find the related option in the "Setting" to choose your desired volume level.

Note You may wish to download a guitar equalizer app to assist you in balancing your guitar's sound.

How to use TWS mode

First make sure only one speaker connects smartphone. Then find the TWS mode in the " Setting" on speakers' screen and open the function, keep the Bluetooth of another speaker you want to connect open and wait for a second, you will be shocked by stereo effect.

If none of your speakers connects smartphone, the speaker which launches TWS will be regarded as main speaker. All operations on the host are synchronized with the slave.

Note

- 1) If two speakers are beyond the signal interval, TWS will break up. To restore the connection, you can get a suitable interval in 5mins.
- 2) If the main speaker turns off or exits TWS mode, the secondary speaker will enter pairing mode with Bluetooth icon flashing quickly. You can connect one of your devices to it. The Bluetooth LED will turn off with no connection in 10mins.

How to sing karaoke using your machine's tablet

Ensure the mics are set up correctly and that mic priority (Music ducking) mode is off.

On the tablet, pick one of the pre-install music apps or download your own favorite music app for karaoke tracks (i.e. songs with the vocals removed).

Note

- 1) Both paid and some free karaoke tracks are readily available on most popular music apps. Many also include lyrics that display in sync with the music. For instance, by searching "Sing King" (or similar) on YouTube you can find dedicated karaoke channels with lyrics displayed.
- 2) Some music apps are specifically karaoke apps, and thus will offer you these features for their entire library.

4.3 Maintenance

How to clean

Turn the machine and microphones off. Unplug the machine's power cord and disconnect any AUX, HDMI, or USB plug-ins.

Gently wipe outside of the machine using a clean, dry cloth. Keep all vents, buttons, and openings free of lint and dirt. Do not immerse the machine in water and do not use any harsh cleaners.

How to store

Charge the machine and microphones so that they are ready for next use. Put the wireless microphones in their slot. Make sure that the machine is clean and dry and put it into storage box.

Bind the power cord with electrician-approved fasteners gently.

Note

Do not wrap or fold against the natural bend of the cords or other cable. Do not wrap the cord around the machine). Store the machine in a cool, dry place away from damaging elements.

How to transport

The Break X1 was designed for easy transport and mobility.

Begin by unplugging all wires from the machine and swiveling the touch-screen tablet into its built-in resting mount.

Place the microphones in the two slots built in the machine.

Using the included shoulder strap, feed the ends of each side through the hooks attached to the top of the machine. Ensure that it is tightly and securely in place by looping it over the hooks and through the plastic fastener connected to the strap.

5.FREQUENTLY ASKED QUESTIONS

* Caution: Never try to repair the product by yourself. If you have any problems while using this product, check the following points before you request service.

Problem	Solution
The machine is not turning on	The battery is depleted. Be sure to charge the machine after each use.
Microphone is not turning on	The microphone is low or depleted. Put in into the built in position to get charged.
USB or TF mode is not working	Ensure that the tablet is set the right mode, if not, you can press the → for your selected input. If no response, try unplugging either USB or TF card from the machine and turn it off. Turn the machine back on and put your USB/TF in, then proceed with the step.
Machine is not playing microphone's vocals	Ensure that the microphone has been turned on and volume is appropriate.
Next song is not playing	Check whether the machine is loop setting and the machine must rest to play all in order for the next song to play.
Song name is garbled	Check the format of file on your device.
Machine powers on and then shuts down	Battery is low. Please charge about 30mins at least and turn it on.
Intermittent or no audio	·Ensure that the volume on the machine and your device(if applicable) are not muted or too low. ·Move your apparatus away from any possible interference. ·Unplug any audio cord(such as data cord, AUX) then try to play again.
Machine is not connecting Bluetooth	Check if ✖ on the function board is flashing. If not, press the Bluetooth button to enter pairing mode. Then disable and re-enable the Bluetooth mode on your device. Try to connect again.
Machine is not connecting WiFi	Please ensure that the WiFi router and the machine are in proper distance to one another and that the WiFi network is functioning properly.

COMMON QUESTIONS

Q1: Can I use it while it is on the charger?

A :Yes, you can use it while charging, but please don't overuse it so as not to drain the battery.

Q2: How many microphones can be connected to the machine at most?

A: Two wireless mics, two wired mics.

Q3: Is it water resistant? Can I take it outdoors?

A: Our speakers are mildly waterproof, such as sweat, little juice and water droplets splashing, etc, and sure you can take it outdoors, super long battery playing time lets you spree anytime. To get the best performance, you can wipe your machine with a clean, dry rag.

Q4: Can it be setup as a regular speaker?

A: Yes, it can be set up as a regular speaker. And TWS allows you to arrange two speakers in the same area to build your own PA System.

If any part of the machine becomes damaged, stop use and consult a licensed electrician for repair. Do not attempt to modify or fix the machine yourself. You can also contact our customer service department.

6. TRADEMARK



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Aika Electronic Technology Limited is under license. Other trademarks and trade names are those of their respective owners.

WE'RE HERE FOR YOU

For any issues, questions or comment regarding your machine, please feel free to contact us.
Have your warranty information on hand for faster service.

www.ikarao.com