


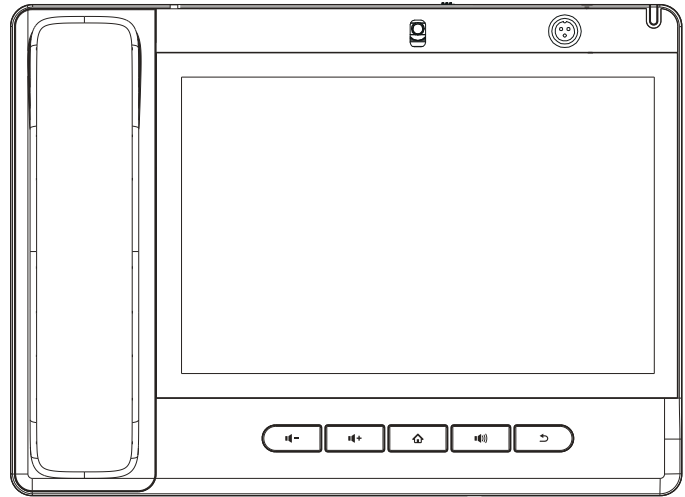


A330i

Quick Installation Guide

Fanvil Link Technology Co.,LTD
www.fanvil.com

Packaging list

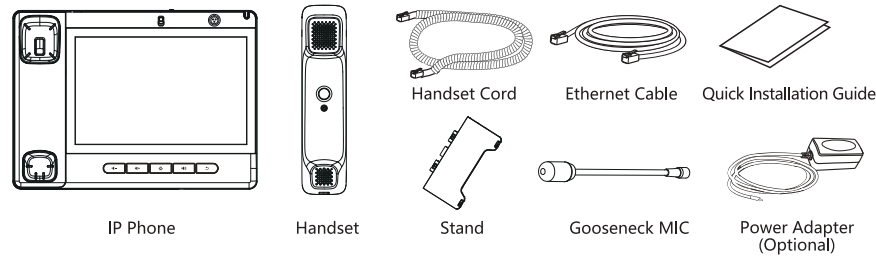

Screen icon

In hands-free mode	Call is on hold	New SMS	Dialed call
In headset mode	Auto-answering activated	New VM Messages	Missed call(s)
In handset mode	Call Forward activated	Do not disturb activated	Forward call
Mute activated	Internet is disconnected	Missed call(Status bar)	Enable Blocked List
Ringer off	Internet is connected	Received call	Enable Allowed List

Keys features



Power Led



In idle mode or during ringing: decrease or increase ring volume
In communication: decrease or increase handset, headset or hands-free volume



Home Key, Return to standby home page




Hands-free key, Activate/deactivate hands free



Return key,Return to the previous menu/page


Installation the device

• Desk Mount Method

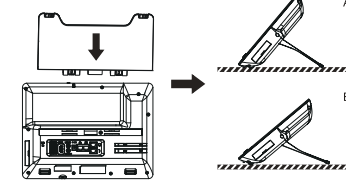

• Gooseneck MIC installation


① After aligning the gooseneck microphone with the port, load it and tighten the nut.

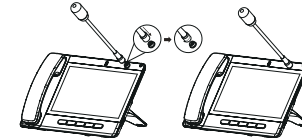

• Connecting to the Device

Please connect power adapter, network, PC, handset and headset to the corresponding ports as described in below picture.

- ① TF Card Slot: Supports external SD cards up to 256 GB.
- ② USB Port: Connects USB devices (USB disk).
- ③ Type-C Port: Compatible with multiple devices.
- ④ Alarm Input: Connects alarm sensors to trigger preset alarms.
- ⑤ RS-485 Port: GND, RS-485A, RS-485B.
- ⑥ 1 Short-Circuit Output: Controls electric locks, alarms, etc.
- ⑦ HDMI Port: Connects external displays for HD video/audio.
- ⑧ LINE IN: Connects broadcast servers, external audio sources, etc.
- ⑨ LINE OUT: Connects power amplifiers, etc.
- ⑩ Power Port: Connects power adapter, DC 12V, 3A.
- ⑪ Network Port: Connects to LAN or Internet.
- ⑫ PC Port: Connects to computer's network port.
- ⑬ Headphone Port: Connects headphones.
- ⑭ Handset Port: Connects IP Phone handsets.

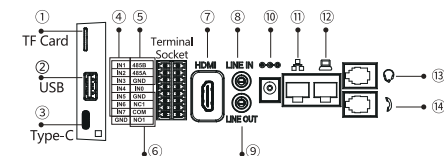

• Camera information

1: Move the slider to block the camera.



2: Turn the knob to adjust the camera Angle.



Configuration

Configuration via Phone

1. Press Phone Settings icon .
2. Select Advanced Settings > Ethernet > IPv4 > Network mode, configure network settings(DHCP/static IP).
3. Advanced Settings > SIP setting, select the SIP line, configure and enable the SIP account, and fill in the SIP server address,port,username, password,etc.

Configuration via Web

1. Get the IP address from the phone: Press Phone Settings icon > Status > Common.
2. Login: Input the IP address in the web browser. The PC and phone should be in the same IP address segment. (The default username and password are both 'admin'.)
3. Configure: Select Network/Line, etc. And fill the relevant content.
4. Save the configuration.

Language settings

1. Press Settings icon > System Settings > System language.
2. Select the desired language.

Making a call

1. **Direct dialing** : Lift the handset and enter the phone number.
2. **Hands-free** : Press speaker key and dial phone number .
3. **Headset**: Press the Headset DSS key and dial phone number.
4. **Dial icon**: Click dial icon and then enter the phone number.
5. **Designated line** : Press line key first; enter phone number and then press dial key.

Accepting a call

1. **Using the handset** : pick up the handset.
2. **Using the headset** : press Headset DSS key.
3. **Using the hands-free** : press .

Putting a call on hold

1. Press the Hold soft key during an active call.
 2. To resume the call, press the Resume soft key.
- Note: with more than one active call, select desired call by sliding screen and use the corresponding soft key to hold or resume.

Call conference

1. Press the Conference soft key during an active call. The call is put on hold.
2. Call the second party's number.
3. After the second call is established, press the Conference soft key to let all parties joined in the conference.

Call transfer

Attended transfer:

1. Press Xfer icon during the active conversation, the call is put on hold.
2. Dial the second telephone number.
3. When the call is answered, then press Xfer icon to complete the operation.

Blind transfer:

1. Press Xfer icon during the active conversation, the call will be on hold.
2. Then enter the 2nd telephone number and press Xfer icon, so we can transfer the call to the second number.

Call forward

1. Click the phone settings icon > Advanced Settings > SIP Settings > select a line > Call Forwarding Settings
2. Enter the number to be forwarded in the "Always Forward Number", click OK, and at the same time turn on the "Enable Always Forward" button, then click Save.

Call mute

1. More > Mute, Press to mute the microphone during the call.
2. More > Mute, Press again to un-mute the conversation.

Call list

1. Call > Call Log, press Call Log icon .
2. Swipe the screen up or down.
3. Select a number, and you can make a call.

Phonebook

Access phonebook:

1. Call icon > Contact, select All or other group.
2. Select a number, press detail icon ①, press the call icon .

Add new entry:

1. Press Contact > All, select Add icon.
2. Enter the name and mobile phone number, select the corresponding SIP line, upload the contact's photo, and press the .

Programmable keys

DSS virtual keys :

1. You can use the phone web interface to configure the keys of the screen.
2. Press unfold > you can press any keys which is still blank or long press the key that have configured, select a type and value, press .

Redial

1. On the main interface, unfold the keypad, select the Redial button, and redial the last called number.

Do not disturb

1. Press DND icon when standby or click Phone Settings icon > System Settings > DND.
2. Select the mode.

Voice message

1. To access to your voice mail, press Voice Message icon ; it will be unread VM quantities indicated on the icon if there were new messages.
2. Select the line and press phone icon to call.

Bluetooth

1. You can pull down the status bar and press the Bluetooth icon to turn on Bluetooth.
2. You can press the Settings icon > System Settings > Bluetooth > Connected Devices > Pair new device. Once enabled, the list of scanned Bluetooth devices will be displayed. Select any device and press it to pair.

Wi-Fi

1. Go to the Settings icon > System Settings > Wi-Fi, enable it, and then you can browse the list of available Wi-Fi networks.
2. Select an available network, click on it to enter the password for connection, and then click CONNECT.

Fanvil Link Technology Co.,LTD
Website: www.fanvil.com
EMail: sales@fanvil.com support@fanvil.com
Tel: +86-755-2640-2199
Add: 13th Floor, Building 2, Runzhi R&D Center, Xin'an Street, Bao'an District, Shenzhen, Guangdong, China