 


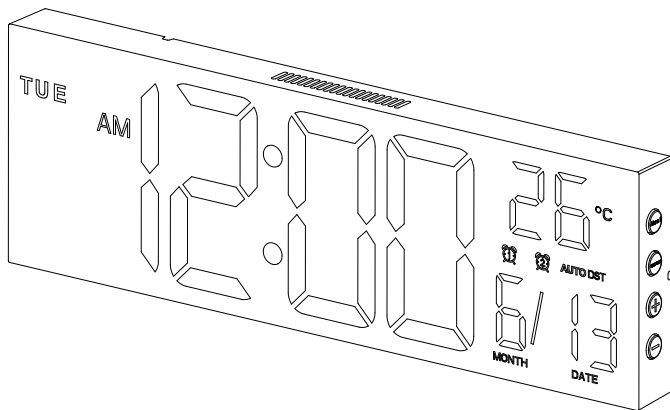


Digital Wall Clock User Manual



Contents

1. Installation	1
2. First use	2
3. Overview	3-4
4. Time Set	5
5. Alarm Set	6-7
6. Temperature	7
7. Screen brightness, Font Colors, Night light	8
8. Countdown, Volume Setting	9
9. Daylight saving time	10
10. Settings with device buttons	11-12
11. FAQ	13
12. Warranty	14

 Installation

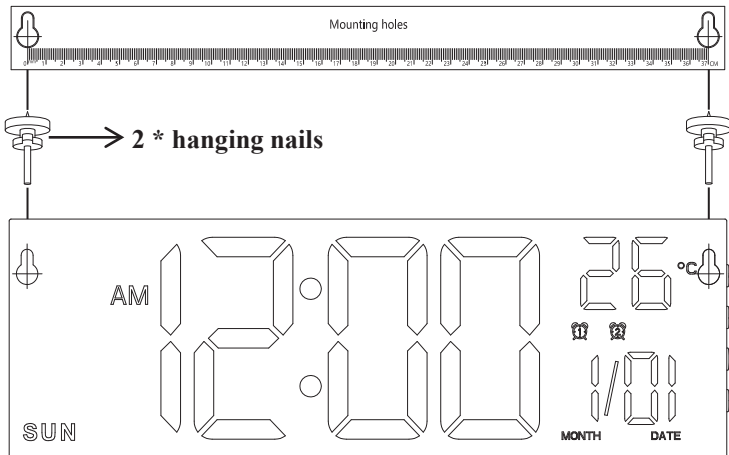


1. Align the positioning hole to nail the hanging nail to the wall.
2. Hang the alarm clock on the nail.
3. Installation completed

Start to power on


Power on for the first time

 Connect the DC power plug to the back connector of the alarm clock, and the USB plug at the other end is connected to the charging head to plug into the 100V-240V home socket. As shown in the following figure:

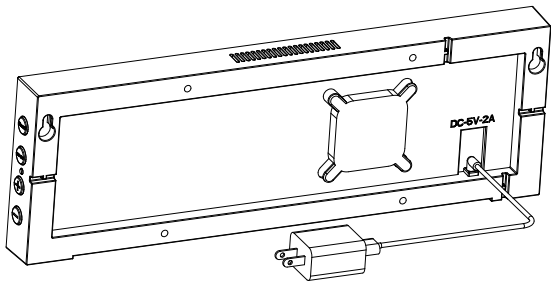


This alarm clock must work with power adapter. We provide lifetime warranty for every customer. We strongly recommend you to contact us with your order ID to activate the warranty. You can also visit www.jall-us.com to activate lifetime warranty. If missing any accessories, please contact us for replacements.

 Device Overview

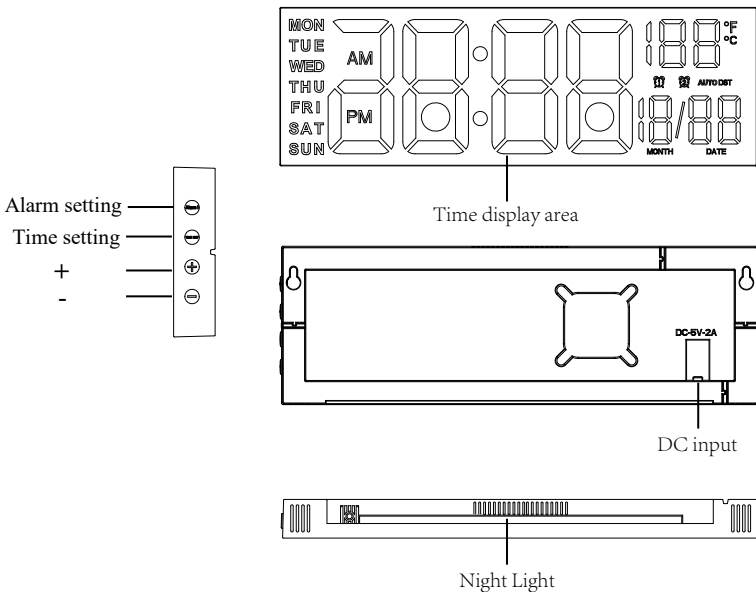

Remote Control Overview

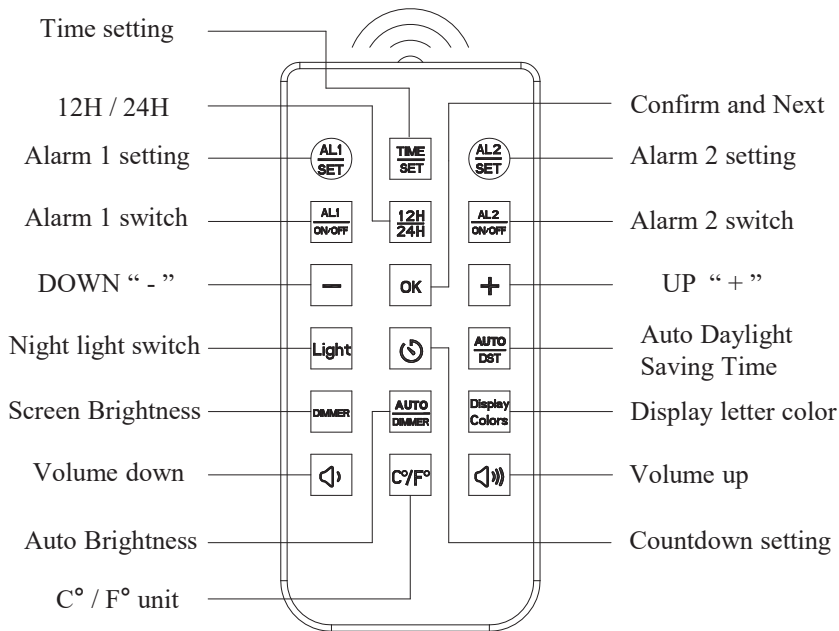 

Time Setting (by remote control)

Note: we strongly recommend to set with remote control for the whole setting.

1. Press  to select **12-Hour** or **24-Hour** mode according to your habits.
2. Press  to turn on AUTO DST, it's for daylight saving time area.
If you don't need it, just ignore this step.
3. Press  to enter the time setting, you will set in sequence for
Hour > Minute > Year > Month > Date
4. The "Hour" is flashing, press   to select value. Press  and next.
5. Then "Minute" is flashing, press   to select value. Press  and next.
6. Then "Year" is flashing, press   to select value. Press  and next.
7. Then "Month" is flashing, press   to select value. Press  and next.
8. Then "Date" is flashing, press   to select value.
Press  to finish time setting.

Note: You don't have to set the day of the week. It's calculated automatically.
When you turn on Auto DST, time will auto adjust on March and November.
If you don't need auto DST, please turn it off.

Alarm Setting (by remote control)

1. Press  to activate / inactivate alarm #1. You will see the icon  appears, that means alarm #1 is activated, while disappears means alarm #1 is inactivated.
2. Press  to enter the alarm #1 setting, you will set in sequence for **Alarm Hour > Minute > Alarm Mode** (MON-SUN, MON-FRI, SAT-SUN).
3. The “Hour” is flashing, press   to select value. Press  and next.
4. Then “Minute” is flashing, press   to select value. Press  and next.
5. Then select your alarm mode. There're 3 modes to choose from.
 - 1-7 means alarm works for Monday to Sunday (every day).
 - 1-5 means alarm only works for Monday to Friday.
 - 6-7 means alarm only works for Saturday to Sunday.Then press  to finish alarm setting.
6. You can press   to adjust alarm volume from V01 to V05.

Note: Please follow the same setting to set Alarm #2.

How to stop alarm?

1. When the alarm goes off, press any buttons on remote control to stop the alarm. It will go off the next day.
2. Without any operation, the alarm will ring for 20 minutes and stop automatically. It will still go off the next day.

Note: If you want to disable the alarm permanently,

press  or  to turn it off so that it won't go off the next day.

You will see the alarm icon   disappear on the screen.

Temperature Unit

Press  to change temperature from C° to F°.

Note: The temperature is detected by the sensor inside the clock. You can't set it manually.

Screen Brightness

1. In the time display state, press  to adjust the screen brightness from High -> Low -> High.
2. You can also press  auto-dimmer button to auto adjust the screen brightness. In this mode, the brightness will auto change according to the environment light, makes it dimmer at night and brighter at daytime. It shows “ON”, which means it’s turned ON, while “OFF” means it’s turned OFF.

Font Displaying Colors & Night Light

1. Press  to change letter colors. If you want to freeze certain color, you can hold the button and release it when you find your favorite.
2. Press  to turn ON / OFF the night light at the bottom.
3. When the light is on, press   to adjust the brightness of the light (range: L01-L10)

Countdown Setting

1. Countdown switch

In the time display screen, press  to set countdown time,

Press   to set your desired time (range from 1~30MIN).

Press  to start counting down. If you want to stop it and return to time display screen. Just hold  for 2s to quit.

2. How to stop the bell rings?

- 1) Press any buttons to stop it.
- 2) The bell will ring for 60 seconds and stop automatically.

Volume Setting

 
In the time display screen, press   to set alarm volume range from (V01-V05)

Daylight Saving Time

1. Press **DST** to turn ON / OFF AUTO DST, it's for daylight saving time area. It will automatically adjust displaying time on the 2nd Sunday of March and 1st Sunday of November. When it's ON, the screen will show "AUTO DST".
2. If your area doesn't apply to daylight saving time, please turn DST OFF.

Tips for remote control


Please aim at the product when using the remote control.

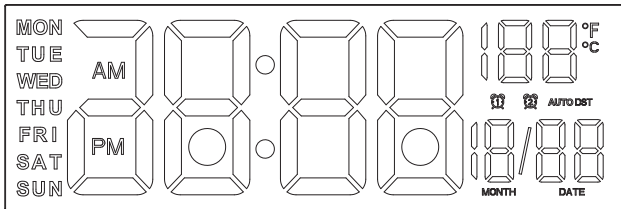

Settings without remote control

We recommend users to set by remote control.

 For any reasons, if missing remote control, you can set up basic settings by pressing buttons on the device. However, functions like “Night light”, “DST”, “Countdown”, “Brightness setting”, “Display Colors”, “Volume” can only set by remote control.

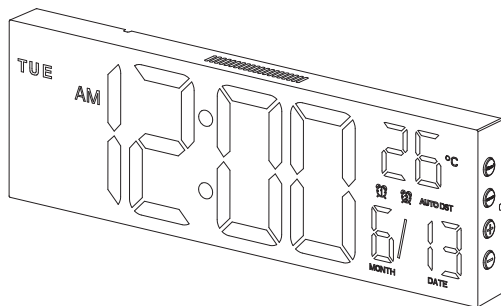

Alarm setting

Time setting

+

-



Time Setting (by device buttons)

Note: we strongly recommend to set with remote control for the whole setting.

1. Press  button on the right of device to enter time setting. You will set in sequence for **12/24H mode > Hour > Minute > Year > Month > Date**
2. The “12H / 24H” is flashing, press   to select value.
Press  to confirm and next.
3. Then do the same for “Hour”, “Minute”, “Year”, “Month” and “Date”.

Note: You don't have to set the day of the week. It's calculated automatically.

Auto DST can only set by remote control.

Alarm Setting (by device buttons)

1. Press  to activate / inactivate alarm #1. You will see the icon  appears, that means alarm #1 is activated, while disappears means alarm #1 is inactivated.
2. Hold  button for 2 seconds to enter the alarm #1 setting, you will set in sequence for **Alarm Hour > Minute > Alarm Mode (MON-SUN, MON -FRI , SAT-SUN)**. Press  button to confirm and next.
5. After setting Hour, Minute, you will need to choose alarm mode:
1-7 = Monday to Sunday, 1-5 = Monday to Friday, 6-7 = Saturday to Sunday

FAQ

This section summarizes the most common issues you may have. If you're unable to solve the issue, please feel free to contact [**ThreeDucksDirect@outlook.com**](mailto:ThreeDucksDirect@outlook.com).

Q1: The day of the week is wrong.

The day of the week is calculated automatically. Please check if the “Year”, “Month”, “Date” are set correctly. Many customers may have set a wrong “Year”.

Q2: The temperature is inaccurate

The temperature is detected by the inside sensor. The inside circuit may produce heat, making it not so accurate as professional thermometer. It's normal. We need your understanding, after all this is not a professional device as thermometer.

Q3: The remote control doesn't work.

The remote control is powered by CR2032 battery. If it doesn't work, it may be run out of battery. Please try to replace CR2032 battery.

Q4: The remote control is not sensitive.

The sensor is in the front of the device. When you press the remote control, please point directly to the front of the device.

Q5: The alarm doesn't go off at preset time.

Please check if your alarm mode is set to 1-5 (Monday to Friday). In this mode, it won't go off on Saturday and Sunday.

Warranty

Missing any accessories or any questions during usage, please contact us.

We provide lifetime warranty to every customer.

Contact us to activate your lifetime warranty Now!

Don't forget to include your order ID when contact.

Email

ThreeDucksDirect@outlook.com

Visit

www.jall-us.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection

against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.