 


➤ Product Diagram



1. This remote is a universal remote controller. It's normal that a few keys might not be applicable to your device because of different codes by different manufacturers.
2. This manual is a universal user manual. And there are 4 versions for this remote. Standard, Standard with Mic, Backlight, Backlight with Mic.

- (1) Transmission: 2.4G RF wireless
- (2) Sensor: 3-Gyro + 3-Gsensor
- (3) Number of Keys: 81
- (4) Range: 10m
- (5) Battery Type: AAA\*2
- (6) Material: Plastic & Silicone
- (7) Size: 172\*52\*19MM
- (8) Weight: 100g

Home: Go back to the home screen;  
Return: Go back to previous screen;  
OK: Confirm action or inset cursor;  
Cursor Lock: Short press to lock the cursor,  
Press again to unlock it.

|                                                                                       | Android                 | Windows                |
|---------------------------------------------------------------------------------------|-------------------------|------------------------|
|    | Power Off               | Power Off / Sleep      |
|    | Rewind                  | Rewind                 |
|    | Forward                 | Forward                |
|    | Previous                | Previous               |
|    | Next                    | Next                   |
|    | Play / Pause            | Play / Pause           |
|    | Zoom in                 | Zoom in                |
|    | Zoom out                | Zoom out               |
|    | Menu                    | Menu                   |
|    | Back to Home Screen     | IE                     |
|    | Back                    | Mouse Right            |
|    | Up                      | Up                     |
|    | Down                    | Down                   |
|    | Left                    | Left                   |
|    | Right                   | Right                  |
| OK                                                                                    | Mouse Left              | Mouse Left             |
|  | Volume Up               | Volume Up              |
|  | Volume Down             | Volume Down            |
|  | Page Up                 | Page Up                |
|  | Page Down               | Page Down              |
|  | Mute                    | Mute                   |
|  | Mouse Lock              | Mouse Lock             |
|  | Mediam Player Shortcut  | Mediam Player Shortcut |
|  | Email Shortcut          | Email Shortcut         |
|  | Backlight               | Open / Close Backlight |
|  | IE                      | N / A                  |
|  | Backspace / Delete      | Backspace / Delete     |
|                                                                                       | IR Remote Learning Keys |                        |
| TV                                                                                    | IR Learning             |                        |
|  | Learning 1              |                        |
|  | Learning 2              |                        |
|  | Learning 3              |                        |
|  | Learning 4              |                        |

Remove back cover (on Keyboard side) and insert 2 AAA batteries. Then plug the USB dongle into the USB port of your device, remote will be paired with the device automatically. Test by moving remote to see if cursor is moving. If not, and red LED indicator is not flashing, press Cursor Lock button and try again. If still not, try plug the USB dongle into another USB port. If the red LED indicator is flashing, see clause 2 in FAQs.

Press  to turn on/off backlight.

1. Not all the devices could use Microphone. It will require the APP support voice input, like Google app.
2. Press Mic Button to enable or disable Microphone(While input voice, there is no need to press the Mic Button).

1. Please make sure the battery has enough power before inserting into the remote.
2. The remote is compatible with Android, Windows, Mac and Linux OS which has a standard USB port. Not fit for Amazon Fire TV and Fire TV Stick, or some Samsung and Sony Smart TV.

## Back Cover

The keyboard has 38 keys as shown above.

Backspace: Delete previous character

CAPS: Will capitalize the typed characters

ENTER: Confirm the operation

SPACE: Spacebar

### ALT: Numeric Character Switch

1. How to adjust sensitivity of the mouse cursor?  
Home + Volume Up      Move faster  
Home + Volume Down      Move Slower

2. How to pair the USB dongle with the device?  
Firstly, make sure the batteries have enough power and correctly inserted into the remote. Secondly, press OK+TV at the same time for 3 seconds, the red LED indicator will flash fast. Then insert the USB dongle into the USB port of the device. Red LED indicator stopped flashing, means pairing succeed.

Make sure the TV remote supports NEC protocol. Batteries are installed correctly and red LED indicator is flashing while pressing any buttons.

3. Why does some function key (like OK and Return) not work?
- Firstly, check the battery if it has enough power. If red LED indicator flash slow, means battery does not have enough power. Please replace the batteries. Secondly, check the USB dongle paired with device or not. Thirdly, a few keys might not with some devices because of different codes.

4. Why do I fail to learn from TV remote?  
Firstly, please check if the TV remote supports NEC protocol. If yes, please follow the instructions at back of this manual. Please note that only POWER and four color buttons at the bottom could be programmed.

5. Why does the cursor move very slow, or even disappeared?  
Please try: replace batteries, re-plug the USB dongle, press OK+TV to re-pair.

6. How to type numeric characters?  
Press ALT button type the top right corner characters, press ALT again to switch back.

7. How to wake up the air mouse while it enter into standby mode?  
Press any key to wake up the air mouse.

8. Why does the backlight not work?  
Firstly, make sure battery has enough power.  
Secondly, press the Backlight button to turn on the  
backlight. Thirdly, if you don't use it for a while,  
remote will enter into standby mode. Press any key  
and backlight will be turned on.

9. How to reset the air mouse to factory setting?  
Press TV + DEL at the same time for 3 seconds, the air mouse will be reset to factory setting.

10. Why does the cursor stopped working suddenly?  
Firstly, please check if the battery has enough power. Secondly, Press the cursor lock button to switch on the cursor.

**FCC Caution:**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

 IR learning instructions

The remote has 5 IR learning keys that can be programmed to learn some basic functions of TV remote, which are the POWER and 4 color buttons at the bottom of air mouse.

Below steps are example of learning POWER ON/OFF functions from TV remote to Air Mouse remote(standard version).

Note: The red TV button is just a function button to switch between 2,45 and IR learning functions. It's programmed to learn from TV remote.