 


1		2		3		4		5		6		7		8	
		合 封 图				图 号		名 称		说明书		尺 寸		材 质	
						型 号		备 注							
业务				客 户				单 号				版 本		V1	
														日期	
														2024-3-6	

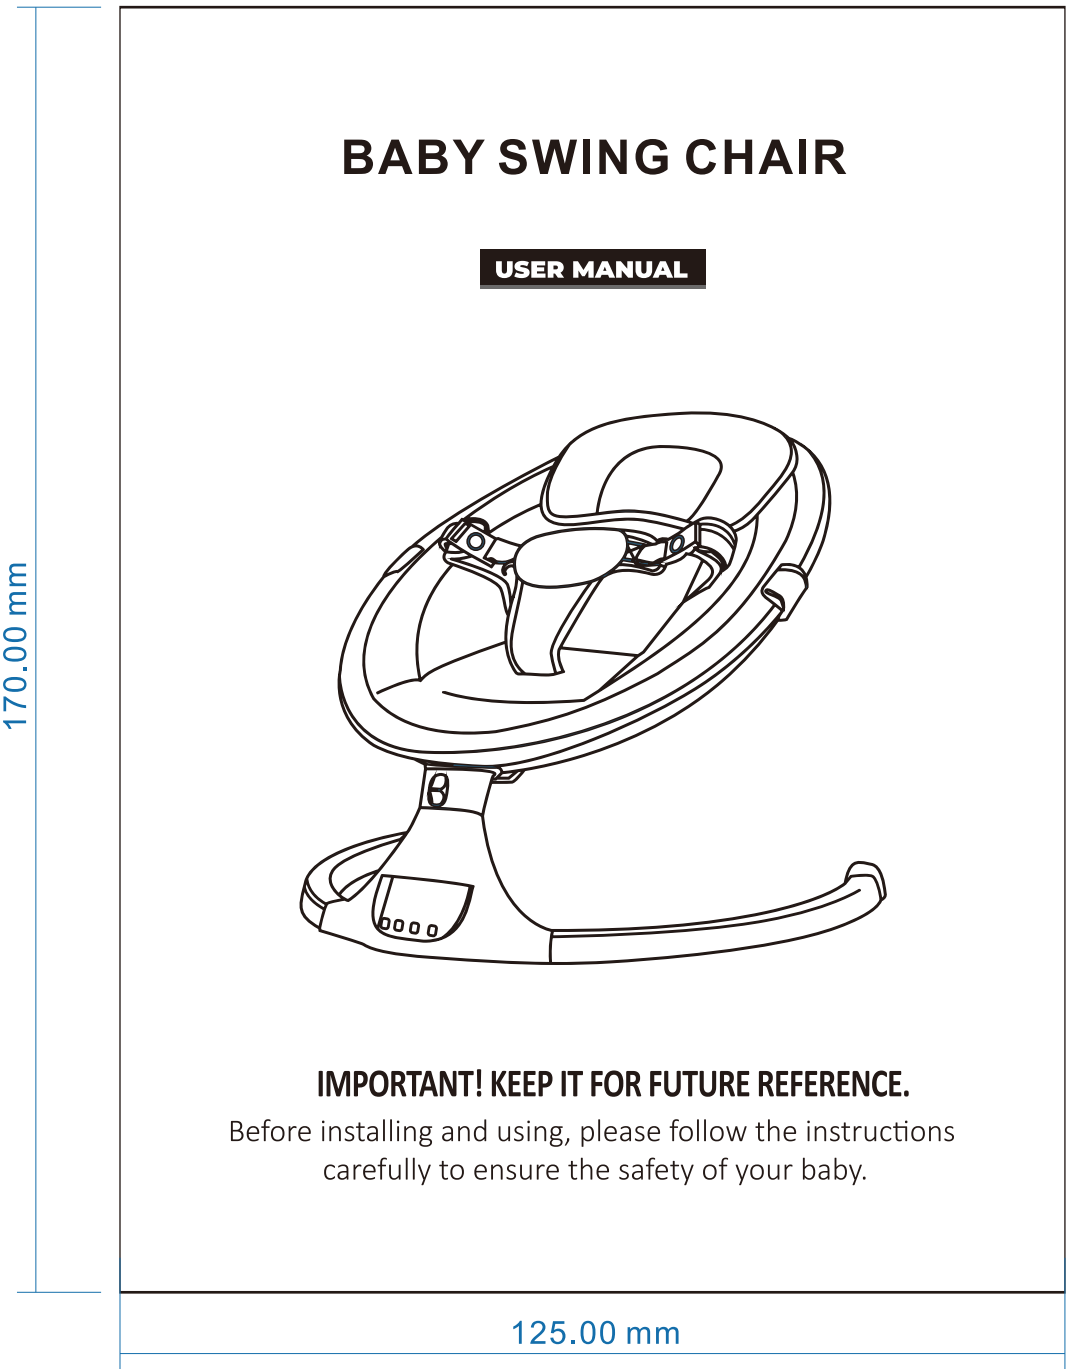

PRODUCT CATALOGUE	
1. Catalogue.....	1
2. Knowing Product.....	2
Product Feature.....	2
Product Specification.....	2
Parts List.....	3
Care And Maintenance.....	4
Assembly.....	4
Table Assemble And Adjustable Backrest Guidance.....	5
Using Harness.....	6
Adapter.....	6
3. Using Product.....	7
Remote Control.....	7
Panel.....	7
Batteries Installation.....	7
Instructions For Use.....	8
4.WARNING.....	9
Clean & Maintenance.....	10
Maintenance.....	10
6.Troubleshooting.....	10

Knowing Product

Product Specification:

Product Name:	BABY SWING CHAIR
Model Number:	BB007
Input Voltage:	100-240V~
Output Voltage:	5V==
Output Current:	1A
Frequency:	50/60Hz
Application:	Children up to a weight of 9 kg or unable to sit up unaided
Main Material:	100% polyester fiber, aviation iron steel base bracket

CAUTION

1) Do not charge with non-rechargeable lithium batteries.

2) Practical in adult supervision.

3) When charging with adaptor, please take out the batteries.

4) Do not use with mixed batteries

5) The battery should be placed in the correct polarity.

6) The exhausted battery should be removed from the product.

7) No short circuit of power terminals.

8) Forbid to use the non-matching adaptor ,the input voltage of adaptor is 100-240V/50/60HZ

9) Keep the adaptor away from child while using.

10) Check the adaptor, accessory at regular period. If you find any damages of parts please stop using.

Knowing Product

Parts List

A - Seat Frame

B - Base Frame

C - Remote Control

D - Power Adapter

Please make sure all parts are included before proceeding to assembly

Optional Parts

E - Canopy+2Toys

Knowing Product

CARE AND MAINTENANCE

- Keep the product in dry places. In order to keep the product attractive - avoid prolonged sun exposure.

- Check condition of the bouncer regularly. Before each use check if it is assembled regularly.

- Use only parts recommended and provided by manufacturer.

- Clean the swing regularly.

- In order to clean plastic parts and tubes - use damp cloth.

- Padding can be hand washed with a bit of delicate soap. Do not bleach!

- Fabric of the seat pad can be cleaned with a damp cloth.

Assembly

Attach Part A (Seat Frame) to Part B (Base Frame) using 4 screws

Disassembly

Put out the metal plate from the rear of the Base Frame (B)

Table Assemble And Adjustable Backrest Guidance

① Align the fixing column with the hole in the middle of the bottom of the desktop, then insert the screw into the four small holes.

② How to clip the table on the seat frame

A. Clip on the metal base

B. Push down and install

C. Clip the bottom of seat frame

D. Press the buckle up and fix

Adjustable backrest: Hold two side steel tube lift up to adjust recline of the backrest

Detach backrest: Press buttons on left and right side and press down to detach

Caution: Infants and children are not allowed to stay in the swing during the above operation. Above picture is for assembly installation only, product please refer to the actual.

Warning: Guardian should take good care of your child, prohibit to play accessories and avoid to get hurt or swallow!

Knowing Product

Using Harness

Top hole Bottom hole. Through the tape form the top hole first and then through the bottom hole, tighten the tape.

Put the baby into the seat, buckle up the seat belts

Adapter

Plug the Power Adapter (D) into the DC jack located on the Base Frame (B). The USB port is also located on the base frame (B). Place the adaptor (D) 100-240V/50/60Hz in the AC Outlet. Do Not use a different Voltage.

Using Product

Remote control

Power on/off

Time setting

Built-in music / USB

Volume up

Volume down

Play/pause

Previous song

Next song

Sleep mode

Stop

Five Speed Mode

Panel

Power On/Off

Swing Gear

Time Setting(15/30)

Volume +/-

Switch Music

Over Heat Voltage Warning

Blue tooth Mode

USB Mode

Batteries Installation

1. Insert the battery into the battery compartment.

2. Insert the battery into the battery compartment.

3. Insert the battery into the battery compartment.

Using Product

Instructions for Use

1. **Power Switch Button:** Touch the ① one time and the indicator light will turn on, which means the power is on. Press the button a second time and the indicator light is turned off to turn off the power.

2. **Five swing speeds:** the indicator light stands for the speed gears. The swing angles are 18°/21°/23°/25°/31°.

Notice: the indicator light will show ① and the swing will stop automatically when the motor is stuck.

3. **Time:** Touch the button of ② for the first time to set 8 mins swing, touch the second time to set 15 mins and the third time to set 30 mins swing.

The indicator light will show respectively as ⑧/⑤/③/①

4. **USB:** This product can support a USB disk to play additional music. Insert the USB disk and then touch the ④ function key, when the button lights up this will indicate that you can play music from the USB.

5. **Music:** 1. Touch ② to play built-in music.

2. Touch and hold ② for two seconds to play the next song.

3. When the USB disk is pulled out, touch ② to play the built-in music.

6. **Volume:** Press ⑤ to increase the volume, press ⑥ to turn down the volume.

7. **Bluetooth:** To connect the bluetooth, turn on the bluetooth from the cell phone and connect with "BT-BABY", when the ⑧ button lights up then you can play music from bluetooth.

8. If the swing shakes too much, check the safety lock and place the swing on a flat surface.

WARNING

FALL AND STRANGULATION HAZARD:

Infants have suffered head injuries falling from swings and have strangled in straps.

FALL HAZARD: Children have suffered head injuries falling from swings.

• ALWAYS use restraints. Adjust to snugly.

• STOP using product when infant attempts to climb out (approximately 9 months).

• Support each baby during use. This product is not for sleep or unsupervised use.

• Baby falls asleep, remove baby as soon as possible and place baby in a firm, flat surface and not use a car or stroller.

• NEVER use canopy for protection.

• STOP using product when baby starts trying to pull or other reached (maximum weight of 9kg or 20 lbs). Switches are first.

• ALWAYS place motor on floor. Never use on any elevated surface.

SUPPLY CHAIN HAZARD: Bolts have suffocated when inserted together on soft surfaces.

• NEVER use as bed, crib, cot, or play surface.

• Stay near and watch child at all times. This product is not safe for unsupervised use or unattended sleep.

FCC Compliance Statement

FCC Compliance Statements: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radio frequency limits for use in uncontrolled environments. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The base bracket should be installed and operated with minimum distance 10cm between the radiator and your body.

Clean & Maintenance

Clean

1. Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.

2. Remove and washable fabric.

- Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.
- Canopy: Take it off and put it in the dryer, wash it gently by hands, rinse it with clean water, and then hang it to dry, avoiding exposure to the sun.
- Pillow: Tear the Velcro off and take the pillow off. Put a little cleaner, wash it gently by hands, and then rinse it with clean water. Hang it avoiding sun exposure.

Maintenance

1. Please check this baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and connect/ install it again if necessary.

 
2. This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry, and store it in a cool and dry place, avoiding direct sunshine for a long time.

Troubleshooting


Fast self-inspection solution below

No.	Trouble	Solution
1	Not energized	1. Check whether the adaptor and DC cable are properly connected. If not, correct them from FFW.
2	The power lamp keeps flashing	2. DC cable may be damaged. Please contact customer service to replace DC cable.
3	Motor lock stuck	Use suitable adapter with an output voltage of 5V and 5A. Check the motor lock. Pull up and lock the seat frame.
4	Overheating/Bole	Power off and restart it again.

Note: For other trouble, please contact our customer service for help. Never disassemble and repair the swing by yourself.



备注：
材质：80g双胶纸
颜色：黑白印刷
结合方式：骑马钉
页数：12p

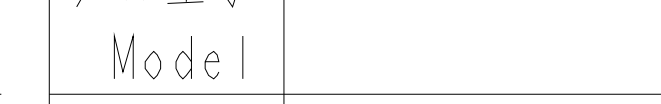图号 (Drawing No.)				材料描述(Material)				表面处理(Treatment)				I	II	III	IV	V	VI	VII	VIII	IX	X	备注(Remark)
T O L E R A N C E mm	GRADE	F	M	C	V	ANGLE	图幅	共 张	第 张	第三角画法		产品型号										
	SCALE					FM						CV	Model									
								单位	mm			比例	材料标记									
								版本 (version)				03	图号									
								批准 / 日期				零件名称										
								审核 / 日期				Part name										
								设计 / 日期														
佛山市熊宝宝科技有限公司																						