 


1		2		3		4		5		6		7		8							
		合 格 證				图 号		名 称		说明书		尺 寸		材 质		80g双胶纸					
A						型 号		BB009K		备 注											
		业 务				客 户				单 号				版 本		V1		日 期		2024-3-6	
																		A			

170.00 mm

BABY SWING CHAIR

USER MANUAL

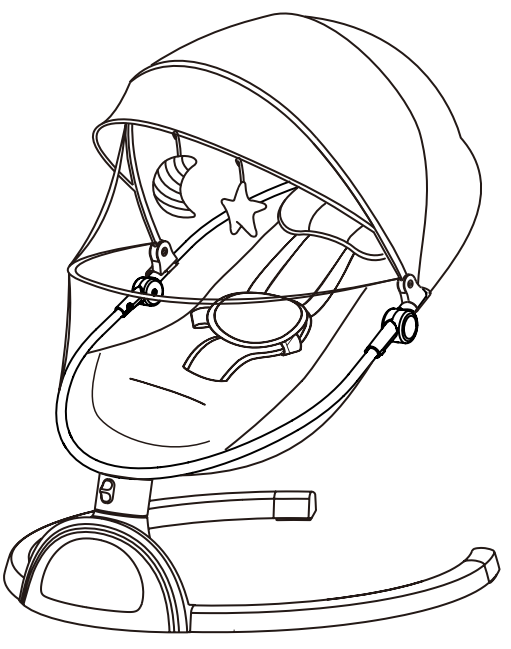

IMPORTANT! KEEP IT FOR FUTURE REFERENCE.
Before installing and using, please follow the instructions carefully to ensure the safety of your baby.

125.00 mm

Product Contents	
Product Introduction	2
Product Specification	2
Product Features	2
Parts Instruction	3
Installation	3
For Base Bracket	4
For Pillow and Seat Cover	4
For Canopy With Toys	5
Safety Belt Instruction	5
Adjustable Backrest Guidance	6
User Instruction	7
Button Description	7
Motion Lock	7
Remote Control	8
Power Supply	8
WARNING	8
WARNING	9
Clean & Maintenance	10
Clean	10
Maintenance	10
Troubleshooting	10
After-sales Service	11

Product Introduction

Product Specification:

Product Name:	BABY SWING CHAIR
Model Number	BB009
Input Voltage :	100-240V~
Output Voltage:	5V=
Output Current:	1A
Frequency:	50/60Hz
Application :	Children up to a weight of 9 kg or unable to sit up unaided
Main Material :	100% polyester fiber, aviation aluminum base bracket and seat frame
Certificate:	ASTM F2167-22, EN12790, EN16232

Product Features:

- Swinging from side to side, with five gears mimicking human movement.
- Protecting baby's spine design on the basis of human engineering.
- Power supplied by safe 5V low voltage adapter.
- One-button installation and disassembly, simple and convenient to use.
- Seat part made of environmental-friendly super soft fabric and non-textile, cozy, breathable and safe & washable seat fabric.
- Made of aluminum alloy with light weight and strong hardness guaranteeing safety for baby.
- Controlled by IMD digital touching screen or remote controller, easy to operate
- With motion lock and safety belt for protection.
- With built-in soft nature sounds & Bluetooth enabled for music.

Parts Instruction

Make sure that all of the following parts listed are included in the box. If any part is missing, please contact us before operating. No tools are required for assembly.

1) Plush toy*2

2) Pillow*1

 
3) Mosquito net with canopy*1

4) Seat frame*1

5) Remote controller

6) Adaptor*1, 2 meters of USB cable*1

7) Base bracket*1

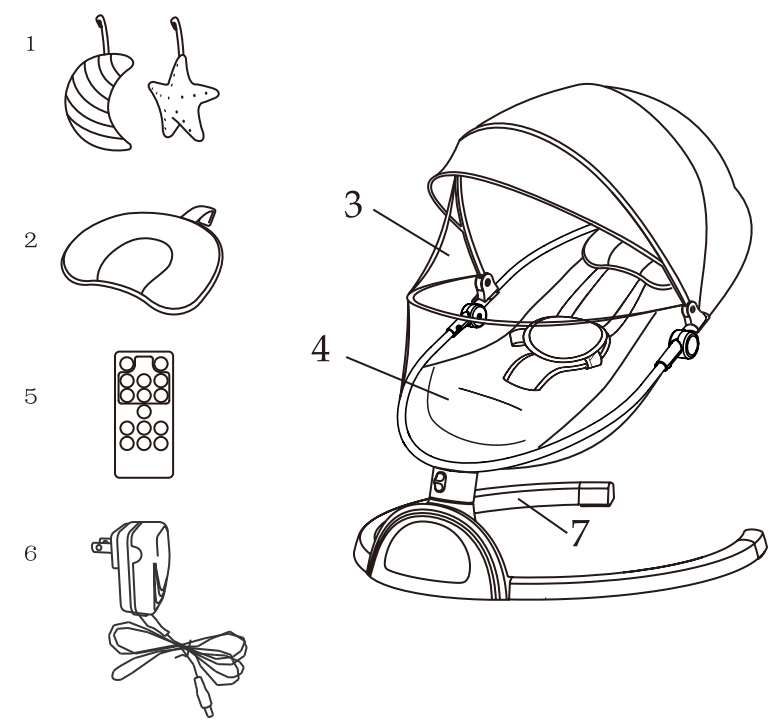


Installation

For Base Bracket

Assembling: Put the frame in the base with "O" shape components aligned.

 
Disassembling: Pull out of the sheet metal and pull up the seat frame.

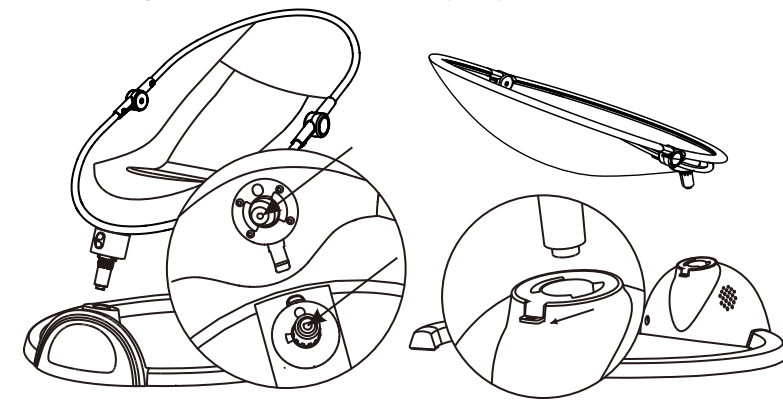

For Pillow

Installation: Attach the pillow to the top retaining ring of the seat frame and press the Velcro of the pillow.

 Removing: Pull off the Velcro to detach the pillow.

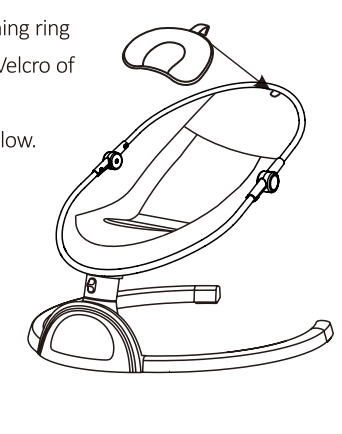


For Canopy With Toys

Installation: Attach the toys on canopy and fasten the clasps to the pipe of the seat frame.

Attach the string of mosquito net to the bottom of the seat frame by pressing the Velcro around the joint of seat frame.

 
Disassembling: Put out of the clasps to remove the canopy.

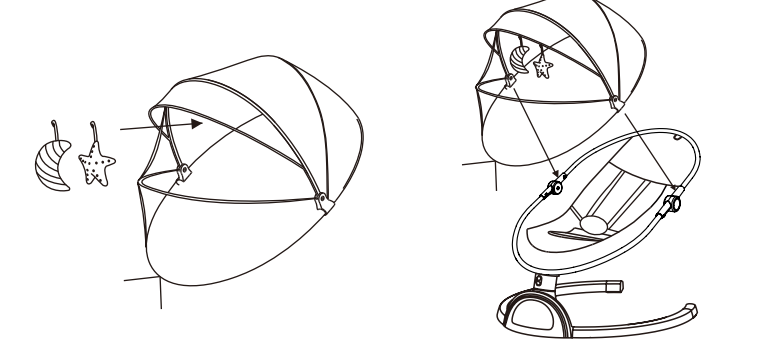


Safety Belt Instruction

Place the baby into the swing and let his legs across both sides of the crotch support restraint, then turn the crotch support cover up. Adjust the seat belt on both sides and buckle up.

 Note: Be sure to use the safety belt correctly when your baby lie on the baby swing for the safety of your child. Buckle off when you take your baby out of swing.

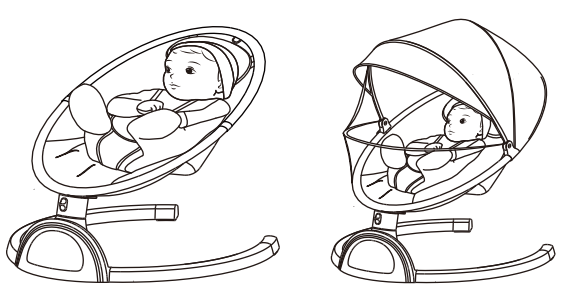


Adjustable Backrest Guidance

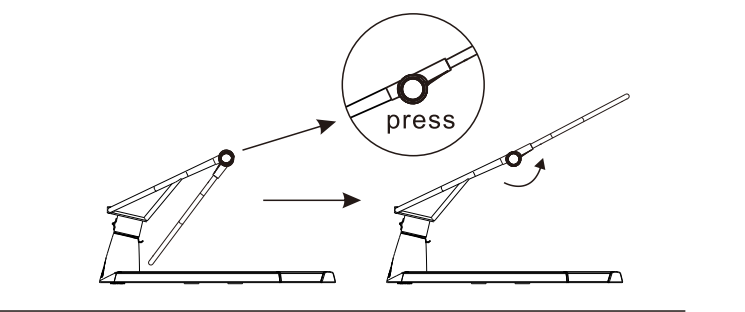 


Adjustable backrest: Hold two side steel tube, lift up to adjust recline of the backrest

 Detach backrest: Press buttons on left and right side and press down to detach

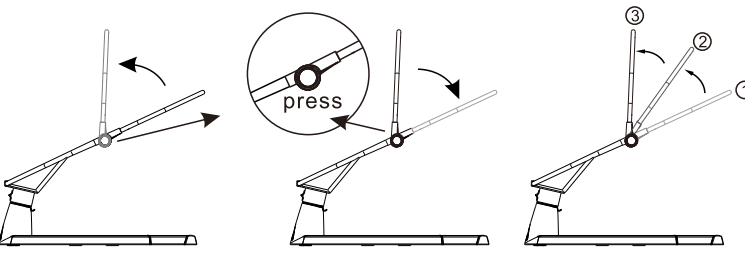


 Cautions: Infants and children are not allowed to stay in the swing during the above operation. Above picture is for assembly installation only, product please refer to the actual.

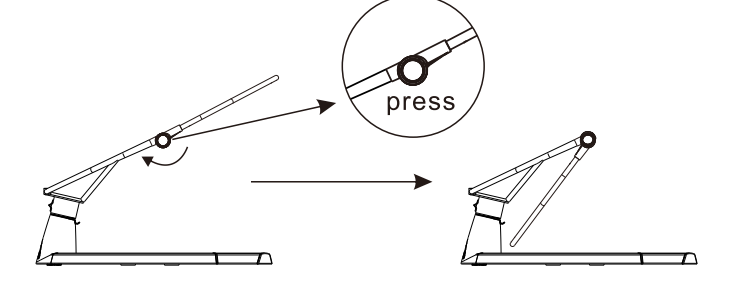

User Instruction

 Button Description

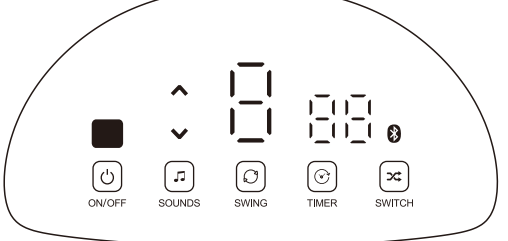

Power button: Plug in and the indicator light is on. Press the button to turn the swing off.

Touch the button to play the built-in music. Touch it again to turn the sound off.

* Turn on the bluetooth on smart phone and connect with "BT_BABY". The swing beeps, and then bluetooth is now connected well. Then the music from phone plays.

* Music priority: Bluetooth>Built-in music

Touch the button to make swing settings. There are five swing gears indicated by the lights.

Touch the button to set the time. The first touch will have the swing chair swing for 8 minutes, the second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.

Touch the button to play the next song.

 
Touch the button to increase the volume gradually.

Touch the button to decrease the volume gradually.

Motion Lock


Push the motion lock down to lock the seat frame and stop movement.

Pull the motion lock up to unlock the seat frame and the baby swing will swing again.

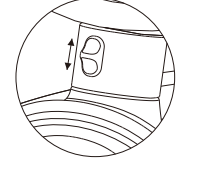

Remote Control

Power on/off	Play/pause
Time setting	Previous song
Built-in music/Bluetooth music	Next song
Volume up	Volume down
1 2 3 4 5	Five swing gears
Auto mode	press to enter Auto mode/gear 2 with timer 15 minutes
Stop swing	press to stop swing, and press any key to resume swing.

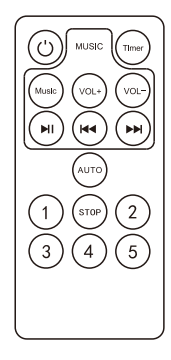 

Power Supply

- DC plug can be inserted into 100-240V ~ 50 / 60Hz AC power supply.
- Adaptor output parameters: voltage is 5V and current is 1A.



WARNING

- The power terminals must not be short-circuited.
- Do not use adapters other than those supplied with this product to power the product.
- Keep children away from working adapter.
- Check the adapter cable connection regularly.

WARNING

Fall hazard: Babies have suffered skull fractures falling while in and from bouncers.

- Use bouncer ONLY on floor.
- ALWAYS use restraints and adjust to fit snugly, even if baby falls asleep.
- NEVER lift or carry baby in bouncer.

Suffocation hazard: Babies have suffocated when bouncers tipped over on soft surfaces.

- NEVER use on a bed, sofa, cushion, or other soft surface.
- NEVER leave baby unattended.
- To prevent falls and suffocation:
- ALWAYS use restraints and adjust to fit snugly, even if baby falls asleep.
- STOP using product when baby starts trying to sit up or has reached 9KG, whichever comes first.
- To avoid injury ensure that children are kept away when unfolding and folding this product.
- STOP using bouncer when baby starts trying to sit up or has reached 9KG, whichever comes first.
- Do not let children play with this product.
- Transformers used with the infant swing are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.
- The infant swing shall only be used with the recommended transformer.

FALL AND STRANGULATION HAZARDS:

Infants have suffered head injuries falling from swings and have strangled in straps

- ALWAYS use restraints. Adjust to fit snugly.
- STOP using product when infant attempts to climb out (approximately 5 months)
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

SUFFOCATION HAZARDS: Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway. ALWAYS keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.

FCC Compliance Statement

FCC Compliance Statements This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The base bracket should be installed and operated with minimum distance 10cm between the radiator and your body.

Clean & Maintenance

Clean

- Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
- Washable fabric:
- Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.
- Canopy: Take it off and put a little cleaner, wash it gently by hands. Rinse it with clean water, and then hang it to dry, avoiding exposure to the sun.
- Pillow: Tear the Velcro off and take the pillow off. Put a little cleaner, wash it gently by hands, and then rinse it with clean water. Hang it avoiding sun exposure.

Maintenance

- Please check this baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and connect/install it again if necessary.
- This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry, and store it in a cool and dry place, avoiding direct sunshine for a long time.

Troubleshooting

Fast self-inspection statement below

No.	Trouble	Solution
1	Not energized	1. Check whether the adapter and DC cable are firmly connected. If loose, connect them firmly. 2. DC cable may be damaged. Please contact customer service to replace DC cable.
2	The power lamp keeps flashing/high voltage alarms	Use matchable adapter with an output voltage of 5V and 1A.
3	Motion lock stuck	Check the motion lock. Pull it up to unlock the seat frame.
4	Overstring/Strike	Power off and restart it again.

Note: For other trouble, please contact our customer service for help. Never disassemble and repair the swing by yourself.

After-sales Service

Thank you for purchasing our products. For your due rights and interests, please take good care of the warranty card. If there is any quality problem, please contact with the distributor.

Note:

- From the purchase date, normal users can enjoy one year's free maintenance service for the circuit board components and one year's free maintenance service for the whole machine.
- Other consumables and accessories are not covered by the warranty.
- Please show the warranty card and purchase certificate or invoice to be valid.

Non-warranty Coverage:

- Improper use
- Loss or damage of warranty card
- Damage caused by natural disasters and other irresistible forces


Please keep the warranty card well.

Warranty Card

Product Model		Customer Name	
Product Name		Customer Phone Number	
Purchasing Date		Fault Description	
Customer Address			

备注:
材质: 80g双胶纸
颜色: 黑白印刷
结合方式: 骑马钉
页数: 12p

1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---

 图号 (Drawing No.)		材料描述 (Material)				表面处理 (Treatment)		I	II	III	IV	V	VI	VII	VIII	IX	X	备注 (Remark)
TOLERANCE mm	GRADE	F	M	C	V	ANGLE	FM CV	图幅	共 1 张 第 1 张	第三角画法		产品型号						
	SCALE											Model						
								单位	mm	比例		材料标记						
								版本 (version)		03	批准 / 日期	图号						
								佛山市熊宝宝科技有限公司			审核 / 日期	零件名称						
											设计 / 日期	Part name						