 


SELFIE STICK

 
INSTRUCTION MANUAL



CONTROLLER SELFIE STICK

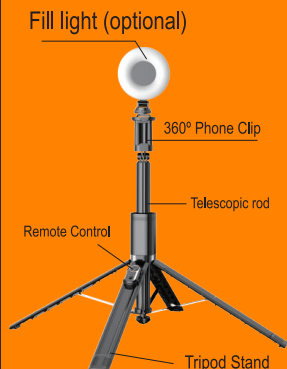

Introduction to the functions of a tripod

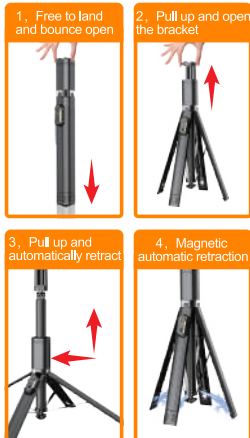

REMOTE CONTROL FUNCTION



REMOTE CONTROL BATTERY REPLACEMENT

 
OPEN THE BATTERY COVER IN THE DIRECTION OF THE ARROW SHOWN IN THE DIAGRAM, REPLACE THE BATTERY (MODEL CR1632), AND THEN ASSEMBLE IT BACK.



Steps for Remote

Step 1: On the mobile phone, click Settings> Bluetooth, And turn on the Bluetooth of the phone.
Step 2: Press and hold the remote control switch for 2 seconds to start the machine.
Step 3: When the mobile phone searches for "SELFIE" Bluetooth device, click and select Pair.
Step 4: Open the camera and short video APP, and press The remote control function key can be used on the mobile phone Operation of.
Step 5: Long press the key of the remote control for 2 seconds.

Fill light (optional)

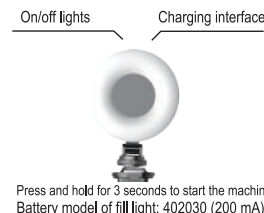

Troubleshooting:

1. Bluetooth remote control cannot be switched on. Replace the battery.
2. Bluetooth cannot be connected or works normally. Remove the Bluetooth pairing on the phone and restart the Bluetooth remote control Re pair and connect after the device.

Attention

1. Do not store the product in a low temperature and humid environment.
2. Do not place the product in the high temperature ring such as sun exposure and fire baking Environment.
3. Do not use the device in places where its use is restricted. Avoid violating public order.
4. When replacing the battery, place the positive pole of the battery outward. It is prohibited to connect the positive and negative electrodes in reverse.
5. This product contains batteries, please put it in infants and children Keep out of reach to prevent children from swallowing by mistake.

 
Made in China



蓝牙自拍杆

使用手册

自拍杆功能介绍

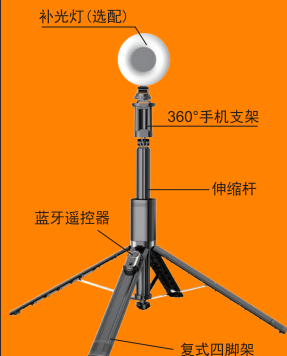

自拍杆补光灯



四脚架打开收缩介绍



蓝牙遥控器功能



蓝牙遥控器电池更换

按照图示箭头方向打开电池盖更换电池 (型号CR1632) 后再组装回去。



蓝牙遥控器使用步骤

第1步：在手机点击 设置 > 蓝牙，并将手机蓝牙打开。
第2步：长按遥控器开关2秒开机。
第3步：当手机搜索到名为“SELFIE”的蓝牙设备时，点击并选择配对。
第4步：打开相机、短视频APP，按下遥控功能键即可在手机上实现相应的操作。
第5步：长按遥控器开关2秒关机。

补光灯选配



故障排除：

1. 蓝牙遥控器无法开机
• 更换电池。
2. 蓝牙无法连接、或者无法正常工作
• 移除手机上的蓝牙配对，重启蓝牙遥控器后重新配对连接。

注意事项：

1. 请勿将产品置于低温、潮湿环境保存。
2. 请勿将产品置于暴晒、火烤等高温环境。
3. 请勿在设备被限制使用的场所中使用。避免违反公共秩序。
4. 更换电池时，请将电池正极朝外放在、禁止将正负极反接。
5. 本产品含有电池，请放置于婴幼儿儿童触摸不到的地方，防止小孩误吞。

Made in China



FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.