

75x105mm

User Manual



One. Before Using

1) **Charging the battery of the camera**

The red light is on when charging, the red light is off after being fully charged. The charging time is about 2.5 hours.

Note: This product **only** supports memory cards in FAT format. 32G memory card belongs to FAT format can be directly read. For the first time using memory card above 32GB, the machine will prompt that memory card is being formatted. It is recommended that when using more than 32GB memory card, there should be no other data in the card to avoid loss of data.

2) **Lens rotation operation:**

Camera lens can rotate 180 degrees to meet various shooting needs.



Two, Photo/Video/ lapse video operation

 
1, Long press the power button, the screen will light up and blue light is on, indicating the camera is powered on. The power-on interface is as shown below. Short press power button to turn off the screen, and long press power button to turn it off.

2, When the camera is powered on, swipe down to activate three modes: photo mode, video mode, and lapse video mode. (Swipe up to return to the home page).


3, One button Video Recording: When the camera is powered on, long press the video button to start video recording.




a. Video Mode: Default recording mode when power on, tap the video icon or press the video button to start recording, blue light flash slowly.



 3. Photo Mode: Swipe down to the menu mode, **slide left and right** to select the photo icon, **tap the photo icon** or press the video button to take a photo, **the light flashes once**.



 c. Lapse video Mode: Swipe down to the menu mode, **slide left** and **right** to **select the lapse video icon**, tap the Lapse video icon or press the video button to start video recording.



Three. Swipe up to enter the settings

Menu	Contents
WiFi	Turn on/off WiFi
Setting	As shown above
Sub menu	As shown above
Playbook	View video/ photos

Four: **WiFi mode**



2. The green light flashes when waiting for connection. The green light is always on when connecting successfully.
3. Open the App, enter the mobile phone WiFi setting to connect the WiFi name beginning of "H91", the password is "12345678". Click the camera icon in the middle of APP and enter the actual operation of the camera.
4. When connecting to the app for video recording, touching the back button will return to the main page.

Five. Video Recording Settings as following




Submenu	Contents
Video resolution	1080P /720P
Photo resolution	12M/10M/8M/5M/3M
Time-lapse	off/1sec/2sec
Loop video	off/1min/2mins/3mins/5mins/10mins
Video Sound	off/on

Six. System settings menu, as shown below



Submenu	Contents
Language	English/Simplified Chinese/Traditional Chinese Japanese/German/French/Italian/Spanish/Polish/Russian/Korean/Thai
Date/Time	Year/Month/Day/Hour/Minute/Second
Indicator light	Off/On
Frequency	50HZ/60HZ
Time stamp	Off/On
Auto power off	Off/1 minute/3 minutes
Screen saver	Off/1 minute/3 minutes
Touch Sound	Off/On


Format	Cancel/Confirm
Reset	Cancel/Confirm
Version	H01-2025*****

 

1. Tap the center **play** button to **play** a video, and tap   to select a video or image.
2. While playing a video, tap   to adjust the volume.
3. Tap  to return to the main screen.
4. Tap  to select **Delete Video Or Image**.

Eight. Connecting computer:

 Use the included Type-C cable to connect computer. The camera will automatically power on, and the screen will display two options, as shown below:



1) Storage Mode

2) **Storage Mode** you can play the video files on the memory card, allowing you to transfer them from the memory card to your computer.

Nine. Charging Pod

The charging pod has 4 lights. One blue light represents 25% power. When all 4 blue lights are on, the charging pod is fully charged.

1. **Power On:** Short press once the power button to turn it on.
2. **Charging Indicator:** **Blue light** flashes indicates it is charging, and **blue light is always on** when fully charged. A full charge takes approximately 3 hours with using a 2A charger.
3. **Power Off:** Press the power button twice continuously to turn the charging port off.



Ten. If you encounter camera problems, please refer to this section.

This section:

1. The camera **cannot** be turned on.
1. The battery is low. **Recharge** charge it immediately.
2. Press the reset button to reset the device and then restart it.

2. The camera does not charge

1. The charging indicator light is off, which means the charger is not properly connected. **Check** whether the charger is properly connected to the camera.

The memory card cannot be recognized

1. Please check whether the memory card is memory card (Class 10) and the maximum capacity is not more than 256GB.
2. Please check whether the memory card is inserted upside down.
3. When using a memory card on a camera for the first time, it is recommended to format it first.

4. Additional Notes

1. Do not use metal objects other than the memory card into the slot.
2. It is normal for the camera to heat up after long time use.
3. It is normal for the camera screen to heat up after long time use.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.