

W1

Children's intercom




Before using this product, please read the user manual carefully.

The manual is for reference only.

1.Product Appearance and Button Function Introduction

English

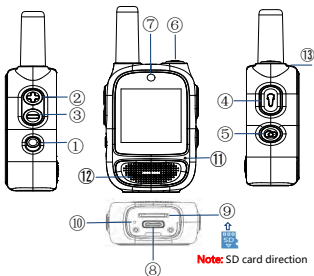

Note: SD card direction

①	Power switch	Power on: Turn up; Power off: Turn down
②	Volume +	1: Short press and move up in the 4-grid 2: MP3 mode Short press to switch to the previous file, long press to increase volume 3: In playback mode, short press to switch to the previous file, long press to increase volume 4: Short press the volume up button in two-way mode 5: System menu interface. Short press to switch to the previous menu. 6: In the photo and video interface, short press to switch to the previous filter
③	Volume -	1: Short press and drag down in the 4-grid 2: MP3 mode Short press to switch files Long press to decrease volume 3: In playback mode, short press to switch to the next file, long press to decrease volume 4: Short press the volume down button in walkie-talkie mode 5: System menu interface. Short press to switch to the next 6: In the photo and video interface, short press to switch to the next filter
④	Calling key	1: Hold the walkie-talkie button to enter intercom mode, or press and hold the M key to pair.

⑤	Photo key	1: Short press the four-grid to enter the cursor selection mode
		2: Short press to take a photo in Photo mode. Short press to start or stop recording in Video mode.
		3: Short press to start/pause MP3 playback
		4: Short press to start/pause video playback in playback mode
		5: Short press in entry mode to switch the screen display image window
		6: In the system menu interface, press and hold to enter the submenu
⑥	M mode key	1: Short press to return to the four-grid mode, long press to cycle between photo and video modes
		2: Short press to return to the four-grid MP3 mode
		3: Short press to return to the four-grid mode. Short press to return to the play state while the video is playing
		4: In intercom mode, short press to retreat to the four squares, and long press+intercom button to match.
		5: Hold the intercom mode for 1.5 seconds to switch to fun voice effects
		6: Four-grid interface, short press to enter the system menu
⑦	Camera	Automatically activates intercom, photo, and video modes
⑧	Type-C charging port	Charging DC5V/1A, supports high-speed data transmission,OTG function
⑨	SD Card Slot	Supports SD Cards: 64G/32G/16G/128G
⑩	Reset hole	Short press with the reset pin to reset the system
⑪	MIC radio hole	Intercom and video recording audio holes
⑫	Speaker	Audio output
⑬	Lanyard hole	Lanyard insertion hole

Note: It is forbidden to pull and insert the card when working in video/photo/playback/music mode!

2.USB and OTG operating instructions

- (1) In USB mode, after the device is turned on, the walkie-talkie is connected to the computer by using a Type-C to USB cable that supports data transmission. When the device screen displays 'camera image', the computer reads the SD card of the walkie-talkie, and the data in the SD card can be viewed or copied.

(2)OTG functions:

- ① Android system: use Type-C to Type-C wire that supports data transmission, connect the walkie-talkie with the smart device when the walkie-talkie is turned on, and the smart device will automatically pop up a prompt pop-up window or drop down the notification bar, click on the USB connection notification and jump into the USB flash drive, then you can view/export the machine USB flash drive file; You can also open the "File Management" of the device, find the external "USB device" icon, and click to enter the USB flash drive to view/export the machine USB flash drive file.
- ② Apple System: Open the Device Files App, enter the Browse page, find the external Removable Disk icon, and click Enter U disk to view/export the machine U disk files.

3.Equipment charging guide

- (1) Use an adapter with an output of 5V/1A to charge the intercom equipment, which can be fully charged in about two hours.
- (2) When the machine is charging, the indicator light is red, and when it is full, the light goes out.

4.matters need attention

Please read this manual carefully before use and keep it for future reference.

- (1)Avoid eating by mistake and beating: the internal parts of the equipment are precise to prevent children from eating by mistake or beating.

- (2) Turn off during flight: The walkie-talkie will transmit and receive signals, and it needs to be turned off during flight.
- (3) Pay attention to waterproof when bathing, washing hands or swimming, and avoid moisture from entering the machine when cleaning.
- (4) Avoid long-term overcharge, prevent the danger of fire and explosion, and do not expose to high temperature.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.