

130*47mm



UV photochromic

AiMB GLASSES



感谢您选择本公司智能眼镜。您可以通过阅读本手册，全面地了解设备的使用方法。此设备主要通过蓝牙连接手机进行适配使用，提供了多种实用的功能和服务，以便您对手机进行操作。本公司保留在不作任何预先通知的情况下对本手册中内容作修改的权利，恕不另行通知。

本产品不支持IP67级防水，不支持淋雨、洗手、游泳佩戴，热水淋浴或桑拿等不能佩戴，防不住水蒸气。如因不按指示使用导致智能眼镜进水损坏，本公司不作免费保修。

使用说明：

触摸按键：

1、左滑动触摸按键：在眼镜左边如下位置。



触摸控制方式：

左触摸按键：触摸，开关机。
右触摸按键：按中间开关机，左右滑动加減音量。
注：按到触摸按键时，会有提示音。

充电说明：

磁吸充电：充电时将磁吸充电头放在眼镜左右腿上相应的充电触点位上，充电头会自动吸取充电，充电时亮红灯，充满电后亮一下绿灯，充电时保持关机状态。支持电脑USB或手机5V标准充电器，大概120分钟可以充满。

注：低电提示：低电有提示音，红灯闪一下，5分钟提示一次，直至关机；



智能眼镜开关机与手机的连接：

1. 连接手机：打开手机蓝牙设置，并打开蓝牙开关，开始搜索智能眼镜，智能眼镜蓝牙名为V6 Max，选中V6 Max并开始配对，配对成功后，智能眼镜左右两边指示灯熄灭，并在手机蓝牙设备列表中看到V6
2. 通话时挂断电话：单按左触摸按键(或右触摸按键)2下，挂断电话；
3. 电话三方通话接听/挂断：
 - 3.1. 单按左触摸按键(或右触摸按键)1下，保持当前通话并接听第三方来电电话；
 - 3.2. 单按左触摸按键(或右触摸按键)2下，保持当前通话并拒绝第三方来电电话；
 - 3.3 长按左触摸按键(或右触摸按键)2秒，挂断当前电话，并接听来电；
 - 3.4 三方通话切换：第三方来电接通后，单按左触摸按键(或右触摸按键)1下，切换通话；
- 二、听音乐操作：

智能眼镜使用操作：

先要确保智能眼镜左右两边都要开机，且保持与手机的蓝牙连接。
一、电话接听/挂断：
1.来电接听：单按左触摸按键(或右触摸按键)1下，接通电话；

- 1.播放/暂停音乐：打开手机音乐播放软件，单按左触摸按键(或右触摸按键)1下，播放音乐。
再左触摸按键(或右触摸按键)1下，暂停音乐播放。
- 2.右触摸：按下按钮中间区域，可实现开机/关机操作。在按钮区域向左/向右滑动，可调节音量（左滑减小音量，右滑增大音量）。
- 3.切换歌曲：播放音乐时，单按右触摸按键2下切换下一首歌曲，单按左触摸按键2下切换上一首歌曲。
- 三、打开语音助手：按住左触摸按键(或右触摸按键)2秒，打开语音助手。
- 四、遥控拍照：先在手机打开拍照功能，单按左触摸按键(或右触摸按键)3下，遥控手机拍照。
注：部分手机型号可能存在不兼容3按拍照，可能单按就可以拍照(有些手机拍照有兼容性问題)。

眼镜变色功能：

- 1、本款 AiMB GLASSES V6 Max 配备 UV 光致变色镜片，可随紫外线强度自动调节状态：
户外强光（强紫外线）环境下，镜片快速变暗，阻挡有害紫外线，缓解强光刺眼的眼部不适；进入室内或弱紫外线场景时，镜片自动恢复透明，保障清晰视野。
无需手动操作，自适应光线变化，兼护眼防护与日常视觉需求，适配通勤、户外等多场景佩戴。



保修说明：

- 1、本产品在正常使用时，如果出现因制造，材料，设计等原因引起的产品质量问题，自购买之日起，主板一年内免费保修，电池，充电器保修半年。
- 2、因使用者个人造成的故障，不提供免费保修，如：
 - 1) 擅自拆表，改装滤镜等造成的故障。
 - 2) 在使用过程中不慎跌落而造成的故障。
 - 3) 一切人为损坏或因第三者过失，误用（如：主板进水，外力震裂，外面部件的刮痕的损坏等），不在保修范围内。
- 3、在要求提供免费保修时，请必须提供填写有购买日期和购买处印章的保修卡。

- 4、用户维修产品时，请把产品拿到本公司或本公司经销点。
- 5、产品的所有功能都以实物为主。

购买日期：	客户姓名：
产品编码：	店员姓名：
购买商店：	商店盖章：

130*47mm



UV photochromic

AiMB GLASSES




Thank you for choosing our smart glasses. This manual provides comprehensive instructions for using the device, which connects to your smartphone via Bluetooth to enable various practical functions and services. We reserve the right to modify the contents of this manual without prior notice.

This product does not support IP67 waterproofing and is not designed for use in rain, handwashing, swimming, hot showers, saunas, or environments with water vapor. Damage caused by improper use, including water ingress, will not be covered under free warranty.

Operation Guide:

Touch Buttons:

1.Left Slide Touch Button: Located at the following position on the left side of the glasses.

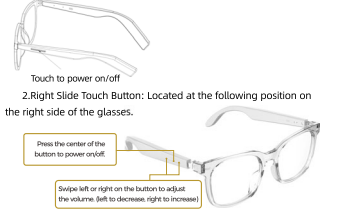

Touch Controls:

Left/Right Buttons:


Single Press | Double Press | Triple Press | Long Press (2+ seconds). Audible feedback will accompany each press.

Charging Instructions

Magnetic Charging:

Align the magnetic charging head with the charging contacts on the glasses' temples. The charger will snap into place automatically. Charging Indicator:

 Red Light: Charging in progress.
Brief Green Light: Fully charged (≈120 minutes via USB/5V charger).
Ensure glasses are powered off during charging.
Low Battery Alert:
Red light flashes once every 5 minutes until shutdown.



Power On/Off & Bluetooth Pairing:

- 1.Pairing with Smartphone:
Enable Bluetooth on your phone → Search for device named "V6 Max" → Connect.
Indicator lights turn off once paired.
- 2.Power On:
Long-press the left button (2 seconds) to activate the left

module.Long-press the right button (2 seconds) to activate the right module.Indicator lights will flash red/green alternately.
3.Power Off:
Long-press either button for 5 seconds to shut down the corresponding module.
4.Standby Mode:
If unpaired, the glasses will auto-shut down after 3 minutes of idle time.

Smart glasses operation:

First, make sure that both sides of the smart glasses are turned on and keep the Bluetooth connection with the phone.
First, call answer/hang up:
1. Answer a call: press the left touch button (or right touch

- button) once to connect the call;
2. Hang up during a call: just press the left touch button (or right touch button)2 times to hang up the call;
3. Three-party call answer/hang up:
3.1. Press the left touch button (or right touch button) once to hold the current call and answer the call from the third party;
3.2. Press the left touch button (or right touch button) for 2 times to hold the current call and reject the call from the third party;
3.3 Long press the left touch button (or right touch button) for 2 seconds to hang the current call and answer the call;
3.4 Three-Party Call Switching: After a call from a third party is connected, press the left (or right) button once to switch the call. Second, listen to music operation:

1. Play/pause music: Open the mobile phone music player software, press the left touch button (or right touch button) once to play music.Touch the button left (or right) one more time to pause the music.
2. Right Touch Control: Press the center area of the button to power the glasses on/off. Swipe left or right on the button area to adjust the volume (swipe left to decrease volume, swipe right to increase volume).
3. Switch songs: When playing music, simply press the right touch button 2 cut down to replace the next song, press the left touch button 2 cut down to replace a song.Third, open the voice assistant: press and hold the left touch button (or right touch button) for 2 seconds to open the voice assistant.

4. remote control photo: First open the camera function in the mobile phone, single button touch the button left (or right touch the button)3 times, remote control mobile phone photo.
Note: Some mobile phone models may be incompatible 3 press to take a photo, you may be able to take a photo with a single press (some mobile phone photos have compatibility issues).

Photochromic Function of the Glasses:

The AiMB GLASSES V6 Max is equipped with UV photochromic lenses that automatically adjust based on UV intensity:
In outdoor bright light (strong UV) environments, the lenses darken quickly to block harmful UV rays and reduce eye discomfort caused by glare; when entering indoor or weak UV scenarios, the lenses automatically return to a transparent state to ensure clear vision.

No manual operation is required—it adapts to light changes automatically, balancing eye protection and daily visual needs, making it suitable for multi-scenario wear such as commuting and outdoor activities.



Warranty Description:

1. this product in normal use, if there is a product quality problem caused by manufacturing, materials, design and other reasons, from the date of purchase, the motherboard within one year free warranty, battery, charger warranty for half a year.
- 2, due to the user's personal failure, do not provide free warranty, as follows:
 - 1) Failure caused by unauthorized disassembly, modification of glasses, etc.
 - 2) Failure caused by inadvertent fall during use.
 - 3) All man-made damage or due to the fault of a third party, misuse (such as: motherboard water, external force cracking,

- scratch damage of peripheral components, etc.), not within the scope of warranty.
3. When requesting a free warranty, please provide a warranty card with the date of purchase and the stamp of the place of purchase.
 - 4, users repair the product, please take the product to the company or the company's distribution.
 - 5, all the functions of the product are based on physical objects.

Date of Purchase:	Customer Signature:
Product bar Code:	Shop Assistant Signature:
Shop to buy:	Shop stamp:

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.