

JL-12中英文说明书, 风琴折, 单黑, 折好后成品尺寸: 50*70mm
材质: 80g双胶纸
印刷的时候去掉成品线

WIRELESS EARPHONE

USER MANUAL

Product overview and package list



MFS Button
Microphone
Indicator Light
Charging Port

Specifications

Transmission distance	10m
Earphone capacity	60mAh*2
Charging case battery capacity	400mAh
Music time	8H
Talk time	SH
Standby time	60H
Charging time	1.5H
Charging port	Type-C

Bluetooth disconnection

After connecting successfully, if one of the Bluetooth of the phone or exceeds the effective Bluetooth range (no-obstacles environment 10m), the Bluetooth will be disconnected. If the device is not successfully connected within 5 minutes, it will turn off automatically.



MFS Button
Microphone
Indicator Light
Charging Port

Power On/Off

 
Power on manually: long press the MFS button about 3 seconds to turn on the earphone. Power on automatically: Open the charging case, the earphones will power on automatically. Power off manually: long press the MFS button 5 seconds to turn off. Power off automatically: put the earphones in the charging case and cover the lid.

Pairing

Turn on the earphone to enter pairing mode. Bluetooth device will search pairing name, then press pairing name to connect. (If the pairing name

Unconnected by overtime

If the earphone is not on the pairing status, not connected with device and connecting unsuccessfully in 5 mins, it will turn off automatically.



MFS Button
Microphone
Indicator Light
Charging Port

Charging instructions

Earphones charging:
1. When the earphones in the charging case and cover the lid. The earphones Indicator Light is steady red when charging, or the indicator light is steady blue when fully charged.
2. If the earphones status is steady white, the indicator light of earphone and case is turn off when fully charged.

Common problem

Earphone cannot be turned on:
- Please check if the earphone have sufficient power, and then charge the earphone for 20 minutes before turning on.
- Make sure your device's Bluetooth is enabled.
- Make sure the earphone is paired with your device.

Restore factory settings

When there is no interconnection between the left and right earphones or the device cannot be paired, the following steps can be followed to reset:
1. Delete the pairing name on the phone first.
2. First take the left earphone out of case and touch the MFS button 5 times, the left earphone will reset. Then take the right earphone out of case and touch the MFS button 5 times, the right earphone will reset.
3. Turn on the left and right earphone, please follow the "Pairing" steps to reconnect.



MFS Button
Microphone
Indicator Light
Charging Port

Charging case charging

Plug the Type-C cable into the case. The Type-C port of the case. The case has low-level light blue red steady when charging, the indicator light is steady on red when fully charged.

Matters needing attention

 
- Do not use earphone directly after the product.
- Do not allow this product to heat or be near fire source, such as smoking stoves.
- Do not expose this product to direct sunlight for a long time.
- Do not drop this product of this kind to avoid damaging.
- Do not attempt to disassemble the product for any modification, as it does not contain any repair component.
- Do not use the product in the rain.
- Please do not touch your hearing, do not touch the volume too high.
- Do not drop the product while it is charging. Separate the earphones from the charger before disassembling it.
- Do not allow children to play with this product, small parts may cause choking hazards to children.
- If you do not intend to use this product for a long time, please store it in a dry environment and monthly. Charge your earphone at least once to extend the life and avoid extreme temperatures and dust.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device must not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning



MFS Button
Microphone
Indicator Light
Charging Port

Warning

- Batteries must be recharged or replaced when the product battery level is critically low. Do not disassemble the battery when the product battery level does not rewire.
- If the battery is not used properly, it may explode or leak, causing burns and other injuries. If the battery leaks, be careful and dispose of the battery immediately in accordance with local laws and regulations on battery handling.

Product Quality Warranty Card

 
This warranty card must be provided when receiving the service, please keep it properly.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device must not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning



MFS Button
Microphone
Indicator Light
Charging Port

Warning

- Batteries must be recharged or replaced when the product battery level is critically low. Do not disassemble the battery when the product battery level does not rewire.
- If the battery is not used properly, it may explode or leak, causing burns and other injuries. If the battery leaks, be careful and dispose of the battery immediately in accordance with local laws and regulations on battery handling.

Product Quality Warranty Card

This warranty card must be provided when receiving the service, please keep it properly.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device must not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning



MFS Button
Microphone
Indicator Light
Charging Port

Warning

- Batteries must be recharged or replaced when the product battery level is critically low. Do not disassemble the battery when the product battery level does not rewire.
- If the battery is not used properly, it may explode or leak, causing burns and other injuries. If the battery leaks, be careful and dispose of the battery immediately in accordance with local laws and regulations on battery handling.

Product Quality Warranty Card

This warranty card must be provided when receiving the service, please keep it properly.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device must not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning



MFS Button
Microphone
Indicator Light
Charging Port

Warning