

User Manual



Safe driving Better life

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

Content

Product Introduction.....	1
Notice Before Use.....	1
Structure.....	2
Indicator Light Instruction.....	2
Power Button Function Instruction	3
Connect WiFi.....	3
Function.....	5
FAQ.....	7

Product Introduction

 
Dash Camera is a device can record video audio information while driving, so with this device you can avoid trouble on road if somebody want to offend you, it can provide clear evidence in car accident. What's more, it can record wonderful view on the way when travel.

In order to use this device correctly more well, please read below guide carefully before you use.

Notice Before Use

1. Please use original high-speed class 10 TF card to storage video, unless it may not be compatible with this device indicate "file error" or "SD card error", this device max support 32GB TF card.
2. You must format memory card when you use this device at first time, if memory card inside have other video or picture it can not be read by device.
3. Pay attention to the insert direction of the card. If insert card from the wrong side, it may damage the device and TF card.
4. Please remove off the car charger lighter with your car when you do not use this dvr device like parking, otherwise your car engine start big instant electricity current probably burn out your dvr device.
5. This dvr device special use for car, please use it inside car with car charger, if no car charger recharging, its built-in battery very very small, sometimes may can not be turned on successfully because of no enough electricity.
6. This device only allow electricity 5V 1A, so please DO NOT use any home charger or USB cable to recharge, you MUST use our original car charger to do recharging, because some home charger adapter have 12V output, it is not suitable, it probably burn out the dvr device. Or sometimes comes out strange squeaky noisy sound because of current not compatible.

Structure

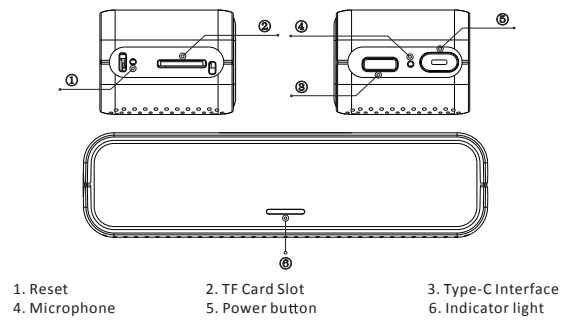

Indicator Light Instruction



- **Software Upgrade:** GREEN light flashes once a second during the upgrade process, Green light goes out when the upgrade is complete. If the upgrade fails, the green light will flash quickly.
- **Not Recording/SD Card Error:** RED light is always on.
- **Format SD Card:** Red light and Green light flash in turn, once finish sd card format will only Green light on recording.
- **During Video Recording:** GREEN light flashes once a second.

Power Button Function Instruction

1.Short Press:

 
- When connected with APP, short press means START /STOP RECORDING (when the APP is connected, the button has no effect, it needs to be operated on the APP).
- When the device notice "SD Card Error", short press within 5s means FORMAT SD CARD.

2. Long Press: POWER ON/OFF.

3. Short Press: 5 times in quick succession means RESET&FACTORY DEFAULT.

Connect WiFi


1.Search in the mobile APP store "roadvideo"

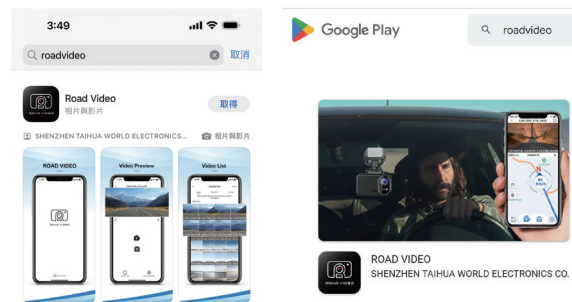


2. Turn on the dashcam, when the indicator light is green, it means it is turned on.



 
3. Search out "CVR_*****" this wifi in your phone wifi settings.

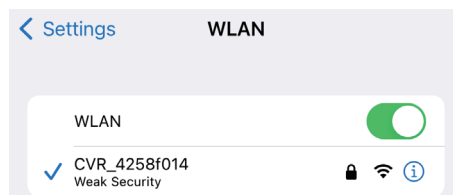

 4. Enter the password "123456789" try to connect phone wifi with dvr camera wifi.

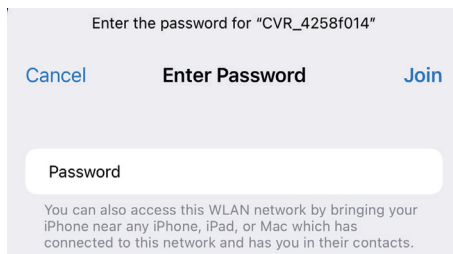

 
5. Open the "roadvideo" App on your phone to remote control like below.

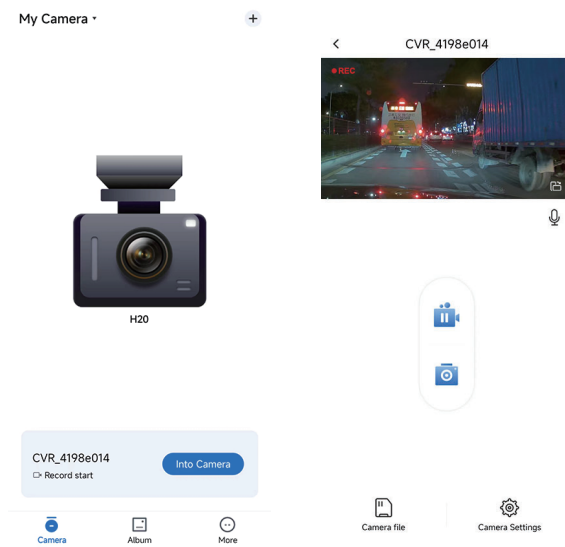

The main functions are listed as below

1.1 Recording video

 Tap  this icon to turn on the recording function.

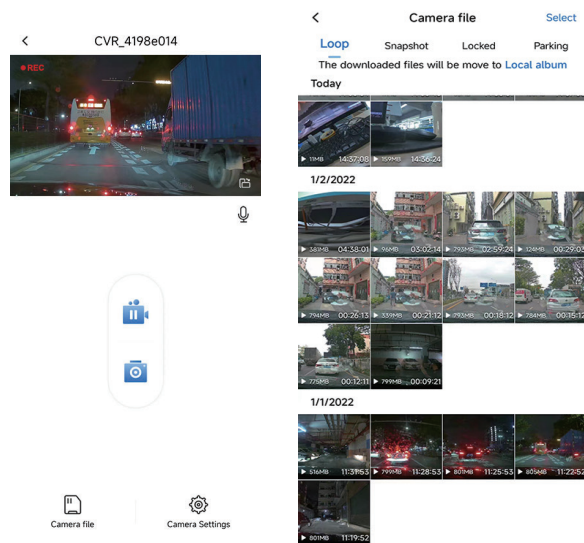

1.2 Photograph

Tap  this icon to take a picture.

1.3 Playback video

Tap  this icon in the main menu go into playback video interface.

1.4 Playback photo

Tap  this icon in the main menu go into playback photo interface.

1.5 Settings

Tap  this icon in the main menu go into settings interface shown as below.



FAQ:

Q: Why my dvr camera indicate “SD card Full” ?

A: 1) Please check if your memory card is original brand high speed Class 10 memory card, if you use some copy card like Class 4 or Class 6, it will indicate “SD card full” because it is not compatible. (Note please: DVR max support only 32GB card only)

2) Please check your dvr MENU settings if you have opened on Loop Recording this function already? You must open ON Loop Recording this function the previous video can be overwriting.

3) Please check your dvr MENU settings if you have turn OFF G-Sensor, Parking Monitor & Motion Detect this 3 functions already at the same time? If G-Sensor is on, the file will be protected to lock that can not be overwrite, also dvr will auto go to recording all the time if Parking Monitor & Motion Detect is on, so the SD card will be full.

4) You must format to clear up your memory card file by hand at least 2~3 times within a month because the memory card inside will have some locked file that happen while driving at some emergency time, but this locked files can not be overwrite automatically. You must delete them by hand.

Q: Why my dvr camera auto on & off continuously?

A: Please check first if your dvr MENU settings open on Parking Monitor and G-Sensor this 2 function already? Normally if Parking Monitor is on the dvr will go to Parking Monitor mode, in this mode status, dvr will auto on once detect any touch or shake, then it will auto off if while no touch. So it will auto on & off continuously.
G-Sensor this function also will lock this status video file to avoid no overwrites then it can keep as parking evidence. Please turn off this 2 function in MENU settings then try again.
At the same time, please turn off Motion Detect this function in MENU settings also, because if Motion Detect is on, it will auto go to recording once have any movement in front.

Q: Why my dvr always freeze while recording?

A: Please check if your memory card is original brand high speed Class 10 memory card, if you use some copy card like Class 4 or Class 6, it will indicate SD card full or error because it is not compatible will happen freeze while recording.

So if your camera happen freeze problem, please try to use another different new original class 10 memory card to have a try, then you can identify the problem reason. If change a new card still can not be ok, that maybe the dvr camera firmware problem, please contact seller to upgrade firmware.

Q: Why my dvr camera recording image not clear?

A: Please check the video link that we upload online website link already, it is real link, so its recording quality image exactly same as product. In dvr camera MENU settings normally have 1080P, 720P, VGA option.

Highest quality image is 1080P, middle quality image is 720P, and lowest quality image is VGA. Please set as highest resolution 1080P when you do recording. If you set resolution as VGA, video image quality will be not clear, please change to 1080P option in settings.

Besides, video quality image sometimes will be not so good if the surroundings not so good like at night or fog days.

Note: we reserve the modification right of the device design and specifications without notice