


# Tymate

NFC Tap  
NFC Pressure checker.NFC Pressure Sensor


Model: NF7

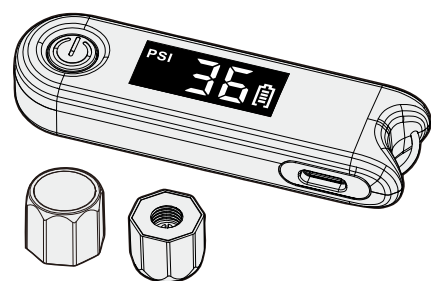


Implementation standards:GB26149-2017

## 1. Kit Contents

### 1-1.Checker (NF7)


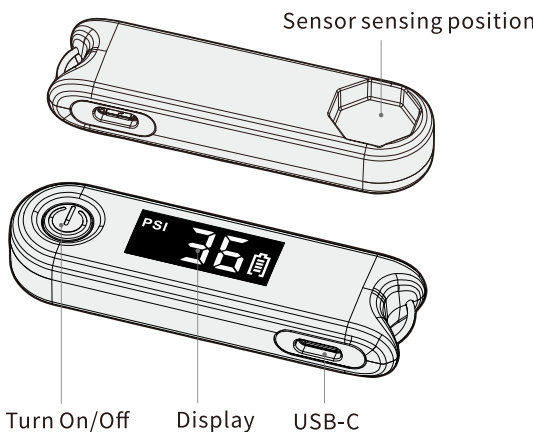


### 1-2.Sensor (NS7)

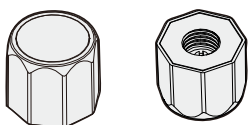

## 2.Sensor Installation


※**Note:** Before installing the sensor, make sure that the tire pressure is the required air pressure or the standard air pressure.

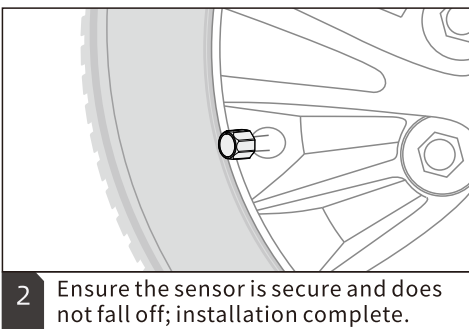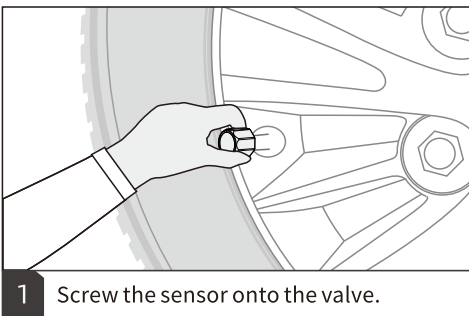

## 3.Checker operation


3-1.Turn On/Off: Press and hold the power button for 3 seconds to turn on/off. (It will automatically turn off after 30 seconds of inactivity.)

Press and hold the power button for 3 seconds

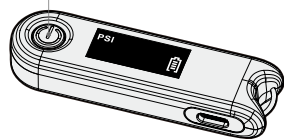


3-2. Pressure unit switching: Press the power button 5 times while the machine is on to switch between psi and BAR.


Press the power button 5 times

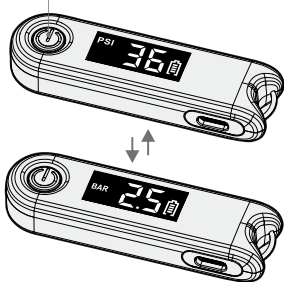

3-3. Reading air pressure: With the device powered on, place the display sensor over the sensor and the air pressure will be automatically read in about 1 second.

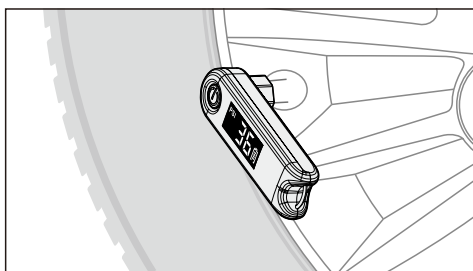

3-4.Charging: Charge via DC5V USB port.

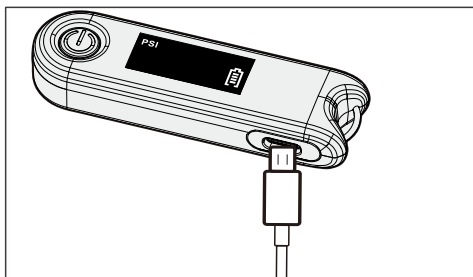

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.



User manual



[www.tymate-tech.com](http://www.tymate-tech.com)



Use camera or QR scanner to scan

VIP Extended Warranty 24h Online Service  
<https://tymate afterservice.vip>  
+ 1(855)-492-9277  
Mon-Fri: 9:00AM - 5:00PM (EST)  
Support Mail: [tymate@afterservice.vip](mailto:tymate@afterservice.vip)