

USER GUIDE



1 - Basic Feature



- Turning phone on and off
1. Turning on - Press and hold the Power button to turn your phone on.
 2. Turning off - Press and hold the Power button until the menu appears. Tap "Power off". If your device doesn't respond, press and hold the Power button for 15 seconds to force reboot.
 3. Rebooting - Press and hold the Power button and volume down at the same time until the menu appears. Tap "Reboot".



- SIM cards
1. Inserting SIM, USIM, and TF cards - Use the provided SIM tray extraction tool to take the SIM tray out of the side of your phone. Place your SIM card inside the tray and insert it into your device.
 2. Removing SIM, USIM, and TF cards - Use the provided SIM tray extraction tool to take the SIM tray out of the side of your phone. Remove your SIM card from the tray and insert the tray back into your device.



- Charging
- When your phone's battery is running low, connect the USB cable to the phone and plug it into the adapter connected to a power outlet. Disconnect the charger when your phone is fully charged. Use only authorized USB cables and power adapters. Using unauthorized devices to charge your phone may severely damage the battery and lead to explosions.



- Network Connective
1. Wi-Fi settings Tap the name of the Wi-Fi toggle to be able to switch between Wi-Fi networks quickly. You may need to input password.
 2. Bluetooth settings Tap the name of the Bluetooth toggle to manage connected devices.

2 - Telecommunications



- Making calls
- There are multiple ways to make calls.
1. Using dial pad Enter a phone number on the dial pad and tap the green button to dial.
 2. Press and hold a phone number Press and hold a phone number to make the dialing button appear. Tap the button to make a call.
 3. Call numbers from call history Tap any number in your call history to return a call.



- Incoming calls
- You might be notified about incoming calls either by a full-screen dialog or a floating notification.
1. Answering calls Slide the green button in the full-screen dialog to answer a call, or simply tap the button if you see a floating notification.
 2. Rejecting calls Slide the red button in the full-screen dialog to reject a call, or simply tap the button if you see a floating notification.
 3. Reply with SMS Slide the SMS button in the full-screen dialog to reply with a text message. You can choose one of the quick replies or write a custom message.
 4. Silencing the ringtone Press any physical button on your phone to silence the ringtone.



- Messaging
- Sending and replying to messages
1. Sending a message Open the messaging app and tap the plus to create a blank message. You can select the receiver from your contacts or add the phone number manually. Enter your message and tap "Send".
 2. Replying to a message Tap a message you received and enter your reply in the field below. Tap "Send" after you're done.
 3. Selecting a SIM card for outgoing messages If you have two SIM cards in your device, you'll be asked which SIM card to use before sending a message.

3- Home Screen Basic features

- All apps you install on your device appear on your Home screen. However, it's not the only feature it provides.
1. Uninstalling apps To uninstall an app, press and hold its icon, then drag it over the trash bin that appears at the top of the screen.
 2. Changing wallpaper Follow these steps: Go to Settings > Wallpaper > Select a wallpaper > Tap "Apply" and select "Set as Home screen".
 3. Moving app icons Press and hold an app to pick it up, then drag it to the new location.
 4. Creating new folders Drag an app over another app to create a folder. You'll be able to edit folder's name after this.

4 - Battery usage

- Open System setting and tap "Battery" to see how your device consumes power, you'll be able to check the battery level and capacity. Turn on Battery saver to reduce apps' background activity, stop sync, and minimize system animations. Battery use allows you to check the power consumption status of different apps and hardware elements.

5 - Manage apps

1. Uninstalling apps You can uninstall multiple apps using this feature. Select the apps and tap the button below to uninstall them.
2. Apps & notifications Setting allow you manage the permissions of all apps installed on your device. Managing permissions for individual apps You can check all of the permissions an app has by tapping the app. The switches located next to every permission allow you to quickly give or restrict access. You can also sort permissions by type to check all apps having a specific permission.

6- Safety information

1. The phone should be at least 15cm away from any medical implant or rhythm adjuster and never put the device in your coat pocket
2. Do not expose the device and other batteries together with the high temperatures or heat-generating equipment such as sunlight, heaters, microwave ovens, ovens or water heaters. Overheating of the battery can cause an explosion.
3. When charging is complete or not charging, disconnect the charger from the device and unplug the charger from the power outlet.
4. If the device is equipped with a non-removable battery, do not replace the battery yourself to avoid damaging the battery or device.
5. Use of an unapproved or incompatible power source, charger or battery may cause fire, explosion or other hazards.
6. Do not disassemble or reset the battery, insert other objects, immerse in water or other liquids to avoid battery leakage, overheating, fire or explosion.

7. Do not drop, crush, scratch or puncture the battery to avoid subjecting the battery to excessive external pressure, resulting in internal short-circuit and overheating of the battery.

7-Maintenance

1. Thoroughly understand the maintenance of this mobile phone to use the mobile phone more safely and effectively, and extend the service life of the mobile phone as much as possible.
2. Please avoid filling, knocking or shaking your phone. Rough handling of the phone can cause the screen to rupture, damaging the internal circuit board and the delicate structure.
3. Do not use chemical solvents or detergents to clean your phone. Wipe the phone case with a soft cotton cloth dampened with water or a mild soap.
4. Clean the lens (camera and screen) with a clean, dry, soft cloth.
5. If you encounter an abnormal image such as a crash during use, the processing method is as follows: please press and hold the power button for more than 12 seconds, the mobile phone will be forced to restart (unlock the phone when restarting) It can solve the general bug.
6. Do not connect the battery that has been fully charged to the charger for a long time, as overcharging will shorten the battery life.

Warranty Card

All return item will require a RMA number, please contact seller first. Fill in purchase details and attached this warranty card when you return the item. We appreciate your understanding and cooperation.

Name:	
Product Name:	
IMEI:	
Return Reason:	



FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAR statement

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The SAR limit set by the FCC is 1.6W/Kg. For body-worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the device a minimum of 5mm from the body. RF exposure compliance with any body-worn accessory that contains metal was not tested and certified. and use of such body-worn accessory should be avoided. Accessory available in market and must be used to keep use distance 5mm from EUT to body-worn operation.

ISED Canada Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence exempt RSS(s).

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure: This equipment complies with Canada radiation Exposure limits set forth for an uncontrolled environment to maintain compliance with IC's RF Exposure guidelines. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Déclaration du Canada:

Ce dispositif contient un (S) émetteur (S)/récepteur (S) exempté (S) de licence qui respecte l'innovation, Science et développement économique Canada a exempté le ou les RSS de licence. L'exploitation est soumise aux deux conditions suivantes:

- 1) cet appareil ne doit pas causer d'interférences et
- 2) ce dispositif doit accepter toute interférence, y compris toute interférence pouvant entraîner un fonctionnement indésirable du dispositif.

Exposition au rayonnement: cet équipement est conforme au rayonnement Canada

Les limites d'exposition fixées pour un environnement non contrôlé afin de maintenir la conformité avec les lignes directrices d'exposition aux RF d'IC. Ce dispositif et ses antennes ne doivent pas être co-localisés ni fonctionner en conjonction avec une autre antenne ou un autre émetteur.

The device for the band 5150-5825 MHz is only for indoor usage to reduce potential for harmful interference to co-channel mobile satellite systems.

Caution:

1. This product can be used in EU member states. This device can be used in European
 2. Products can be sold in all EU countries Declaration of conformity Shenzhen Haimel Technology Co., LTD. declares that Micro system with Smart Phone is in compliance with the essential requirements and other relevant provisions of Directive Directive 2014/53/EU. Applicant : Shenzhen Haimel Technology Co., Ltd Address : 9V777, East 9th Floor, Building 2, SEG Science and Technology Park, Huaqiang North Street, Futian District, Shenzhen, China
- | | |
|-------------------------------------|--|
| GSM 900: 880-915 MHz :32.70dBm | Integrated Chipset : MT6177 (2G/3G/4G) |
| DCS1800:1710-1785MHz: 31.82dBm | MT6631(BT/2.4GWiFi+5GWiFi) |
| WCDMA Band 1:1920-1980MHz :23.46dBm | Modulation : WiFi: CCK, DQPSK, DBPSK for |
| WCDMA Band 8:880-915MHz: 24.65dBm | DSSS 256QAM, 64QAM, 16QAM, QPSK, |
| Band 1:1920-1980MHz:23.64dBm | BPSK for OFDM;GSM900: GMSK for GSM/ |
| Band 3:1710-1785MHz:23.96dBm | GPRS; WCDMA: QPSK LTE:QPSK,16QAM |
| Band 7:2500-2570MHz:21.48dBm | BT: GFSK, π/4DQPSK, 8DPSK |
| Band 8:880-915MHz:24.65dBm | Antenna : 2G /3G/LTE: FPC Antenna |
| Band 20:832-862MHz:24.14Bm | 2.4G WiFi: FPC Antenna |
| BLE: 2402 MHz ~ 2480 MHz:-3.99dBm | Antenna Gain : GSM900 : -1.45dBi |
| EDR: 2402 MHz ~ 2480 MHz:10.56dBm | DCS1800:0.39dBi; WCDMA Band 1:0.55dBi; |
| 2.4G WiFi:2412-2472MHz:16.59dBm | WCDMA Band 8: -1.45dBi; |
| 5.2G WiFi:5180-5240MHz:13.15dBm | BT/2.4G WiFi: -1.52dBi |
| 5.8G WiFi:5745-5825MHz:13.30dBm | 5.2G WiFi: 1.18dBi ;5.8GWiFi:0.98dBi |
| | LTE Band 1: 0.46dBi ;LTE Band 3: 0.39dBi; |
| | LTE Band 7:1.07dBi; LTE Band 8/20:-1.45dBi |