

尺寸: 105x148.5mm

折页方式: 骑马钉 128g铜版纸

专色

#A7E800

R167 G232 B0

C39 M0 Y90 K0

PANTONE 2290C

SEENDA

User Manual

Wireless Keyboard

3-Channel Multi-OS Connection

Full Size 104-Key Design

Quiet Soft Typing Experience

COE202

EN

Product Warranty

All Seenda products come with a 24-month warranty policy. please do not hesitate to contact us if you have any questions. Our support team will try our best to provide you with a pleasant shopping experience.

Our email: support@seenda.com

Our website: www.seenda.com

Phone: +86-468-3543

Mon-Fri: 10AM - 2PM, 3PM - 7PM ET

*Closed during Holidays

Product Features

Multimedia Function Keys

Low Battery Indicator

Cap's Lock Indicator

2.4G USB Indicator

Bluetooth 1 Indicator

Bluetooth 2 Indicator

2.4G USB Channel

Bluetooth 2 Channel

Bluetooth 1 Channel

Power Switch

Battery Slot

2.4G USB Connection

1. Remove the battery cover, and insert the battery (Please ensure that the positive and negative terminals are placed correctly.)

2. Turn the power switch to ON.

3. Press the [F2] channel button, and the [F2] channel indicator light is on, the keyboard enters the 2.4G USB channel.

Keyboard Bluetooth Connection

1. Remove the battery cover, and insert the battery (Please ensure that the positive and negative terminals are placed correctly.)

2. Turn the power switch to ON.

3. Press the [F1] / [F2] channel button, and the [F1] / [F2] corresponding indicator light is on, the keyboard enters the Bluetooth channel. Long Press this selected channel button for 3-5 seconds until the corresponding indicator light flashes quickly, and the keyboard enters Bluetooth pairing mode.

4. Turn on the Bluetooth settings on your device, search or select "SEENDA COE202 KB" and start Bluetooth pairing until the connection is completed.

Keyboard Channel Switching

After [F1] [F2] are connected, single press the channel button on the keyboard, easily switch between multiple devices.

Keyboard Low Battery Instructions

When the low battery indicator flashes red, it indicates that the keyboard is entering a low battery state and will shut down automatically if the battery is not replaced. The keyboard requires one AAA battery. When installing the battery, please ensure that the positive and negative terminals are correctly aligned.

Multimedia Function Keys

Keys	Windows	Android	iOS	Mac OS
Light -	Light -	Light -	Light -	Light -
Light +	Light +	Light +	Light +	Light +
Application Switch	Application Switch	Application Switch	Window Switch	Window Switch
Window Switch	Window Switch	Window Switch	Application Switch	Application Switch
Display Desktop	Go Home	Go Home	Go Home	Go Home
Search	Search	Search	Search	Search
Previous Track	Previous Track	Previous Track	Previous Track	Previous Track
Play & Pause	Play & Pause	Play & Pause	Play & Pause	Play & Pause
Next Track	Next Track	Next Track	Next Track	Next Track
Mute	Mute	Mute	Mute	Mute
Volume -	Volume -	Volume -	Volume -	Volume -
Volume +	Volume +	Volume +	Volume +	Volume +
Screenshot	Screenshot	Screenshot	Screenshot	Screenshot
FN+ESC (FN lock) button to turn on or turn off the FN function				

Note: The FN function is a cyclic mode (F1-F12 and multimedia functions are cyclically used).

Product Specifications

Keyboard Parameters	
Working voltage	1.5V
Working current	±5mA
Standby current	±0.4mA
Sleeping current	±0.04mA
Standby time	300 Days
Working time	100 Hours
Wake up way	Press any key
Keyboard Size	436x124x22mm /17.2"x4.9"x0.9in
Keyboard Weight	510g/1.1lb

Package Content

► 1* Wireless Keyboard

► 1* USB Receiver

► 1* User Manual

Sleep Mode

1. When the keyboard/mouse stops working for 60 minutes, it will automatically enter the sleep mode for energy saving.

2. When use the keyboard/mouse again, you only need to press any key, and the keyboard/mouse will wake up within 3-5 seconds.

3. The channel indicator light will turn on again and start working.

Memory Function

The keyboard/mouse has a memory function. When a channel is connected normally, the keyboard/mouse defaults to this channel after turning off the device and turn back on, and the channel indicator lights up.

Frequently Asked Questions

How to deal with disconnection issues, keys repeating or typing & clicking delay?

● Please replace new batteries in time. A low battery can affect the performance of the keyboard/mouse.

● If using a USB dongle to connect the keyboard/mouse to the device, unplug and replug the USB dongle, trying a different USB port if necessary.

● If connecting the keyboard/mouse to the device via Bluetooth, delete the Bluetooth name from your device's Bluetooth connection list, and restart your device and re-pair the keyboard/mouse by following the steps in the user manual.

● If the issues persist, try to connect the keyboard/mouse to other devices to check if the same issues occur and don't hesitate to contact our customer service for assistance.

How to deal with keyboard/mouse won't turn on or stops working?

● Please note the positive and negative poles when installing the batteries.

● Try to change another new batteries to confirm whether it is a battery issue or a fault with the keyboard and mouse.

● If the power indicator of the keyboard/mouse does not light up at all, please do not hesitate to contact our customer service for assistance.

How to deal with key/mouse buttons stop working or feel sticky?

● Please note the keyboard/mouse is not waterproof. Avoid water/drink/coffee and other liquids from entering. If this happens, please turn it upside down and clean the liquid.

● Also, avoid eating near the keyboard/mouse as crumbs are also the primary cause of this issue. If this happens, first try to clean the debris with compressed air duster, then wipe it clean with a cotton swab dipped in ethanol or isopropyl alcohol.

Safety Warning

IMPORTANT: To reduce risk of fire, electric shock, or injury, follow these safety instructions.

▲ Heat Exposure: Avoid leaving the item in high-temperature environments or in direct sunlight, which could result in a fire hazard.

▲ Liquid Exposure: Keep the item away from water and liquids. Do not use if wet until thoroughly dried.

▲ Damage and Leakage: Cease usage and consult customer service if the item is damaged or the battery leaks.

▲ Correct Disposal: Follow local regulations for disposing of electronic devices and batteries. Do not dispose of with household waste.

▲ Radio Frequency Interference: This device may cause interference with other electronics. Keep a safe distance from sensitive devices.

▲ Child Safety: Keep the item and its components out of reach of children to avoid choking or battery ingestion hazards. Never allow children to handle the item unsupervised.

CAUTION: Non-compliance with the above warnings can lead to serious injury or property damage.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

EU Declaration of Conformity

Declared Object: Wireless Keyboard

Model: COE202

Rating: Keyboard: 10V~24V, Mouse: 1.5V~9VDC

Place of Production: Made in China

Manufacturer: Dongguan Lingjie Electronics Technology Co., Ltd

E-mail: andy@ldseer.com

Address: Building 3, No.23, Zhengxing North Road, Tiyuan, Gangping Town, Dongguan City, Guangdong Province, China, 523000

European Representative:

EC REP

Representative: S.L. GmbH

Business address: Baumweg 23, 22355, Hamburg, Germany

Phone: +49 40 1309090000

UK REP

Business address: The Imperial, 3-13 St Dunstons Gardens, Redditch B97 8DQ, Worcester, England, UK

E-mail: seendauk@outlook.com

It is our sole responsibility to declare that the above products are in full compliance with Directive 2014/53/EU, 2011/65/EU (as amended).

Position: Managing Director

Signature: Andy Mo

Date of Sign: 2023.15

EU agent name: Tony Jia

Date of Sign: 2023.15

UK

CE

RoHS

REACH

英语