

SEENDA

User Manual

Wireless Keyboard



Dual-mode
Multi-OS Connectivity



Elegant Round-shaped
Key Design



Integrated
Full-size SKC

CTU-301



Product Warranty

All Seenda products come with a 24-months warranty policy, please do not hesitate to contact us if you have any questions. Our support team will try our best to provide you with a pleasant shopping experience.

Our email: support@seenda.com

 
Our website: www.seenda.com

Phone: +1 844-968-2543

Mon-Fri: 10AM - 2PM, 3PM - 7PM ET


*Closed during Holidays

Product Features

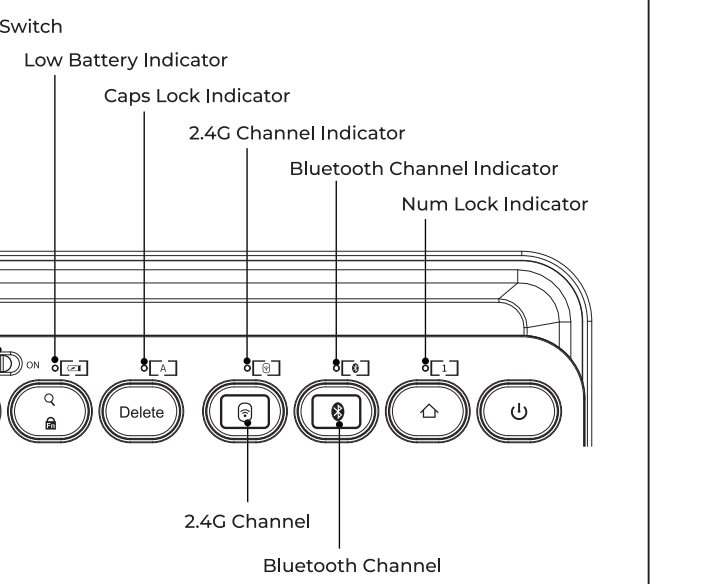

- 1 -

 Keyboard Bluetooth Connection

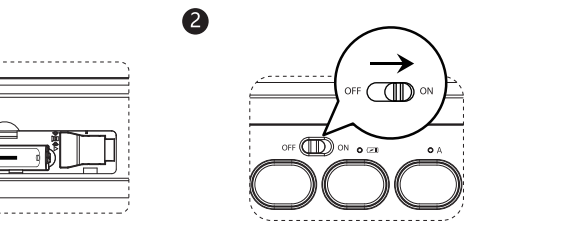

1. Remove the battery cover, insert an AA battery for the mouse and 2 AAA batteries for the keyboard, ensuring you correctly align the anode and cathode.

2. Turn the power switch to ON.

3. Press the channel button, and the indicator light is on, the keyboard enters into the Bluetooth channel.

 
Long Press for 3-5 seconds until the indicator light flashes quickly, the keyboard enters into Bluetooth pairing mode.

4. Turn on the Bluetooth settings on your device, search or select "BT*2.4G KB" and start Bluetooth pairing until the connection is completed.

- 2 -

Keyboard Channel Switching

After ① ② are connected, single press the channel button on the keyboard, easily switch between multiple devices.

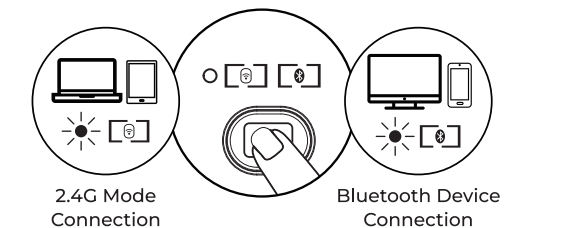


2.4G Mode Connection

Bluetooth Device Connection

Keyboard Low Battery Instructions

 When the low battery indicator flashes red, it indicates that the keyboard is entering a low battery state and will shut down automatically if the battery is not replaced. The keyboard requires two AAA batteries. When installing the batteries, please ensure that the positive and negative terminals are correctly aligned.

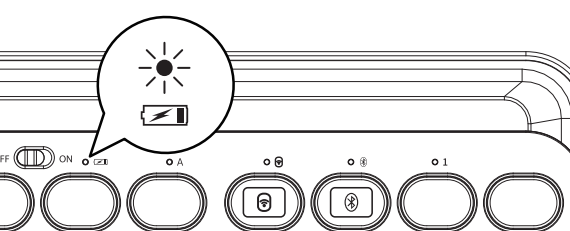

- 3 -

Multimedia Function Button

Button	Windows	Android	iOS	Mac OS
⏏	Mute	Mute	Mute	Mute
⏮	Volume down	Volume down	Volume down	Volume down
⏭	Volume up	Volume up	Volume up	Volume up
⏮	Previous	Previous	Previous	Previous
⏭	Play/Pause	Play/Pause	Play/Pause	Play/Pause
⏮	Next	Next	Next	Next
⌘	Decrease brightness	Decrease brightness	Decrease brightness	Decrease brightness
⌘	Increase brightness	Increase brightness	Increase brightness	Increase brightness
⌘	Select all	Select all	Select all	Select all
⌘	Copy	Copy	Copy	Copy
⌘	Paste	Paste	Paste	Paste
⌘	Cut	Cut	Cut	Cut
⌘	Search	Search	Search	Search
⌘	Open the browser	Home Page	Home Page	/
⌘	One key sleep	Lock screen	One key sleep	One key sleep
⌘	FN+Search (FN lock) key to turn on or off the FN function.			

Note: FN function is in cyclic mode (F1-F12 and multimedia functions are cyclically used)

- 4 -

Product Parameter

Keyboard:

Wake-up Way	Click any key to wake up
Operating Voltage	3V
Working Current	< 5mA
Product Size	394.3x144.8x23.3mm/15.5"x5.7"x0.91in
Keyboard Weight	1.55lbs/705.5g

2.4G Transmission Parameters:

Transmission Distance	10m
Response Rate	250Hz
System Requirement	An available USB Interface; Windows XP, Windows 7, Windows 8, Windows 10 or higher; Mac OS X 10.12 or higher.

Bluetooth Transmission Parameters:

Transmission Distance	10m
Response Rate	125Hz
System Requirement	Bluetooth receiver; Windows 8, Windows 10 or higher; Mac OS X 10.12 or higher; Android 4.3 or higher.

- 5 -

Sleep Mode

1. To conserve energy, the keyboard and mouse will enter Sleep Mode if no operation is detected for over 30 minutes, and the indicator light will turn off.

2. To wake up the keyboard and mouse, simply press any key. The combo will be ready for use within 3 seconds, and the indicator light will turn back on.

Package Contents

- ▶ 1* Wireless Bluetooth Keyboard
- ▶ 1* USB Receiver
- ▶ 1* User Manual

- 6 -

Frequently Asked Questions

How to deal with disconnection issues, keys repeating or typing & clicking delay?

- Low Battery: Ensure that the batteries have sufficient power. Low battery levels can impact the performance of the keyboard.
- Signal Interference: Keep the USB receiver/keyboard away from routers, microwaves, or metal surfaces to reduce signal interference.
- USB Mode Reconnect: If using a USB dongle to connect the keyboard to the device, unplug and replug the USB dongle. Try using a different USB port if needed.
- Bluetooth Mode Repair: If connecting the keyboard to the device via Bluetooth, delete the Bluetooth name from your device's Bluetooth connection list, restart your device, and re-pair the keyboard by following the steps in the user manual.
- Distance Limit: Maintain a distance of within 10 meters (33 feet) between the receiver/computer for optimal signal strength.
- Try Other Devices: Test the keyboard/mouse with alternative devices to determine if the issues persist.

How to deal with keys/mouse buttons stop working or feel sticky?

- Please note the keyboard is not waterproof. Avoid water/drinks /coffee and other liquids from entering. If this happens, please turn it upside down and clean the liquid.
- Also, avoid eating near the keyboard as crumbs are also the primary cause of this issue. If this happens, first try to clean the debris with compressed air duster, then wipe it clean with a cotton swab dipped in ethanol or isopropyl alcohol.

- 7 -

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- 8 -

IC Warning

This device complies with Innovation, Science and Economic Development Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exemptes de licence d'innovation, sciences et développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Ce dispositif ne peut causer d'interférences ; et
- (2) Ce dispositif doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé sans restriction dans des conditions d'exposition portables.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- 9 -

Safety Warning

IMPORTANT: To reduce risk of fire, electric shock, or injury, follow these safety instructions.

- ▲ Heat Exposure: Avoid leaving the item in high-temperature environments or in direct sunlight, which could result in a fire hazard.
- ▲ Liquid Exposure: Keep the item away from water and liquids. Do not use if wet until thoroughly dried.
- ▲ Damage and Leakage: Cease usage and consult customer service if the item is damaged or the battery leaks.
- ▲ Correct Disposal: Follow local regulations for disposing of electronic devices and batteries. Do not dispose of with household waste.
- ▲ Radio Frequency Interference: This device may cause interference with other electronics. Keep a safe distance from sensitive devices.
- ▲ Child Safety: Keep the item and its components out of reach of children to avoid choking or battery ingestion hazards. Never allow children to handle the item unsupervised.

CAUTION: Non-compliance with the above warnings can lead to serious injury or property damage.

- 10 -