 


Flashback ONE35

User Guide

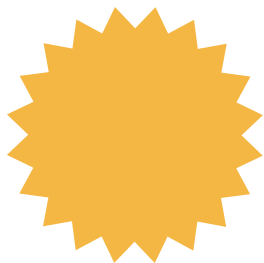

Quick Start

1. Taking Photos

Wind the dial until it stops.

Hold steady and press the shutter button.

To use the flash, flick the switch on and wait for the red light to turn on.

2. Use the app

The Flashback app can check your battery level, develop your photos and load another roll of film.

Scan the QR code below for a link to the app and more detailed instructions!



Battery and Charging

 
Charge your camera with the included USB-C cable. A red light will turn on while charging and turn off when it's complete.

 
To save battery life, you should turn off the flash when not in use.

Display

The display will show the number of photos you have left. When there's no roll of film loaded, it will show "- -" instead.

If your battery is running low, it will show "Lo".

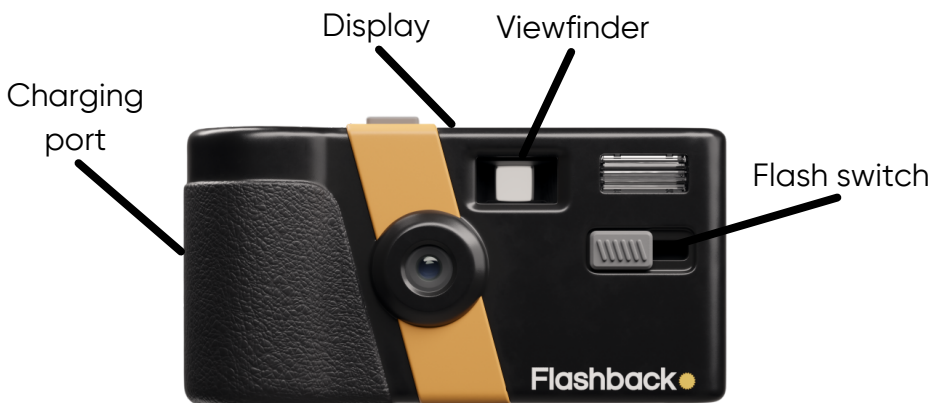

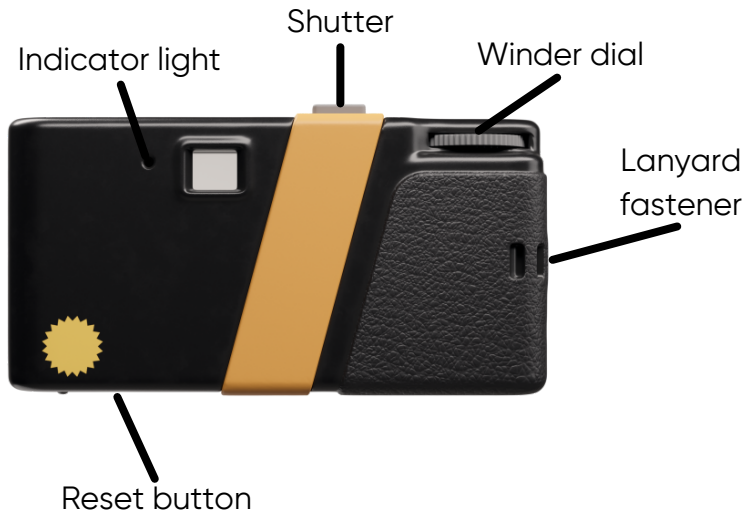

Reset

If you encounter any issues, use a pin to press the reset button and cause a hard reset.

If you hold the button for 5 seconds, the camera will be factory-reset. All your personal data and photos will be deleted.

Regulatory

Note: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (0mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Model: Flashback ONE35

FCC ID: 2BDJZONE35

For additional help, please get in touch.

Visit: <https://joinflashback.co>

Email: hello@joinflashback.co

TYKEE PTY. LTD.
279 Stanley Rd
Carina QLD 4152
AUSTRALIA

Flashback 

Created with love in Brisbane, Australia.