



HD Camera

SMART WATCH
H10



NO SMARTPHONE OR APP NEEDED!

Quick Three Steps

- 1 First use: Ensure sufficient battery. If it fails to power on due to low battery, connect the charger to charge the device.
- 2 Short-press dial to enter main menu, double-press main menu to switch styles; short-press any page to enter menu step by step.
- 3 Left shortcut key: Short-press on dial to enter camera; short-press in 2nd/3rd-level interfaces to return to dial.

MENU FUNCTION



 
Pedometer

Records real time daily steps, distance, calories & the distribution chart shows hourly data from 0:00 to 23:00.



Sleeping

Records weekly sleep records locally on the sleep details page (sleep starts/ends awake time all recorded in detail) Note: Sleep data is uploaded only when wearing the bracelet to sleep, and detection starts at 10 PM.



Calculator

Enter values/operators to perform calculations



Stopwatch

Enter the stopwatch and click the Start button to begin timing (The stopwatch can be used for pre-arranged timing, e.g. Click Pause to stop, ring)



 
Camera

1. Enter camera, preview after shooting—save or delete. 2. Tap photos in album to preview (single left/right tap or a watch face background, adjust time position freely (max 10 photos stored).




Game

Contains with multiple puzzle and fun games built-in.



Alarm Clock

 Default 1 AM alarm (disabled by default); manually add up to 5 alarms. The bracket will remind you at the set times.



Timer

6 default timer durations + custom timing; start/pause/timeout, end page pops up when finished; set up to 1 custom timers manually.



Calendar

Single up/down to switch last/month month; swipe right to exit.

Dear Parents,

We understand that your child's education and development are very important. That's why we've added features tailored to help develop the skills that are needed at this stage in their lives and motivate them to be the best they can be. We thank you for trusting us with this important task—helping your child to have fun and learn at the same time!



Interactive Screen



Durable Design
For everyday wear and play



Rechargeable Battery

SETTING

1. View device info
2. Set any language
3. Set custom time
4. 12/24H format
5. Set custom date
6. Return to dial: Multiple options, auto-returns after set idle time
7. Factory reset: Clears all data (e.g., step count)
8. Power off: Long-press power key for shutdown menu

Display & Brightness Settings: 1. Brightness Adjustment: Customize brightness as needed 2. Raise to Wake: Lights up screen when raising wrist (screen off mode) 3. Background Duration: Multiple options, auto-off after set time

Precautions

- 1. Not for bathing/swimming.
- 2. Charge with included cable.
- 3. Avoid prolonged exposure to high humidity/extreme temperatures.

MULTIPLE GAMES



The 'MULTIPLE GAMES' section displays a 3x3 grid of game icons. The icons are: 1. Top-left: A hand holding a card with '10-10-10'. 2. Top-middle: A hand holding a card with '10-10-10'. 3. Top-right: A hand holding a card with '10-10-10'. 4. Middle-left: A hand holding a card with '10-10-10'. 5. Middle-middle: A hand holding a card with '10-10-10'. 6. Middle-right: A hand holding a card with '10-10-10'. 7. Bottom-left: A hand holding a card with '10-10-10'. 8. Bottom-middle: A hand holding a card with '10-10-10'. 9. Bottom-right: A hand holding a card with '10-10-10'.

FREQUENTLY ASKED QUESTIONS

Precautions

Not suitable for wearing during bathing or swimming. Do not expose the bracelet to high humidity, extreme temperatures (high or low) for a long time. Charge with the included charging cable.

⚠ Warn:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

Important: Charge or modifications not expressly Approved by the manufacturer responsible for compliance could void the user's authorization to operate the equipment.

-  **Schreiben**
Erlaubt in Einzel- oder geteilten Schichten, die zurückgelegte Distanz und die geschätzte Zeit des Verbleibenden Gangs rund umstündige Distanz von 0,00 bis 9,99 km anzuzeigen.
-  **Schlafen**
Die Schichtfunktionen werden lokal auf der Seite mit dem Schichtzeiger angezeigt (Tischkühler, letzter Schlaf und Wachphasen werden detailliert dargestellt). Hinweis: Schlafphasen werden nur nachfolgend, wenn die Armband- oder Handgelenk-Schichtfunktion aktiviert ist. Die Erlebung beginnt um 22:00 Uhr.
-  **Kalkulator**
Geben Sie Werte/Operatoren ein, um Berechnungen durchzuführen.
-  **Kamera**
 - 1. Kamera öffnen, nach Aufnahme eine Vorschau anzeigen – speichern oder löschen. 2. Foto(s) in Album anzeigen, wenn eine Vorschau anzeigen (nach dem Löschen) wichtig ist. 3. Zifferblattgrundraster löschen. 4. Zifferblatt frei anpassen (maximal 10 Fotos festhalten).
-  **Selfie**
 - 1. Enter, Kamera, preview after shooting – save or delete. 2. Tap photos in album to preview (white background) on a white background, adjust position (maximal 10 photos stored).
-  **Spiel**
Ermittelt zahlreiche integrierte Puzzles und Unterhaltungsspiele.
-  **Wecker**
Standardmäßiger Wecker mit 10 Uhr (Standardmäßig deaktiviert); bis zu 5 Wecker manuell hinzufügen. Das Armband erinnert Sie zu den eingestellten Zeiten.
-  **Timer**
6 Standard-Timerbausteine + benutzerdefinierte Zeitzeileinstellungen. Start-/Pause-Zeitzeileinstellung. Entsch. erscheint nach Ablauf der Zeit; bis zu 3 benutzerdefinierte Timer können manuell eingerichtet werden.
-  **Kalender**
24 Stunden nach oben/unten wechseln Sie zwischen dem letzten und dem nächsten Monat; durch Wischen nach rechts verschieben Sie die Ansicht.

Liebe Eltern,

Wir wissen, wie wichtig Ihnen die Bildung und Entwicklung Ihres Kindes sind. Deshalb haben wir Funktionen integriert, die speziell darauf ausgerichtet sind, die in dieser Lebensphase benötigten Fähigkeiten zu fördern und Ihr Kind zu motivieren, sein volles Potenzial auszuschöpfen. Vielen Dank für Ihr Vertrauen in uns – wir halten Ihr Kind, spielerisch zu lernen!



Interaktiver Bildschirm



Robustes Design
Für den Alltag und Reisen



Wiederaufladbarer Akku




EINSTELLUNG

1. Geräteinformationen anzeigen
2. Beliebige Sprache einstellen

3. Benutzerspezifizierte Zeit einstellen

4. 12/24-Stunden-Format

5. Benutzerspezifiziertes Datum festlegen

6. Rückkehr zur Wählfunktion: Mehrere Optionen, automatische Rückkehr nach eingestellter Laufzeit

7. Zurücksetzen/aufräumen Werkzeugeinstellungen: Löscht alle Daten (z. B. Sprachzähler)

8. Ausschalten: Halten Sie die Ein-/Aus-Taste gedrückt, um das Ausschalten zu bestätigen.

9. Anzeige und langfristige Einstellungen: 1. Mobiltelefonparausgang: Phasen Sie die Helligkeit nach Bedarf ab. 2. Aktivierung durch Berührung: Schalten des Bildschirm beim Anheben des Handgelenks ein (Bildschirm auf Mobil). 3. Hintergrundbeleuchtungsmodus: Mehrere Optionen, automatische Abschaltung nach eingestellter Zeit.

Vorsichtsmaßnahmen

- 1. Nicht zum Baden/Schwimmen geeignet.
- 2. Mit dem mitgelieferten Kabel aufladen.
- 3. Vermeiden Sie längeren Aufenthalt in Umgebungen mit hoher Luftfeuchtigkeit/evtl. hohen Temperaturen.

MULTIPLE GAMES

FR

Pédometre
Enregistre en temps réel la pas, la distance et les objectifs quotidiens ; le graphique de répartition affiché les données horaires de 23h00 à 23h00.

Dormir
Vous aide les données de sommeil hebdomadaires directement sur la page d'accueil (sommeil profond, sommeil léger et périodes d'été sont enregistrées en temps réel). Remarque : les données de sommeil et les cycles biologiques que l'enquête a calculés sont portés pendant le sommeil, et la différence comprise à 22h.

Calendrier
Saisissez les valeurs/opérateurs pour effectuer les calculs.

Chronomètre
Appuyez sur le chronomètre et cliquez sur le bouton Démarrer pour lancer le chronométrage. Le chronométrage peut être utilisé pour un chronométrage continu, cliquez sur Pause pour arrêter, ming.

Caméra
1. Ouvrez l'appareil photo, prévisualisez la photo avant de la prise de vue, puis appuyez sur la capture, la 2. Appuyez sur les photos dans l'album pour les prévisualiser et balayez vers la gauche ou à droite : défaites les cases d'émotion de la caméra et choisissez de nouveau la photo de l'heure (jusqu'à photos maximum).

Jeu
Comptez de nombreux jeux de puzzle et jeux photos intelligents.

Réveil
Mettre par défaut 8 h (déactivable par défaut) ; vous pouvez ajuster manuellement jusqu'à 5 alarmes, le bricolage vous rappellera aux heures programmées.

Minuteur
6 minutes de minuteur par défaut ; 1 minute personnalisable ; démarrage/pause à la discrétion, la page de l'heure affiche une fonctionnalité : possibilité de configurer manuellement jusqu'à 4 minutes personnalisées.

Calendrier
Balayez vers le haut/bas pour basculer entre le mois dernier et le mois suivant, balayez vers la droite pour quitter.

Chers parents,

Nous comprenons l'importance que vous accordez à l'éducation et au développement de votre enfant. Cet ouvrage nous avons intégré des fonctionnalités conçues pour l'aider à acquies les compétences nécessaires à ce stade, à le motiver à dominer le meilleur de lui-même. Nous vous remercions de nous confier cette mission essentielle : permettre à votre enfant d'apprendre en s'amusant !

Conception durable
Pour une qualité continue et pour jouer

PARAMÈTRE

1. Afficher les informations de l'appareil	2. Choisissez s'importe quelle langue
3. Définir une heure personnalisée	4. Retour 12/24 heures
5. Définir une date personnalisée	
6. Retour au numérique: Plusieurs options, retour automatique après une période d' inactivité définie	
7. Reinitialisation d'usine : Efface toutes les données (par exemple, le nombre de pas)	
8. Mise hors tension : Appuyez longuement sur le bouton d' alimentation pour accéder au menu d' arrêt.	

Paramètres d'affichage et de luminosité: 1. Bégaiage de la luminosité: Personnalisez la luminosité selon vos besoins. 2. Réveil par le poignet: Allume l'écran lorsque vous levez le poignet (écran rétro). 3. Durée du rétroéclairage: Plusieurs options, extinction automatique après une durée définie.

Précautions

- 1. Ne convient pas pour la baignade/la natation.
- 2. Rechargez avec le câble inclus.
- 3. Éviter toute exposition prolongée à une humidité élevée ou à des températures extrêmes.

JEUX MULTIPLES

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.