


kids walkie-talkie Instruction Manual



The instruction manual is for reference only
Please refer to the actual product for details

1 Product structure and button instructions

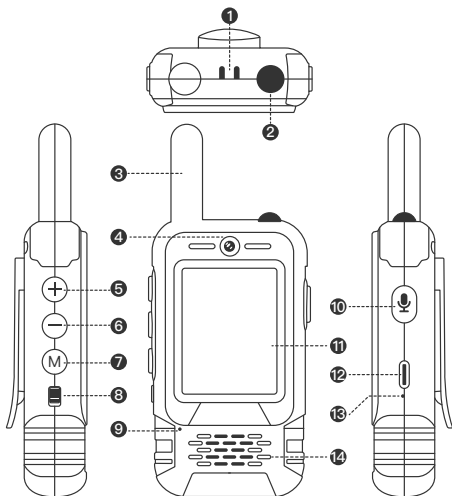

- | | |
|--------------------|-----------------------------|
| 1 Lanyard port | 8 power button |
| 2 ambient lighting | 9 microphone |
| 3 antenna | 10 record button |
| 4 lens | 11 screen |
| 5 Volume up | 12 charging port |
| 6 Volume down | 13 charging indicator light |
| 7 M key | 14 horn |

2 Product Power ON/OFF

1. When the product leaves the factory, the power switch is in the "off" position.
2. As shown in the figure, pushing the button upwards can "power on", while pushing it downwards can "power off".
3. Please fully charge the product before its first use.



3 Charge


1. Connect the charger with a regular charging cable, and the power indicator light will turn "red". Once fully charged, the indicator light will automatically turn off.
2. Charger compatibility specification: 5V/1A.

4 Functional Description

1. Switch the power switch to the "ON" state, and the product will automatically start up and display its own camera view. When the other party's intercom is turned on, both parties will automatically connect and display each other's camera views.

2. Press and hold the "  " button to initiate voice transmission. When the recording button is pressed, the ambient light starts flashing. Only when the speaker releases the intercom button can the other party press and hold the intercom button to send voice.

3. Image display conversion key "M": This product has four screen display modes. Shortly pressing the "M" key can switch the display mode.

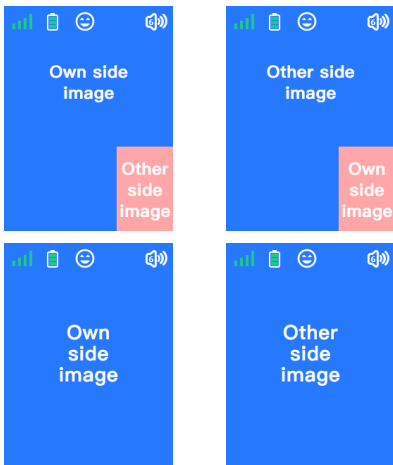

4. Volume adjustment:

Short press the "+" button to increase the volume, with a maximum value of 6;

Short press the "-" key to decrease the volume, with a minimum value of 1.

5. Voice changing function:

Long press the "M" key for two seconds to switch between six voice changing modes: Normal, Alien, Robot, Ough, Hight, and Deep. When using a single device, you can switch between voice changing modes and press the "🎤" button to record, which will change the voice of the recorded sound. After turning off the device, the voice changing mode will revert to the original mode.



Normal



Ough



Alien



Robot



Hight



Deep

6. Product power-on/off and automatic shutdown:

The product enters its working state immediately after being powered on. It remains in this state regardless of whether it is being used. When the product is in a low battery state, it will automatically shut down. If you no longer use it, please switch the power switch to the "Off" state. If you need to restart the product, simply switch the power to the "Off" state and then switch it to the "On" state to start it normally.

7. Product pairing and connection method

This product utilizes Wi-Fi 2.4G transmission and connection mode. Each package contains two paired handheld intercoms, which cannot be connected to other devices for use. If multiple sets of products are purchased, they can only be connected one-to-one and cannot be used simultaneously.

8. Precautions:

- Please keep away from fire sources when using and charging.
- This product does not have waterproof function. Please keep the surface dry when using it.
- The connection distance of this product should be determined based on the principle of ensuring no image delay.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.