 


Portable Touchscreen
Smart TV
Users' Manual

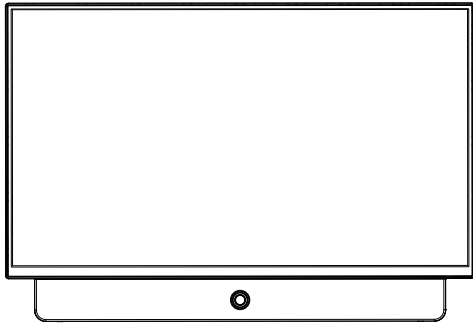

- In order to use this product correctly, please read this user manual carefully before installation and use.
- The illustrations in this user manual are for illustrative purposes only and are subject to change. The actual product shall prevail.
- If the product version is updated, the content of this user manual may differ from your product.

Precautions

1. When cleaning the screen of a portable touchscreen smart TV, always unplug the power cord and turn off the power switch. Do not use liquid cleaning solutions or spray cleaners; wipe the screen with a soft, damp cloth. If the screen is still not clean, please use an LCD screen cleaner.
2. Do not use accessories not recommended by the manufacturer, otherwise it may be dangerous.
3. When unplugging the power adapter from your portable touchscreen smart TV, hold the power plug and then unplug the cord. Do not pull the power cord directly with your hands.
4. If the following situations occur, please unplug the power plug of the power adapter and contact a qualified maintenance personnel for maintenance:
 - a. The power cord or power plug is damaged or worn.
 - b. The portable touchscreen smart TV falls or the casing is damaged.
 - c. When the screen is obviously abnormal, it indicates that it needs to be repaired.
5. Please place it in a well-ventilated environment away from strong light, high temperature or humidity.
6. Please store it at room temperature of 0℃~40℃ and below 5000 meters above sea level. If it exceeds this range, it may affect normal use.

Important Tips




- The gaps and openings on the machine are used for ventilation and heat dissipation. Do not block or cover these gaps and openings.
- When the machine fails, do not disassemble and repair it by yourself. You need to contact the original manufacturer or dealer to solve it.
- Avoid stepping on the power supply or power adapter to avoid dangers such as leakage.If the wire of the power adapter is damaged, do not continue to use it, otherwise it may be dangerous.
- Please unplug the power cord during thunderstorms or when the machine is not used for a long time.
- Do not squeeze the display screen hard during transportation, and do not hit the display screen with sharp tools or hard objects to avoid screen damage.
- Make sure children understand the dangers of climbing this product. This product falling or tipping over can cause serious personal injury. Do not place the product in an unstable or tilted position.
- Be sure to organize the cables connected to the product in time to avoid tripping, pulling or grabbing.

Note: If consumers use a power adapter to charge, they should purchase a power adapter that is Local certified and meets standard requirements

Product Specification

Product Model	H27F
Display	27 inch
Built-in System	Android 15
CPU	Octa-core 2*ARM Cortex A75@2.0GHz
	6*ARM Cortex A55@1.8GHz
Running Memory	6GB/8GB (Optional)
Storage Memory	128GB
Resolution	1920x1080 Pixels
Refresh Rate	60HZ
Screen Ratio	16 : 9
Brigntness	250-300cd/m²
Color Gamut	100%sRGB
Touchscreen	Capacitive Touchscreen (10-Point Touch)
Wireless connection	WIFI 802.11a/b/g/n/ac (2.4G/5G),Bluetooth 5.0
Screen Projection	Wireless Screen Projection
Audio Output	8Ω 10W Bass Stereo Horn*2
Interface	Type-C (Supports OTG) / USB 2.0 / HDMI (Supports up to 1080P)
Battery Type	27000mAh (21700 cells, 3 series 2 parallel, 11.1V, 9000mAh, 99.9Wh)
Power Adapter	AC In 100-240V DC Out 19V 3.42A
Working Temperature & Humidity	0℃-40℃ 0%-65% (Non-condensing)
Storage Temperature & Humidity	-10℃-50℃ 0%-65% (Non-condensing)
Working Air Pressure & Altitude	86kpla-106kpa ≤5000m

 Accessories List


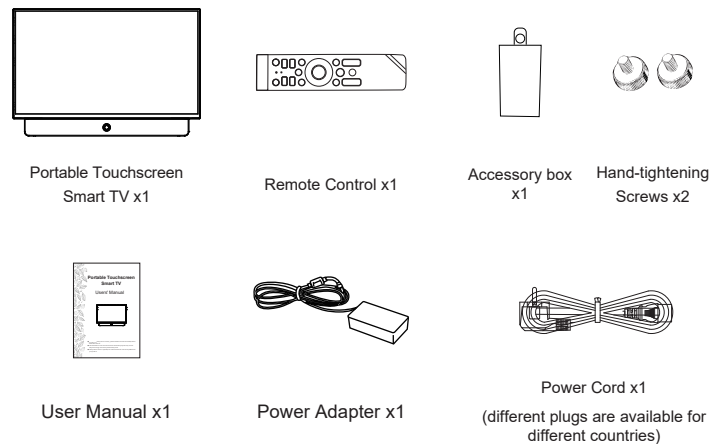


If the above accessories are missing, please contact the product distributor in time.

Note: The specific accessories are subject to the actual configuration. The manufacturer reserves the right to upgrade. Please properly store the packaging materials for future use.

Product Introduction

  Button & Interface Functions

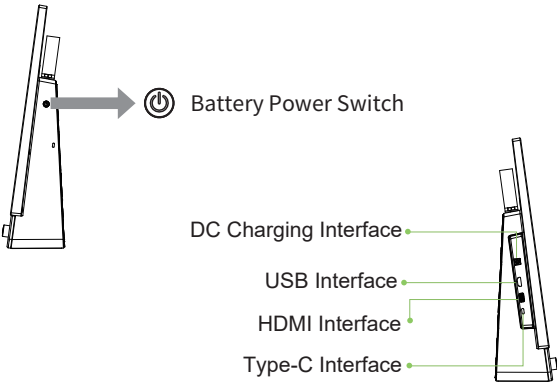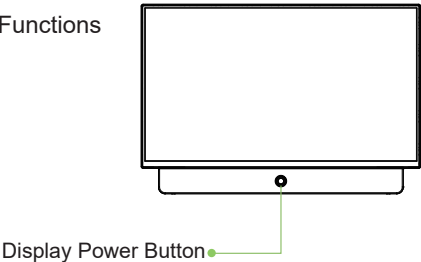

Display power button: Press and hold to power on/off ; Rotate the volume down knob to the left, and rotate it to the right to increase the volume up knob.

 
DC charging port: Connect the power adapter to charge the device.

Interface: HDMI Interface/USB Interface/Type-C Interface.

Note: If the device fails to power on due to low battery, please charge it using the power adapter.


Touch Function

1. Adopt capacitive touch screen (G+G) full lamination.
2. Support 10-point touch.
3. Support writing with fingers, active stylus and other conductive objects.

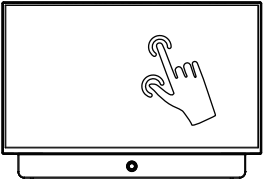

Battery

 This device contains a built-in battery, providing cordless operation. The battery level (as a percentage) and charging status are displayed in the top-right corner of the screen.

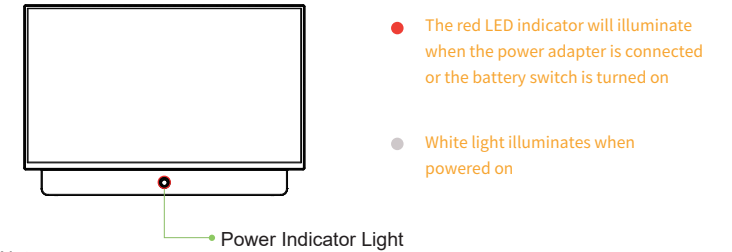

Note:
Power-on: Turn on battery switch first → red power indicator confirms power on → press screen button to start. (Red light turns off automatically after ~3 mins when powered down.)

 
- 1. It takes about 4 hours from a low battery to a full battery, and about 10 hours to charge while using.
- 2. In standby mode, the remaining battery power will gradually decrease in standby mode, the remaining battery power will gradually decrease.
- 3. As the product usage time and frequency increase, the battery life and life will decrease proportionally.
- 4. To extend the battery life, it is recommended to charge the battery after using it for a period of time, rather than keeping the battery fully charged.
- 5. Keeping the battery power at 50% helps to extend the battery life.

The standard usage time in this manual is based on laboratory data, so the actual usage time varies depending on usage.



Users are strictly prohibited from replacing or disassembling the battery pack without permission to avoid the risk of damage to the entire device or safety accidents caused by improper installation or use of unsuitable batteries. If necessary, please contact the manufacturer for processing.

Remote Control Instruction

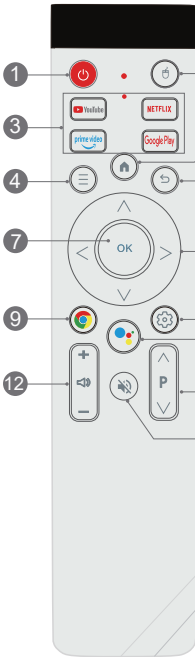

13. Page Up / Down

14. MUTE

Mute or restore the device sound.

1. POWER

Turn the device on or to standby mode

2. Air Mouse

Turn the mouse function on or off.

3. Application Buttons

Access specific applications quickly and directly.

4. MENU

Settings on main page

5. HOME

Access the home screen.

6. BACK

Return to upper-level content, or exit the current screen or operation.

7. OK

Confirm, enter or execute the selected item, or show the list of Quick Button.

8. Navigation Buttons (UP/DOWN/LEFT/RIGHT)

Navigate the menu to select the content you need.

9. Google Chrome

Quickly open Google Chrome.

10. Dashboard

Access the settings dashboard of your Google Display.

11. MIC

Start using the near field voice function.

- Short press MIC button to wake up the Google Assistant.
- Long press MIC button to start receiving your voice command. After your voice command, release MIC button to initiate voice function.

12. Volume Up/Down (+/-)

 
Adjust the sound volume.

NOTE:

- 1. Pair the remote with TV: Long press [OK] + [Red LED blinks 4x → off]
- 2. Cursor Navigation: Tap on [Up] to move cursor; tap again to turn off the cursor
- 3. Voice Control: Long press [Voice Search] to activate voice search



Scan the QR code to watch the remote control usage video.

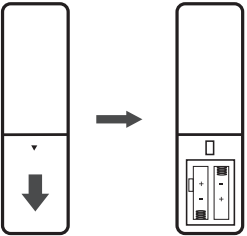

Note: Plug the USB receiver into the device before using it.

Install Remote Control Batteries

Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.

Declaration of Toxic and Hazardous Substances in Electronic Information Products

Part No	Toxic and Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr ⁶⁺)	PBBs (PBB)	Polybrominated Diphenyl ethers (PBDE)
Accessory	X	○	○	○	○	○
Plastic Case	○	○	○	○	○	○
Metal Parts	○	○	○	○	○	○
PCB Board	○	○	○	○	○	○
LCD Screen Display	○	○	○	○	○	○
Lithium Polymer Battery	○	○	○	○	○	○
Touch Screen	○	○	○	○	○	○
Speaker	○	○	○	○	○	○
Package	○	○	○	○	○	○

○ : Indicates that the content of the toxic and hazardous substance in all homogeneous materials of the part is within the limit requirements specified in GB/T26572-2011

X: Indicates that the content of the toxic and hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified in GB/T26572-2011

Notes: 1. This product is produced according to environmental protection design and lead-free production process, and complies with EU RoHS requirements.

2.The toxic and hazardous substances marked with “x” in the table are mainly due to the current technical level development restrictions and no irreplaceable products

*This product contains a rechargeable lithium battery. It is strictly forbidden to disassemble, hit, squeeze or throw it into fire.

3.Circuit board components: including printed circuit boards and their components, electronic components, solder joints, etc.

4.Depending on the product model, the product you purchased may not contain all of the above components.

10 The environmental protection use period of the product is 10 years, and the logo is shown on the left.

Some replaceable parts will have a different environmental use date stamped on it
This environmental protection use period only applies to the product working under normal use.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure